

**PYRAMID**

Studio  
PRO

CE

**PYRAMID**


Owner's Manual



[www.pyramidcaraudio.com](http://www.pyramidcaraudio.com)

**GA810**  
**Guitar Amplifier**

[www.pyramidcaraudio.com](http://www.pyramidcaraudio.com)

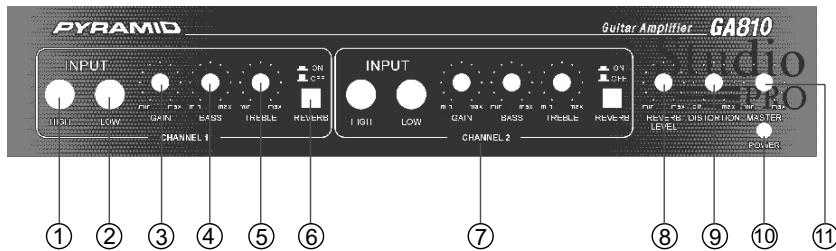

- 1) **High Input Jack:** Connect high level devices to this jack.
- 2) **Low Input Jack:** Connect low level devices to this jack.
- 3) **Gain:** This sets the volume gain level for Channel 1.
- 4) **Bass:** This control adjusts the low frequency level.
- 5) **Treble:** This control adjusts the high frequency level.
- 6) **Reverb:** Switches on/off the reverb effect for Channel 1.
- 7) **Channel 2 Controls:** Same as for Channel 1.
- 8) **Reverb level:** Adjusts overall reverb level for both channels.
- 9) **Distortion:** Adjusts overall distortion effect. Turn to off for no effect.
- 10) **Power LED:** Illuminates when power is switched on.
- 11) **Master:** Adjusts overall volume.



- 1) **Power Switch:** Switches amplifier on/off.
- 2) **Voltage Selector:** AC 110/220 Volt Selectable Switch.
- 3) **Power Cord:** Connect the included power cord here. Plug in to a grounded power outlet only!
- 4) **Phones:** This is your headphone connection. Inserting the headphones disables the internal speaker (great for practicing).

- 5) **Line Out:** Lets you output a line level signal (non-amplified). Internal speaker is not disabled.
- 6) **Return:** Use this jack to bring back processed signal (see 7).
- 7) **Send:** This jack lets you insert an effects processor into the signal path.
- 8) **Reverb Remote:** Connect a footswitch (not included) to remotely switch on/off the internal reverb effect.

### Distorted Sound:

- Check if the amplifier is overdriven. If it is, you will have to turn the level down.
- Check signal source.
- Check distortion effect control. Turn to off for no effect.

### Signal sounds discolored:

- Check and adjust the EQ settings.
- Ensure you are using quality cables.
- Check signal source.

### No Sound:

- Check connections.
- Try a different cable.
- Check levels on amplifier.
- Confirm amplifier is getting a signal.
- Make sure nothing is plugged into the Phones jack.

### Intermittent Output:

- Check connections.
- Try a different cable.

## Specifications

Model	Driver	RMS	Peak	Dimensions	Weight
GA810	12" High Definition Speaker	80W	800W	W=16 1/5" H=18 3/4" D=11"	30.86 lbs

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>