

# PYRAMID

Power Amplifier

You must also include the following items:

- A copy of your sales receipt or other proof of purchase
- A brief letter indicating the problem you are experiencing
- include in your letter your return address, daytime phone number, and R.A. number
- also include a check or money order for \$15.00 for return shipping, handling, and insurance, or provide your Visa/MC number with expiration date.

Our obligation under this warranty is limited to the repair or replacement of the defective unit when it is returned to us prepaid. This warranty will be considered void if the unit was tampered with, improperly serviced, or subject to misuse, neglect, or accidental damage.

All Pyramid products are carefully constructed and thoroughly tested before shipment. Products purchased in the USA are warranted to be free of defects in material and workmanship for two (2) years from the date of purchase. This warranty is limited to the original retail purchase.

Should the product fail due to factory defects in material or workmanship, your unit will be repaired or replaced at the sole discretion of Pyramid.

To obtain warranty service you must first call our Consumer Return Hotline number at (718) 236-6948 to obtain a Return Authorization number. This R.A. # must appear on the outside of your package and on all paperwork relating to your return.

When returning a product to us for warranty service it must be carefully packed and shipped prepaid to:

R.A.#  
Pyramid Service Center  
1600 63rd Street  
Brooklyn, NY 11204

Detailed description of the XPA series amplifiers:  
**XPA-240 Amplifier**  
**XPA-360 Amplifier**  
**XPA-480 Amplifier**



## Limited warranty policy

### Owner's Manual

Your New PYRAMID XPA series P.A. Amplifier gives you the power and versatility you need in a professional sound system.

The amplifier's wide frequency response makes it suitable for amplifying music or vocal program material. It can be used for live bands, office paging systems, public announcements, or a variety of other installations.


## TABLE OF CONTENTS

- 1 Features and Controls
- 2 Installation Guidelines
- 3 Input Connections
- 4 Connecting a CD, DVD or tape player or tuner
- 5 Connecting an equalizer or signal processor
- 6 Stereo or Mono Inputs
- 7 Speaker Connections
- 8 Bridged Mode Operations
- 9 Connecting to Standard AC Power
- 10 Mounting the amplifier
- 11 Turning the amplifier on
- 12 Using the Power LED meter
- 13 About the internal clip circuitry
- 14 Using the Channel 1 and channel2 output level controls
- 15 Specifications
- 16 Limited warranty

Please read this manual thoroughly before you attempt to set up and use the amplifier. It contains a range of installation suggestions as well as instructions to ensure safe usage. Installed properly, you can expect years of trouble-free service from this product.

## FEATURES AND CONTROLS


### FRONT PANEL, XPA-240,XPA-360,XPA-480

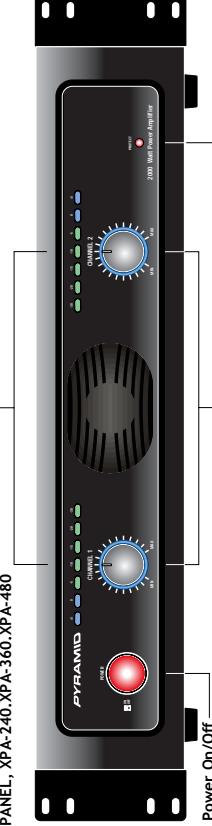

**Channel 1 and Channel 2 Output Level Controls**  
Lets you adjust the sound levels for each channel.

**Fan Cooling**  
Cooling System is automatically activated whenever amplifier is turned on. This forced air cooling system rapidly exhausts interior heat, reducing operating temperature and aiding performance.

### REAR PANEL, XPA-240,XPA-360,XPA-480

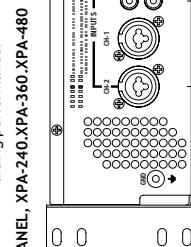

**Input Jacks**  
Let you connect a variety of audio input sources via the balanced (XLR/6.35mm phone jack combinations) or unbalanced (RCA) inputs.


**Stereo/Mono Switch**  
Lets you select conventional stereo operation with a stereo input signal or bridged mono input mode.

**Speaker terminals**  
Permits hookup of a stereo pair of speakers or a bridged speaker via the wire terminals.

## INSTALLATION GUIDELINES

### Connecting the GND (Ground) screw terminal


Connecting a mixer or preamplifier may cause excessive noise or hum in the amplifier output. To prevent this, connect one end of a low-capacitance shielded wire to the amplifier's ground screw (on the rear panel). Then connect the other end of this wire to the ground terminal on the mixer or preamplifier enclosure.

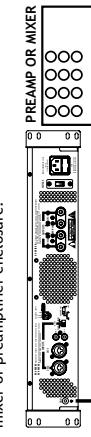




### Input connections

These amplifiers accept a broad range of input sources, including Compact Disc (CD) players; DVD, Cassette, Reel-to-Reel or other tape players; Radio Tuners; Equalizers; Signal Processors.

**Connecting a CD or DVD or tape player or tuner**  
In a normal installation, one would use the RCA JACKS for connecting a CD player, DVD, tape player or tuner.

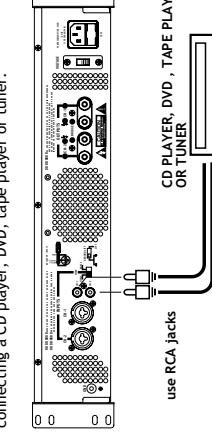

**Connecting an equalizer or external signal processor**  
Connect the processor's OUT to the amplifier's INPUT connectors.

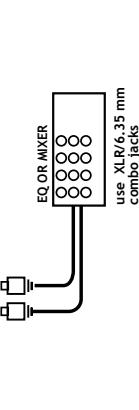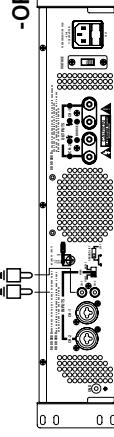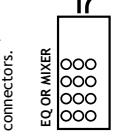

**CAUTION!** Do not use balanced and unbalanced inputs simultaneously!!

### Stereo or Mono Inputs

Your PYRAMID XPA amplifier can be operated in Stereo, Mono or Bridged mode, depending on the input source. If the input signal is mono, slide the Stereo/Mono/Bridged selector switch to MONO and the signal will be routed through both channels. If you wish to run the amplifier in bridged output mode, slide the switch to Bridged.

### Speaker connections

You can connect 4 Ohm, 8 Ohm or 16 Ohm speakers to Channel 1 and/or Channel 2 of the amplifier. If you connect two pairs of speakers, be sure to follow these guidelines:

- Speakers which are connected to the same channel are part of a pair, and must be of the same impedance.
- Speakers connected to different channels are NOT part of a pair, and can be of different impedances.




1. Prepare the speaker wire by removing about 1 inch of insulation from the end of the speaker wire you intend to connect to the amplifier. Then twist the exposed wire to secure all the wire strands.

**NOTE:** Use 16-gauge speaker wire for lengths up to 25 feet; 14-gauge wire for lengths over 25 feet. It is recommended that you use the shortest length of wire possible.

2. Connect the speaker wires to the speaker's positive and negative terminals.
3. Connect the speaker wires to the amplifier's left and right speaker terminals according to the terminal color polarity.

### STEREO OPERATION

#### SWITCH IN "STEREO" POSITION

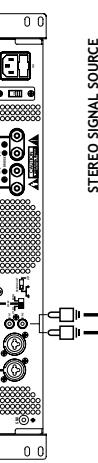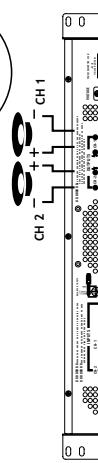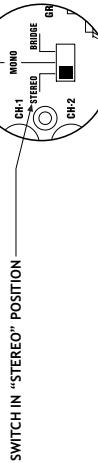

**CAUTION!** Do not use balanced and unbalanced inputs simultaneously!!

Amplifier Specifications	XPA-240	XPA-360	XPA-480
Input Impedance, balanced (unbalanced)	20 k-Ohms (10 k-Ohms)	20 k-Ohms (10 k-Ohms)	20 k-Ohms (10 k-Ohms)
Continuous Output Power			
Stereo Mode	70W x 2 100W x 2 110W x 2 130W x 2 800W x 2	120W x 2 160W x 2 170W x 2 200W x 2 1200W x 2	170W x 2 220W x 2 230W x 2 260W x 2 1600W x 2
Bridged Mode	200W x 1 200W x 1 2400W x 1	320W x 1 320W x 1 3600W x 1	440W x 1 440W x 1 4800W x 1
THD at rated output power	0.1%	0.1%	0.1%
Frequency Response +/- 3 dB	10 Hz to 50 kHz	10 Hz to 50 kHz	10 Hz to 50 kHz
Input Sensitivity for rated output power	1.0V	1.0V	1.0V
Signal-to-Noise Ratio A-Weighted	100 dB	100 dB	100 dB
Speaker Impedance			
Stereo	4.16 Ohms 8.16 Ohms	4.16 Ohms 8.16 Ohms	4.16 Ohms 8.16 Ohms
Bridged			
Power Requirement			
Dimensions H x W x D, inches (mm)	3 15/32 x 19 x 10 11/16 (88 x 482 x 271)	3 15/32 x 19 x 10 11/16 (88 x 482 x 271)	3 15/32 x 19 x 10 11/16 (88 x 482 x 271)
Weight, lbs (kg)	16.7 lbs (7.6)	18.5 lbs (8.4)	20 lbs (9.1)

**MONO OPERATION**  
**SWITCH IN "MONO" POSITION**

Connecting to standard AC power  
After making all other connections, set the POWER switch to OFF position. Then connect the power cord to a standard AC outlet.

**Mounting the amplifier**  
This amplifier is designed to accept standard rack mounting installations. Two slots on each end of the front panel make it suitable for such an installation.

Tightly secure four mounting screws (not supplied) through these four slots and into your standard electronics equipment rack.

**Turning the amplifier on**  
1. Turn on the audio input source equipment which is connected to the amplifier INPUT JACKS.

2. Set the amplifier's Channel 1 and Channel 2 output level gain controls to the minimum level settings.

3. Push in the power switch to turn the amplifier on.


**Using the power LED meters**  
The meter pointer position indicates the amplifier output power. For ease of reading in dark environments, the meter is illuminated.

**Using the Channel 1 and Channel 2 Output Level controls**  
Rotate output level gain clockwise to increase, or counter-clockwise to decrease the output power. To get the best performance with the least sound distortion, always adjust the output level gain so the meter's pointer does not continuously exceed the extreme right of the meter's scale.


**CAUTION! It is possible to overdrive the amplifier by setting output level gain too high, which may cause damage or failure.**

**About the internal protect circuitry**  
Special clip circuitry incorporated into your PYRAMID XPA amplifier's design protects the amplifier and speaker system from being damaged from overdriving power.

Under normal conditions, the amplifier's clip indicator will flicker as the output power momentarily exceeds the level as set by the output level gain selector.  
However, under excessive output conditions, the protect indicator lights remain on continuously, alerting you that the special clip circuitry has become active. When this occurs, you should simply reduce the output power level by rotating the Master Volume control counterclockwise.

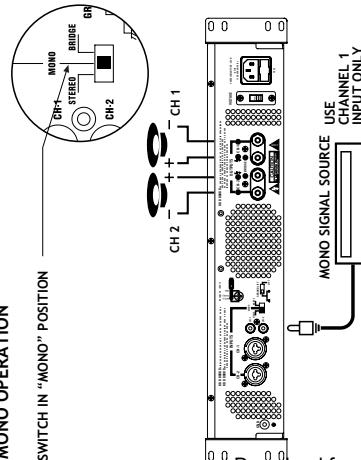

Download from [Www.Somanuals.com](http://www.somanuals.com). All Manuals Search And Download.

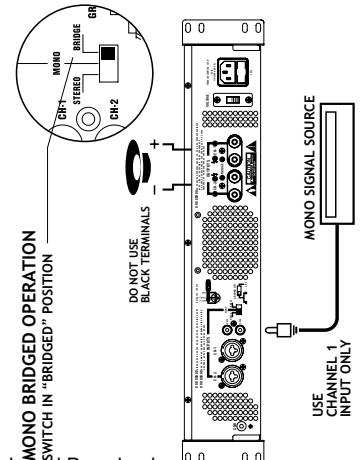

**CAUTION! Do not use balanced and unbalanced inputs simultaneously!**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>