



# Doorbell



Model 74001

1 User / Ages 4 and up

## INSTRUCTION MANUAL


P/N 82380810 Rev.C

Hi! It's me, Barbie®! Now I can give cool messages to your friends and family when you are out. Doorbell has three awesome doorbell sounds that you can choose from. Barbie™ Doorbell also has an alarm; if someone tries to open the door while you are out, I will tell them "Nobody's home". Totally cool!

## FEATURES

**DOORBELL BUTTON** - Press this button to ring the doorbell.

**SECURE** - Use this slide switch to turn the "secure mode" on or off.

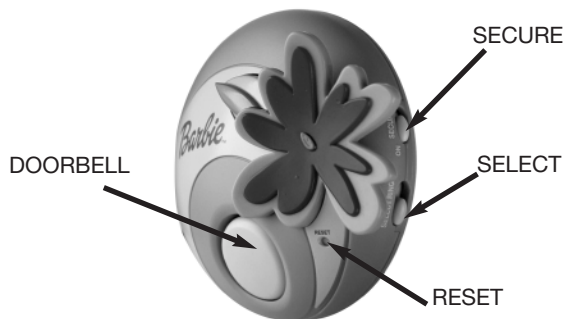

E 1

**SELECT** - Use this slide switch to select one of three doorbell sounds.

**RESET** - Use this button to reset the Doorbell. Insert a dull, pointed object (like the end of a paper clip) into the reset button hole.

**NOTE CLIP** - Insert a piece of paper to customise your room or leave a note.



## SETTING UP THE DOORBELL

Remove the paper backing from the special tape on the back of the doorbell, allowing the adhesive to be exposed. Next, firmly press the doorbell to the door.

**DOORBELL SOUNDS** - There are three doorbell sounds to choose from. To set the doorbell sound, move the SELECT slide switch to position 1, 2, or 3. You can listen to the doorbell sound by pressing the doorbell button.

**SECURE MODE** - This sets the alarm when you leave your room. Doorbell can be put into "secure mode" by moving the SECURE button to the "on" position. When the secure mode is on and someone tries to open the door, there will be a message from Barbie™. Slide the SECURE button to the "off" position to turn off the secure mode.

**SLEEP MODE** - Doorbell will go into sleep mode after 30 seconds of inactivity. Press the doorbell button to wake up the Doorbell.

## BATTERY INSTALLATION

**ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.**

- Doorbell is powered by two (2) AAA (LR03) batteries.
- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert two (2) AAA (LR03) batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

## CAUTION:

- As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the game and battery manufacturer's instructions.

- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.

## MAINTENANCE:

- Handle this product carefully.
- Store this product away from dusty or dirty areas.
- Keep this product away from moisture or extreme temperature.
- Do not disassemble this product. If a problem occurs, press the Reset button or remove and replace the batteries to reset the computer or try new batteries. If problems persist, consult your warranty information at the end of this manual for replacement instructions.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

**Please retain this for future reference.**

## PRODUCT WARRANTY

**(This product warranty is valid in the United Kingdom only)**

All products in the **RADICA**® range are fully guaranteed for a period of 6 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 6 months, please telephone the UK Technical Support team: **Tel. 0871 222 8278. Calls are charged at 10p per minute and will show up on your standard telephone bill. Helpline hours are 2pm-11pm, Monday to Friday.**

**IMPORTANT:** Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

**YOUR STATUTORY RIGHTS ARE NOT EFFECTED.**



Distributed by:  
**RADICA UK Ltd.**  
The Old Stables, Munns Farm,  
Cole Green, Hertfordshire,  
SG14 2NL, England

[www.RadicaUK.com](http://www.RadicaUK.com)

**RADICA:**®  
© 2002 RADICA GAMES LTD.  
PRODUCT SHAPE™  
ALL RIGHTS RESERVED

BARBIE and associated trademarks and trade dress are owned by, and used under license from, Mattel, Inc. 2003 Mattel, Inc. All Rights Reserved.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>