

SOUND button - Press to turn the sound on/off.

ON/DEAL/HIT button

- Press to turn on the game (The game turns itself off after sitting idle for one minute.)
- **Deal button** deals cards. 10 points are automatically bet for you.
- Press **Deal button** again for the dealer to give you another card (HIT). Continue pressing until you have the highest hand possible without going over 21.

The **DOUBLE** option is available if your first 2 cards total either 10 or 11 points. This option lets you double your bet and be dealt one additional card.

Press **STAND button** to keep the hand you currently have showing. The dealer then deals the remaining cards needed to complete the hand. If your hand is higher than the dealer's (and less than 21), you win!

The **DEALER / PLAYER button** switches between the player's hand and the dealer's hand.

Note: If the player's point total gets down to zero, 200 points is automatically added to that total. Maximum Score: 9,999.

BATTERY INSTALLATION

This game is powered by one "AA" (LR6) battery.

1. Remove cover, press down and slide as shown.
2. Find correct battery polarity (+/-) and diagrams inside compartment.
3. Insert one AA battery (we recommend alkaline) as indicated inside the battery compartment.
4. Replace the battery compartment cover.



ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

Pocket **Blackjack21**



MODEL 75006

For 1 player / Ages 8 and up

INSTRUCTION MANUAL

P/N 82389820 Rev.B

Test your Blackjack skills. See if you can beat the dealer without going over 21 to win big!

Remember:

Aces = 1 or 11 points

Face Cards (K, Q, J) = 10 points

Number Cards = The face amount

The type of winning hands and points awarded are listed on the back of game.

TO PLAY



CAUTION

- As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the game and battery manufacturer's instructions.

- Do not dispose of batteries in fire.

- Batteries might leak if improperly installed, or exploded if recharged, disassembled or heated.

MAINTENANCE

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or extreme temperature.
- Do not disassemble this game. If a problem occurs, remove and replace the batteries to reset the game, or try new batteries. If problems persist, consult your warranty information located at the end of this instruction manual.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- The supply terminals are not to be short circuited.
- Insert batteries with the correct polarity.

Please retain this for future reference.

RECYCLING - EUROPE

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, through re-using or recycling such equipment.

The crossed out wheelie-bin symbol on this product is to remind you that Waste Electrical and Electronic products should not be disposed of with household waste. If you are unable to re-use or recycle your product it should be disposed of at a civic amenity site.

While Radica toys comply with all relevant safety standards, we are obliged to tell you that some of the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

6 MONTH PRODUCT WARRANTY

(This product warranty is valid in the United Kingdom only)

All products in the **RADICA®** range are fully guaranteed for a period of 6 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 6 months, please telephone the Technical Support team: **Tel. 0871 222 8278. Calls are charged at 10p per minute and will show up on your standard telephone bill. Helpline hours are 2pm-11pm, Monday to Friday.**

IMPORTANT: Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

YOUR STATUTORY RIGHTS ARE NOT EFFECTED.

Distributed in the U.K. by:
RADICA U.K. Ltd.
The Old Stables, Munns Farm,
Cole Green, Hertfordshire,
SG14 2NL, England



RADICA:®

POCKET BLACKJACK 21 IS A REGISTERED
TRADEMARK OF RADICA GAMES LTD.
©1997, 2004 RADICA GAMES LTD.
PRODUCT SHAPE™
ALL RIGHTS RESERVED

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>