



# Tic Tac Toe




MODEL 75011

For 1 to 2 players / Ages 8 and up

## INSTRUCTION MANUAL

P/N 82388900 Rev.A

Our Pocket Tic Tac Toe gives you classic tic tac toe game play with a challenging twist. Choose from Standard Tic Tac Toe, Triple Tic Tac Toe or Random Block. Each game offers increasingly difficult levels of game play as you attempt to beat either the computer or a friend.

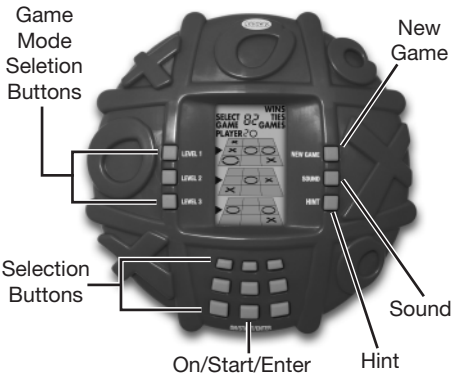

### BUTTON FUNCTIONS

**On•Start•Enter** — Press this button to wake the game or enter a game selection.

**New Game** — Press this button to change the number of players and the game mode.

E

**Sound** — Press this button to turn the sound on or off.

**Hint** — Press this button to get a hint of the next move you should make.

**1,2,3 (Game Mode Selection Buttons)** — Press these buttons to choose your game mode or grid level.

**Selection** — Press any of these nine (9) buttons to choose the location of your mark (X or O).

### GETTING STARTED

Press the **On•Start•Enter** button to wake the game. (**NOTE:** The unit goes to sleep after sitting idle for 3 minutes).

Press **New Game** to change the number of players and the game mode. Press 1 to play against the computer, Press 2 to play against a friend.

Next, press 1,2, or 3 to select the game mode. (**NOTE:** If you are playing against the computer, you are the O's and the computer is the X's).

Select the square to place a game piece by pressing the number button (1,2, or 3), which corresponds to the level of the space you want.

Next, press one of the nine (9) **Selection** buttons, which corresponds to that space.

### GAME MODES

There are three (3) challenging game modes; Standard Tic Tac Toe, Triple Tic Tac Toe and Random Block.

#### Standard Tic Tac Toe (Button 1)

Play on the upper level only, this is the electronic version of the traditional game.

#### Triple Tic Tac Toe (Button 2)

Using all three levels, this version is much more challenging as you try to anticipate all of your opponents possible moves. The center space is always blocked at the beginning of each game, making the game even more challenging.

#### Random Block (Button 3)

This version is similar to Triple Tic Tac Toe, except that various spaces are blocked. The blocks randomly appear in different spaces at the beginning of the game.

### STARTING OVER

While "GAME OVER" is flashing, press **On•Start•Enter** to start another game. This will start a new game while keeping your scoring history in memory. (**NOTE:** at the end of each game you will see your scoring history flash. First Wins then Ties then Games).

## SLEEP MODE

Pocket Tic Tac Toe will go to sleep after three (3) minutes of non-activity. To wake the game, press the **On•Start•Enter** button.

## RESETTING YOUR GAME

To reset your game you will need to remove and reinstall the battery.

## BATTERY INSTALLATION

This game is powered by two (2) AAA (LR03) size batteries.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert two (2) AAA (LR03) size batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

## ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERY.

### CAUTION

- **As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.**
- **Be sure you insert the battery correctly and always follow the game and battery manufacturer's instructions.**
- **Do not dispose of batteries in fire.**
- **Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.**

## MAINTENANCE

- Handle this device carefully.
- Store this device away from dusty or dirty areas.
- Keep this device away from moisture or extreme temperature.
- Do not disassemble this device. If a problem occurs, press the Reset button, or remove and replace the batteries to reset the device, or try new batteries. If problems persist, consult the warranty information located at the end of this instruction manual.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.

- Remove any exhausted batteries from the device.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

**Please retain this for future reference.**

## 90-DAY LIMITED WARRANTY

**(This product warranty is valid in the United States and Canada only)**

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

**IMPORTANT:** Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

Distributed in the U.S. by:  
**RADICA U.S. Ltd.**  
13628-A Beta Road  
Dallas, TX 75244-4510



**RADICA:®**  
© 2004 RADICA GAMES LTD.  
PRODUCT SHAPE™  
ALL RIGHTS RESERVED

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>