





Model 75059, 75060, 75061, 75079 and 75080 For 1 player / Ages 4 and up INSTRUCTION MANUAL Rev.A

THANK YOU FOR BRINGING ME HOME!!!

I am a soft and huggable interactive homeless dog that will provide you with a magical and rewarding experience. I have my own special puppy look and personality. Not only do I make a variety of puppy sounds, I also move my head from side to side. Get your Street Muttz dog tag and save a REAL dog. See enclosed sheet for details.

CONTENTS:

- Street Muttz Puppy
- Brush
- Adoption Papers
- 3 "AA" (LR6) Alkaline batteries

LETS PLAY:

To wake me up from sleep mode or to turn me on, press the button on my ear. I will move my head from side to side and be ready to play immediately. If you squeeze my muzzle/nose I will make playful growling and barking noises. When I sense you are near I move my head and beg for you to play with me. Petting me will make me so happy, I will move my head and make lots of puppy sounds. I will automatically go to sleep and turn off if I am not played with for more than 15 minutes.

NOTE: To reset me, use the ON /OFF switch on the battery compartment.

Whimpering

E 1

- Happy Panting
- Soft Whines
- Snoring
- Playful Growling
- Playful Barking
- Waking Up/Startling Noise





Press Ear to turn On. Press and hold the dog's ear for 2 seconds to make him go to sleep.


When you squeeze my muzzle/nose I will make playful barking and growling noises.

IMPORTANT GROOMING TIPS

- If I get dirty, use a damp sponge with soap and water to wipe dirt off my fur. Allow me to air dry.
- Do not submerge me in water. Do not put me in the washing machine or dryer.
- Do not use detergent or stain removers on my fur.
- If I get wet, remove the batteries, remove excess water from my fur with a towel and allow me to air dry.
- High temperatures will damage me. Do not leave me in hot places like a car.
- Be gentle. Don't throw me, kick me, or poke me with sharp objects.
- Do not spill your food and drinks on me.

BATTERY REPLACEMENT:

Batteries included are for demonstration purposes only. For longer battery life, use only alkaline batteries. Street Muttz require 3 "AA" (LR6) alkaline batteries. To replace use a Phillips cross headed screwdriver to open battery door. Remove and set aside. Insert the 3 "AA" (LR6) alkaline batteries as shown. Replace battery door and screw closed.

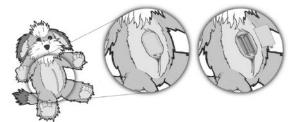

Download from Www.Somanuals.com. All Manuals Search And Download.

BATTERY SAFETY INFORMATION:

CAUTION: Adult supervision is recommended when installing and changing the batteries.

- Use only the batteries that are specified for this product. Use of any other battery may cause injury and will void the warranty.
- Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.
- Batteries might leak or explode if improperly installed, disassembled or heated.
- Do not dispose of batteries in fire.
- Dispose of old batteries in accordance with your local laws.

SAVE AND RESCUE ALL OF MY FRIENDS!!!



MAINTENANCE

- Handle this device carefully.
- Store this device away from dusty or dirty areas.
- · Keep this device away from moisture or extreme temperature.
- Do not disassemble this device. If a problem occurs, switch off and then switch on, or remove and replace the batteries to reset the device, or try new batteries. If problems persist, consult the warranty information located at the end of this instruction manual.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the device.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

Please retain this for future reference.

6 MONTH PRODUCT WARRANTY

(This product warranty is valid in the United Kingdom only)

All products in the **RADICA®** range are fully guaranteed for a period of 6 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 6 months, please telephone the Technical Support team: **Tel. 0871 222 8278. Calls are charged at 10p per minute and will show up on your standard telephone bill. Helpline hours are 2pm-11pm, Monday to Friday.**

IMPORTANT: Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

YOUR STATUTORY RIGHTS ARE NOT EFFECTED.

Distributed by: **RADICA UK Ltd.** The Old Stables, Munns Farm, Cole Green, Hertfordshire, SG14 2NL, England





RADICA: ® STREET MUTTZ IS A TRADEMARK OF RADICA GAMES LTD. © 2005 RADICA GAMES LTD. PRODUCT SHAPE™ ALL RIGHTS RESERVED Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com