



I7003

For 1 player / Ages 8 and up

INSTRUCTION MANUAL

P/N 823A5300 Rev.B

For 15 years, Radica has consistently produced the best portable electronic Slot games. We consistently strive to deliver the most realistic Vegas-style Slots through superior programming, graphics, lighted screen and game features. Multiple games and betting options add to the excitement. So, spin the reels and experience the instant action of FlipTop Slots!

BUTTONS AND FEATURES:



ON/SPIN/BET - Turns the slot machine ON. By pressing and holding this button, the number of lines to BET can be selected. The maximum is five lines. Once you have completed your betting, press this button to start the reels spinning.

SOUND - Turns the sound on and off


NUDGE - Press to move the last (right) column up a line. This function only works with Skill Slots.

PLAYER - Press to toggle between 1 and 2 player mode.

GAME - Press to select the type of game, Casino Slot or Skill Slot. If Skill Slot is selected, a "nudge" icon is displayed.

MAX BET - Press to automatically bet on all five lines.

E

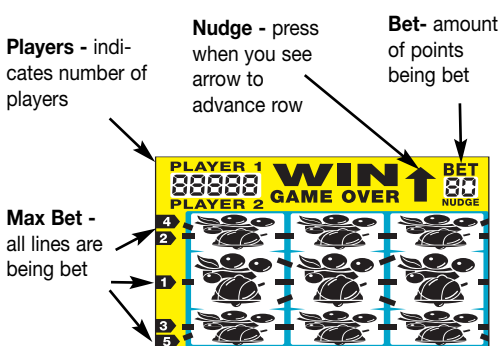

LIGHT - Slide the button to the left to turn the light on and the right to turn it off. Remember to turn off the light after playing to save battery.

PROTECTIVE LID - Press the bottom button and the FlipTop lid will release and open. Once in the open position, flip or rotate the lid and secure it into the back of the unit. To close the lid, press the bottom button and the FlipTop lid will release and open. Rotate the lid in the forward position and close or secure the lid by latching it into the front of the unit.

RESET - When a blunt point is inserted, this button RESETS the game to its original settings

To Play

Casino Slots

Press the **ON/SPIN/BET** button to play slots. The on-screen reel will spin and six symbols will drop into place on the screen. If you have a winning combination, the row will flash.

Betting / Scoring

Points are immediately subtracted when betting. Your score is automatically calculated after each hand. The **MAX BET** button can be pressed to automatically bet on five lines. The reels will spin after the bets are placed. Press and hold **ON/SPIN/BET** to select the number of lines to bet.

Note: If the player's point total gets down to zero, 400 points is automatically added to that total. In 2-player mode, 200 points is automatically added to each player. Maximum Score: 99,999

Skill Slots

Similar to Casino Slots, you can use your points to double your chances of winning when you bet all five lines (**MAX BET**). You can also use the **NUDGE** button to increase your chances! Press the nudge button to advance the last row up after the reel has spun (the up arrow will appear).

Note: The reel can be advanced up to three lines.

Sleep Mode: The unit will go into sleep mode if it is not active for one minute.

BATTERY INSTALLATION

This game is powered by two (2) AAA (LR03) batteries.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert two (2) AAA (LR03) batteries. We recommend alkaline as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION

- As with all small batteries, the batteries used with this device should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.
- Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.
- In an environment with radio frequency interference, the product may malfunction and require user to reset the product.

MAINTENANCE:

- Handle this device carefully.
- Store this device away from dusty or dirty areas.
- Keep this device away from moisture or extreme temperature.
- Do not disassemble this device. If a problem occurs, press the Reset button, or remove and replace the batteries to reset the device, or try new batteries. If problems persist, consult the warranty information located at the end of this instruction manual.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the device.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

Please retain this for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user

is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

RECYCLING - EUROPE

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, through re-using or recycling such equipment.

The crossed out wheellie-bin symbol on this product is to remind you that Waste Electrical and Electronic products should not be disposed of with household waste. If you are unable to re-use or recycle your product it should be disposed of at a civic amenity site.

While Radica toys comply with all relevant safety standards, we are obliged to tell you that some of the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

90-DAY LIMITED WARRANTY (This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to:
Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA. Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

IMPORTANT: Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

Distributed by:
RADICA USA Ltd.
13628-A Beta Road
Dallas, TX 75244-4510



RADICA:®
FLIPTOP SLOTS IS A TRADEMARK OF RADICA GAMES LTD.
© 2006 RADICA GAMES LTD.
PRODUCT SHAPE™
ALL RIGHTS RESERVED

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>