

Car Charger for iPod®

12-493

Gigaware™

Thank you for purchasing the Car Charger for iPod from **RadioShack**. You can power and charge your iPod and other standard USB-chargeable device simultaneously. Please read this user's guide before installing, setting up and using your new product.



Plug into the car's power socket.

Plug into any dockable iPod.

The LED Indicator ring lights when the car charger is plugged into the cigarette lighter socket.

Plug one end of a USB cable (not supplied) into the USB port on the car charger, and its other end to the port on the USB-chargeable device.

Replacing the Fuse

If the fuse has blown, replace it with a 250V/2A tube-type fuse (not supplied).

Unscrew charger cap. Replace fuse, then replace the charger cap.



Caution:

- Do not use a fuse with a different rating. Doing so can damage your car charger.
- Watch out for loose parts (charger cap and charger tip) when replacing the fuse.

What's Included

Car Charger
User's Guide

Fuse (Installed)

Important Notes

- Your Car Charger is designed to fit standard car lighter sockets and may fit tightly in some vehicles. If the fit is tight, do not pull the power adapter out with excessive force. Twist it slightly, then remove.
- Do not expose charger to moisture.
- Never operate the charger if it has been damaged in any way. Do not disassemble it.

Specifications

Input 12 - 24VDC, 1A
Output 1 and Output 2 5VDC/500mA

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Limited Warranty

This product is warranted by **RadioShack** against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from **RadioShack** company-owned stores and authorized **RadioShack** franchisees and dealers. EXCEPT AS PROVIDED HEREIN, **RadioShack** MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, **RadioShack** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RadioShack** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store. **RadioShack** will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102

12/99

www.radioshack.com



Protect the environment by recycling used electronics. Go to www.ecyclingcentral.com to find a recycling location near you.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod is a trademark of Apple, Inc., registered in the U.S. and other countries.

©2008. **RadioShack** Corporation. All rights reserved. Gigaware is a trademark and **RadioShack** is a registered trademark used by **RadioShack** Corporation.

12-493

08A08

Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>