

RadioShack
Baby Mantis
 60-2800

Introduction


Thank you for purchasing the RadioShack RC Mantis. Drive your mantis forward and backward - you'll see its tentacles light, its eyes move, its head turn side to side, and all six legs hit the ground running! Your mantis comes in two frequencies, 27 MHz and 49 MHz, so you can play with your friends. Check your box to see what frequency you have.

Installing Batteries

Your mantis requires one 9-volt battery to power the transmitter, and four AA batteries to power the receiver. Turn off the receiver before installing or replacing batteries.

In the Transmitter

In the Receiver

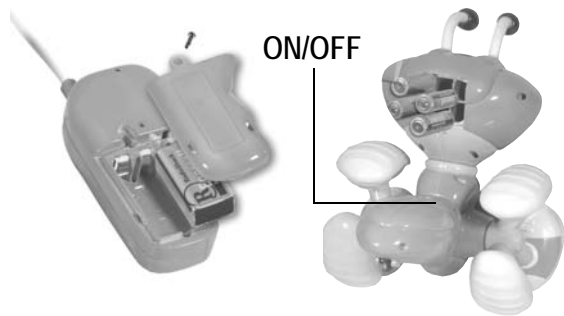

- BATTERY NOTES**
- Dispose of old batteries promptly and properly.
 - Do not burn or bury batteries.
 - Use only fresh batteries of the required size and recommended type.
 - Do not mix old and new batteries, different types of batteries, or batteries of different capacities.
 - If you do not plan to use the mantis for a week or more, remove the batteries. Batteries can leak chemicals that can damage electronic parts.


Transmitter

Receiver

Press to drive forward.

Press to drive (circle) backward.

Release either button to stop the mantis.

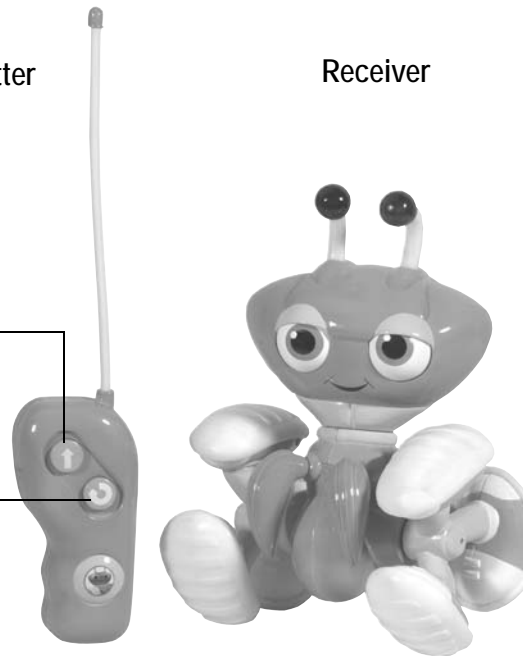

FCC Information

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

| | |
|--------------------|--|
| Product: | Baby Mantis |
| Model: | 60-2800 |
| Responsible Party: | RadioShack 100 Throckmorton Fort Worth, TX 76102 |
| Phone: | 817-415-3200 |



The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult your local RadioShack store or an experienced radio/TV technician for help.
 - If you cannot eliminate the interference, the FCC requires that you stop using your mantis.
 - Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

Helpful Hints

- Using your mantis for long periods of time can generate high heat levels, resulting in motor wear and tear. Let the mantis cool for about 10 minutes.
- If the mantis does not respond to the transmitter (and fresh batteries are installed), move the transmitter closer to the mantis and try again.
- If someone is using a CB nearby, it may cause interference. Try using your mantis in a different location outside the area of interference.
- Your mantis will not operate properly near devices with transmitters that use the same frequency (27/49 MHz).

Limited 90-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2004 RadioShack Corporation.
 All Rights Reserved.

RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

60-2800
 Printed in China
 04A04

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>