



60-2808 Shape Sort N Spin

Your Shape Sort N Spin entertains, while teaching your child to count and recognize shapes. Simply insert the shape blocks into the matching openings on the sorter. As you insert the blocks, you can select to count the number of blocks inserted, to name the shape, or to hear music play.

Press down to make the sorter spin like a carousel.

Insert shape blocks into the sorter's matching openings.

Remove blocks here.




what's included

sorter

5 blocks (triangle, square, circle, star, moon)

installing batteries

1. Use a screwdriver to loosen the screw and remove the battery compartment cover.
2. Insert three AAA batteries (not supplied).
3. Replace the cover and secure it with the screw.

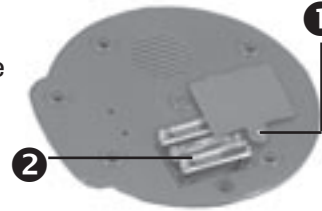

- Dispose of batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, or different types of batteries.
- If you do not plan to use the toy for several days, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.
- Only adults should replace the batteries.

Thank you for purchasing your Shape Sort N Spin from RadioShack. Please read this user's guide before installing, setting up, and using your product.

select a game to play

If no buttons are pressed for about 30 seconds, the sorter automatically powers off. Insert a shape to start playing again.

Counting

1. Slide **123/▼●■/♪♪♪** to **123**.
2. Insert the shapes into the sorter's matching openings. The LED under the number of shapes inserted lights.

Shapes

1. Slide **123/▼●■/♪♪♪** to **▼●■**.
2. Insert the shapes into the sorter's matching openings. The shape's name is announced.

Melody

1. Slide **123/▼●■/♪♪♪** to **♪♪♪**.
2. Insert the shapes into the sorter's matching openings. A song plays when a shape is inserted.

To remove shapes when you are finished, press the sorter's top down. The shapes spin inside and come out through the large opening. You may need to tilt the sorter to remove the shapes.

limited go-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations
200 Taylor Street, 6th Floor, Fort Worth, TX 76102
04/04

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>