

Radio Shack

Cat. No. 23-249



Battery Charger

You can use your Radio Shack Battery Charger to charge your Radio Shack CB walkie-talkie if it uses 10 AA rechargeable nickel-cadmium batteries or to charge your Radio Shack remote-controlled car if it uses 8 AA rechargeable nickel-cadmium batteries.

3. Plug the battery charger into a standard AC outlet.

CHARGING

Warning: Never try to recharge non-rechargeable batteries. If you do, they become very hot and could explode.

Follow these steps to charge nickel-cadmium batteries in your walkie-talkie or remote-controlled car.

 
1. If the walkie-talkie or the remote-controlled car is on, turn it off.
2. Connect the battery charger's barrel plug to your walkie-talkie's or your car's charging jack.

4. Charge the batteries for 14-18 hours.

Caution: Do not overcharge nickel-cadmium batteries.

© 1995 Tandy Corporation.
All Rights Reserved.

Radio Shack is a registered trademark used by Tandy Corporation.





RADIO SHACK LIMITED WARRANTY

This product is warranted against defects for 90 days from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your Radio Shack sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell

 
9/94

 
 
 


RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

2A5

Printed in Hong Kong









RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

2A5

    Printed in Hong Kong








RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

2A5

   Printed in Hong Kong



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>