 
 


Cat. No. 43-932  
**OWNER'S MANUAL**





Please read before using this equipment.

**CID-932**

    **Talking Caller ID**



**RadioShack®**



## FEATURES

---

Your RadioShack CID-932 Voice Caller ID uses the latest caller identification technology. The CID-932 announces the caller's telephone number only and displays all available information.

The CID-932 stores and displays up to 50 single (number only) or multiple (name and number) Caller ID records and lets you review them at any time.

It also has these features:

**Audio Announcement of Incoming Calls** — announces the telephone number of the calling party twice after the first ring.

**Voice VIP Messages** — lets you record a message to go with each of up to 15 VIP phone numbers, then announces the corresponding message whenever you receive a call from one of those numbers.

**Volume Control** — lets you adjust the volume of the CID-932's announcements.

**New Call Indicator** — flashes when you receive a new call.



**Extra Large 3-Line Liquid Crystal Display** — makes it easy to read the Caller ID information.

© 2000 Tandy Corporation.  
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

This CID-932 has been tested and found to comply with all applicable UL and FCC standards.

**WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

---

---

### Important Information:

- To use this Caller ID, you must be in an area where Caller ID service is available, and you must subscribe to the service.
- Where Caller ID is offered, one or more of the following options are generally available:
  - caller's number only
  - caller's name only
  - caller's name and number

Your Caller ID displays the caller's name only if that option is available in your area.

The actual number of Caller ID records your Caller ID will store depends on the amount of Caller ID information sent by the phone company.

### FCC INFORMATION

We have designed your CID-932 to conform to federal regulations, and you can connect it to most telephone lines. However, each device, such as a telephone or answering machine that you connect to the telephone line draws power from the telephone line. We refer to this power draw as the device's ringer equivalence number, or REN. The REN is on the bottom of your device.

---

---

If you use more than one phone or other device on the line, add up all of the RENs. If the total is more than five (or three in rural areas), your telephones might not ring. If ringer operation is impaired, remove a device from the line.

Your CID-932 complies with Part 68 of FCC Rules. You must, upon request, provide the FCC registration number and the REN to your telephone company. Both numbers are located on the bottom of your CID-932.

**Note:** You must not connect your CID-932 to:

- coin-operated systems
- party-line systems
- most electronic key telephone systems

Your telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

This equipment complies with the limits for a Class B digital device as specified in Part 15 of FCC Rules. These limits provide reasonable protection against radio and TV interference in a residential area.

However, your equipment might cause TV or radio interference even when it is operating properly. To eliminate interference, you can try one or more of the following corrective measures:

- reorient or relocate the receiving antenna
- increase the distance between the equipment and the radio or TV
- use outlets on different electrical circuits for the equipment and the radio or TV

Consult your local Radio Shack store if the problem still exists.

## IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

- 
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
  6. Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
  7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
  8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
  9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
  10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
  11. Do not use the telephone to report a gas leak in the vicinity of the leak.

- 
12. To reduce the risk of electric shock, do not disassemble this product; take it to a qualified serviceman when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the appliance is subsequently used.
  13. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
    - a. When the power supply cord or plug is damaged or frayed.
    - b. If liquid has been spilled into the product.
    - c. If the product has been exposed to rain or water.
    - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
    - e. If the product has been dropped or the cabinet has been damaged.
    - f. If the product exhibits a distinct change in performance.
  14. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.



## CONTENTS

---

---

<b>Preparation .....</b>	<b>10</b>
Installing a Battery .....	10
Mounting the CID-932 .....	11
Attaching the Bracket .....	11
Mounting on a Wall .....	12
Connecting the CID-932 .....	13
Setting the Time and Date .....	15
<b>Operation .....</b>	<b>16</b>
Receiving a Call .....	16
Adjusting the Volume .....	16
Turning the Speaker On or Off .....	16
Caller ID Messages .....	17
Reviewing Caller ID Records .....	18
With Voice Announcements .....	18
Without Voice Announcements .....	18
Deleting Caller ID Records .....	19
VIP Call List .....	19
Recording Voice VIP Messages .....	19
Reviewing and Re-recording Voice VIP Messages .....	20
Deleting Voice VIP Messages .....	21
Care .....	22
The FCC Wants You to Know .....	23
Lightning .....	23

## PREPARATION

 
### INSTALLING A BATTERY

You need one 9V battery (not supplied) to provide backup power for the CID-932's memory in the event of a power failure. For the best performance, we recommend an alkaline battery, available at your local RadioShack store.

#### Cautions:

- Use only a fresh battery of the required size and recommended type.
- Always remove old or weak batteries. They can leak chemicals that can damage electronic circuits.

Follow these steps to install the battery.

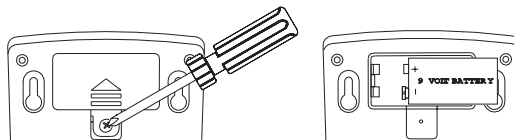

**Note:** The screw is packed separately. Insert the screw into the battery compartment cover when you first install the battery.

1. Use a small Phillips screwdriver to remove the screw from the battery compartment cover.
2. Lift the cover in the direction of the arrow.
3. Place a fresh battery in the compartment, as indicated by the polarity symbols (+ and -) marked inside.
4. Replace the battery compartment cover and tighten the screw.

---

---

### Notes:

- If you are not installing the battery for the first time, press any control button and **LOW** disappears.
- Replace the battery when **LOW** appears.
- Replace the battery within 15 seconds to avoid losing Caller ID information and Voice VIP messages that are stored in memory.

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

 
**Caution:** If you do not plan to use the CID-932 with batteries for a month or longer, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

## MOUNTING THE CID-932

You can set the CID-932 flat on a desk, shelf, or table or attach the supplied bracket if you want the CID-932 to sit up at an angle. You can mount the CID-932 on a wall.

### Attaching the Bracket

1. Align the two slots on the bottom of the CID-932 with the hooks on the bracket.

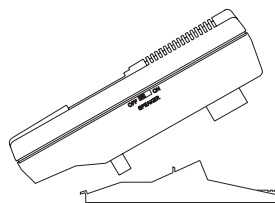


2. Insert the hooks into the slots and gently push the CID-932 down on the bracket to snap the bracket onto the CID-932.

To remove the bracket, firmly hold the CID-932 and pull up on the top of the bracket.

### Mounting on a Wall

To mount the CID-932 on a wall, you need two screws (not supplied) with heads that fit into the keyhole slots on the back of the CID-932.

1. Use the supplied template to mark the mounting screw locations on the wall. Then drill a hole in the wall at each marked location.
2. Insert a screw into each hole, letting the head extend  $\frac{1}{8}$  inch from the wall.
3. Connect the CID-932. See "Connecting the CID-932" on Page 13.
4. Align the keyhole slots on the CID-932 with the screws and slide it down.

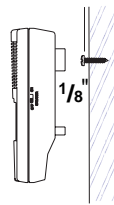


---

---

## CONNECTING THE CID-932

 The CID-932 connects to a modular phone line jack and your telephone.

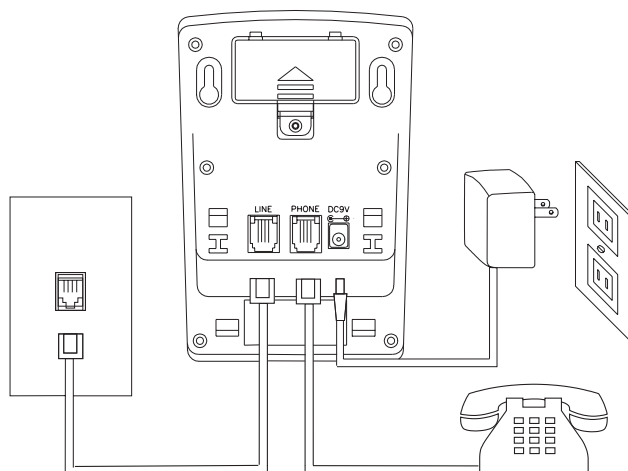

1. Unplug the telephone line cord from your telephone and plug it into the CID-932's **PHONE** jack.
2. Plug the supplied line cord into the CID-932's **LINE** jack and the other end into the modular phone line jack.

**Note:** The CID-932 must be connected directly to the telephone line. To share the same wall jack with a fax, modem or answering machine, use a duplex adapter (available at your local RadioShack store) to split the wall jack so it can feed the CID-932 directly.

---

---

**Cautions:**



You must use a Class 2 power source that supplies 9V DC and delivers at least 300 mA. Its center tip must be set to positive and its plug must fit the CID-932's **DC9V** jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the CID-932 or the adapter.

- Always connect the AC adapter to the CID-932 before you connect it to AC power. When you finish, disconnect the adapter from AC power before you disconnect it from the CID-932.

3. Insert the supplied AC adapter's barrel plug into the **DC9V** jack on the bottom of the CID-932. Plug the AC adapter into a nearby outlet that does not operate with a light switch.

**Note:** AC power is required in order for the CID-932's voice feature to function. Be sure to connect AC power.

---

---

## SETTING THE TIME AND DATE

The time and date are automatically set when the CID-932 first receives a call. Subsequently, each incoming call automatically updates the time and date.

To change the time and date follow these steps.

1. Hold down **REVIEW** ▲ and ▼ for about 6 seconds until the hour segment flashes.
2. Press **REVIEW** ▲ or ▼ to change the hour digit.
3. Press **DELETE** to confirm. The minute digits flash.
4. Repeat Steps 2–3 to set the minutes, day, and month.

The display returns to standby and the CID-932 is ready to receive calls.

## OPERATION

 
### RECEIVING A CALL

After the first ring, the CID-932 displays the caller's telephone number (and name, if available) and the date and time of the call for about one minute, and announces the caller's phone number (or a recorded Voice VIP message, if one has been assigned to that number). The NEW CALL indicator flashes, and the number of new and total calls appear.

**Note:** The ringer of a connected phone does not sound while the CID-932 is making voice announcements.


### ADJUSTING THE VOLUME

You can adjust the CID-932's volume at any time. Repeatedly press **VOLUME** until the desired level (**OFF**, **LOW**, or **HIGH**) appears.

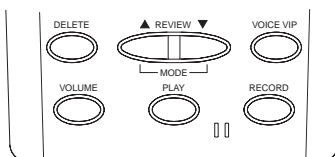

### Turning the Speaker On or Off

 You can also turn the CID-932's speaker on or off by sliding **SPEAKER**, located on the right side, to **ON** or **OFF**.

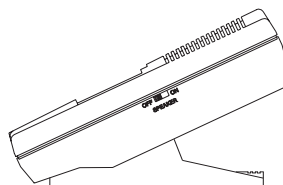



---


---

## CALLER ID MESSAGES

 Display	Description
<b>LONG DISTANCE</b>	Appears if your phone company sends information indicating that the incoming call is long distance.
<b>PRIVATE CALL</b>	Appears when the caller has blocked the number.
<b>NO CALL</b>	There are no Caller ID records.
<b>ERROR</b>	Appears when there is an error in transmission or reception of a call.
<b>RPT #</b>	Appears when two or more calls have been received from the same number. Repeat calls do not cause the number of new or total calls to increase.
<b>CALLER UNKNOWN</b>	The call is not within a Caller ID service area.
<b>CALL FORWARD</b>	The call was forwarded to you from another number.

## REVIEWING CALLER ID RECORDS

The CID-932 stores the number, name, date and time of up to 50 calls, then begins replacing the oldest call record with each new one received. You can review call records, with or without voice announcements any time the CID-932 is not receiving a call.

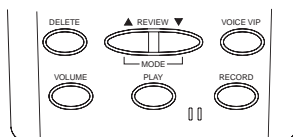

### With Voice Announcements

Press **PLAY**. The CID-932 announces only new calls, starting with the newest.

If a telephone number is on the VIP Call list, the Voice VIP message for that number plays instead of the number.

After the CID-932 announces the last number (or Voice VIP message), **END OF RCV** appears for about 20 seconds, then the CID-932 is ready to receive new calls.

### Without Voice Announcements


Repeatedly press **REVIEW** ▼ to see the Caller ID information starting from the newest call, or **REVIEW** ▲ to start from the oldest call. The CID-932 displays the number, name, and time of each call, then **END OF RCV** appears for about 20 seconds, then the CID-932 is ready to receive new calls.

---

---

## DELETING CALLER ID RECORDS

To delete an individual call record, press **DELETE** twice while the number you want to delete is displayed. The deleted number disappears and the next number in the CID-932's memory appears.

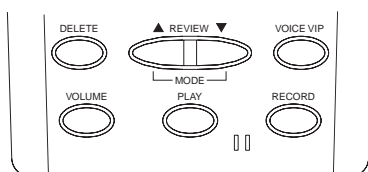

To delete all call records, hold down **DELETE** for at least six seconds until **NO CALL** appears.

## VIP CALL LIST

You can record a Voice VIP message for any telephone number in the CID-932's memory (up to 15 messages). The CID-932 plays the message whenever you receive a call from that number. You can review, re-record, or delete Voice VIP messages any time the CID-932 is not receiving a call.

### Recording Voice VIP Messages

1. Repeatedly press **REVIEW** ▲ or ▼ to scroll through the Caller ID records until the desired telephone number appears.

2. Press **RECORD** and begin speaking immediately after the beep. **RECORDING** appears.
3. Record your message within 2 seconds. The CID-932 immediately plays back the message, and displays the telephone number, then the message **OK? PRESS RECORD** appears.
4. To accept the message, press **RECORD** again.

If you want to re-record the message, press **DELETE**, then repeat the recording process.

If there is already a Voice VIP message for that number, the CID-932 beeps twice and **ALREADY EXISTS** appears. See "Reviewing and Re-recording Voice VIP Messages".

If the VIP Call List is full, the CID-932 beeps twice and **MEMORY FULL** appears. You must delete a Voice VIP message to free a memory location. See "Deleting Voice VIP Messages" on Page 21.

Repeat the steps above to record another Voice VIP message.

## Reviewing and Re-recording Voice VIP Messages

1. Press **VOICE VIP**. **VIP LIST** appears.
2. Repeatedly press **REVIEW** **▲** or **▼** to scroll through the VIP Call list until the desired telephone number appears.

- 
3. Press **PLAY** to hear the Voice VIP message for that number.
  4. If you want to re-record a message, press **RECORD**, record your message within two seconds, then press **RECORD** again.

Repeat Steps 2–4 to hear or re-record any other Voice VIP messages.

**Note:** If you do not press any button for 20 seconds, the CID-932 exits the VIP Call list and is ready to receive new calls. Press **VOICE VIP** to exit the call list sooner.

### Deleting Voice VIP Messages

Follow these steps to delete a telephone number and its Voice VIP message from the VIP Call list.

1. Press **VOICE VIP**. **VIP LIST** appears.
2. Repeatedly press **REVIEW ▲** or **▼** to scroll through the VIP Call list until the telephone number you want to delete appears.
3. Press **DELETE**. The CID-932 beeps once and **DELETE MSG?** appears.
4. If you made a mistake, press **REVIEW ▲** or **▼**. Otherwise, press **DELETE** again to confirm the deletion. First **MSG DELETED**, then the next number in the VIP Call list appears. If there are no more numbers, **VIP LIST** appears.

---

Repeat Steps 2–4 for other numbers you want to delete from the VIP Call list.

If you do not press any button for 20 seconds, the CID-932 exits the VIP Call list and is ready to receive new calls. Press **VOICE VIP** to exit the VIP Call list sooner.

## CARE

To enjoy your CID-932 for a long time:

- Keep the CID-932 dry. If it gets wet, wipe it dry immediately.
- Use and store the CID-932 only in normal temperature environments.
- Handle the CID-932 gently and carefully. Don't drop it.
- Keep the CID-932 away from dust and dirt.
- Wipe the CID-932 with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the CID-932's internal components can cause a malfunction and invalidate its warranty. If your CID-932 is not performing as it should, take it to your local RadioShack store for assistance. If the trouble is affecting the telephone lines, the phone company can ask you to disconnect your CID-932 until you have resolved the problem.

---

---

## THE FCC WANTS YOU TO KNOW

In the unlikely event that your phone causes problems on the phone line, the phone company can temporarily discontinue your service. If this happens, the phone company attempts to notify you in advance. If advance notice is not practical, the phone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

Also, the phone company can make changes to its lines, equipment, operations, or procedures that could affect the operation of this telephone. The telephone company notifies you of these changes in advance, so you can take the necessary steps to prevent interruption of your telephone service.

## LIGHTNING

Your telephone has built-in protection circuits to reduce the risk of damage from surges in telephone line and power line current. These protection circuits meet or exceed the FCC requirements. However, lightning striking the telephone or power lines can damage your telephone.

Lightning damage is not common. Nevertheless, if you live in an area that has severe electrical storms, we suggest that you unplug your phone during storms to reduce the possibility of damage.

### Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations,  
200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

01A00

Printed in China



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>