 


**R** RadioShack  
**4-Way Distribution  
 Amplifier**  
 15-1172

**Mounting the Amplifier**

Install the amplifier near your VCR, computer, or TV monitor using the screws provided. The amplifier can be attached to the wall, the baseboard, or furniture.

1. Select a location for the amplifier. Mark the mounting screw locations 97mm apart, one above the other.
2. Drill two 1/16-inch holes for the screws.
3. Insert the supplied screws in the holes, leaving about 1/8 inch extended.
4. Position the amplifier with the keyhole slots in the back over the screw heads.
5. Slide the amplifier down until it is attached securely to the mounting surface.

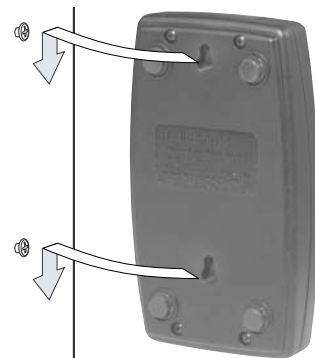

**Note:** Do not mount the amplifier on any other electronic device. Stacking components may cause overheating.

**What's Included**

 
- 4-Way Audio/Video Distribution Amplifier
- 2 Screws • AC Adapter
- Owner's Manual

**Making the Connections**

For the best possible video signal, use only video cables to make the input and output connections for your amplifier. To take advantage of the color-coded jacks on the amplifier, use matching color-coded Stereo Audio/Video Cable. Several types of composite, S-video, and audio cables are available at your local RadioShack store. **Important:** Do not use both composite and S-video for input or output signals at the same time. Only use either composite or S-video for input and either composite or S-video for output, not both of them.



**Note:** Always use the shortest possible cable for the connections. Do not coil extra cable next to the amplifier.

**INPUT VIDEO HOOKUP OUTPUT**

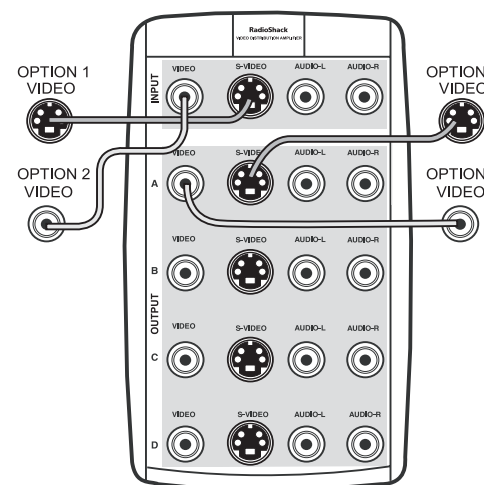

1. Connect the input device video cable.
2. Connect the output device video cable.
3. Connect the input device audio cable.
4. Connect the output device audio cable.
5. Plug the AC adapter into the AC wall outlet and into your 4-way distribution amplifier.


**INPUT AUDIO HOOKUP OUTPUT**

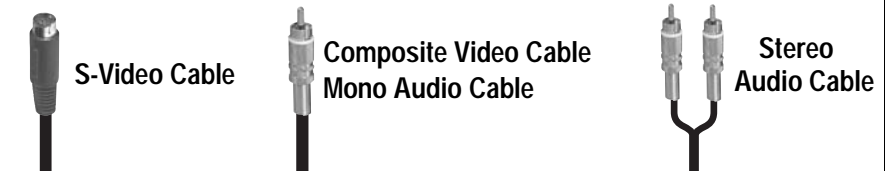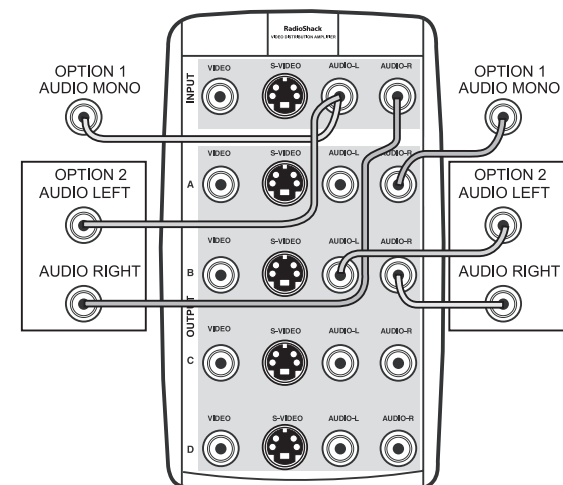  

**Troubleshooting**

- If you have poor or no reception on all the devices connected to the output jacks, be sure the AC/DC adapter is plugged into the amplifier and into a working outlet.
- If you have poor or no reception on a single unit, check the connections to that unit. Exchange the cables to locate either a defective cable or connector.
- If you have poor picture quality, be sure you are using video cables to make all the connections.

 **WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

**Limited 90-Day Warranty**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

©2003 RadioShack Corporation. All Rights Reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

15-1172  
 Printed in China  
 11A03  
 A00198AAA1

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>