 


PYLE®

INSTRUCTION MANUAL

PLVWR900

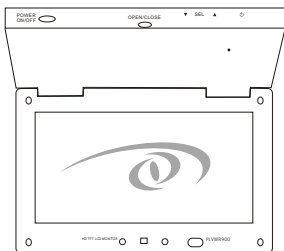

9 INCH HIGHRESOLUTION TFT LCDMONITOR

WELCOME

Thank you for the purchase of this monitor. Before operating the unit, please read this manual thoroughly and retain it for future reference.

Precautions

To prevent short-circuiting of the electrical system and cause serious damage to the unit or the vehicle, you are advised to follow the instructions carefully.

Should there be requirement to replace blown fuse, do remember to disconnect all power supply and switched off the unit before replacing it with a new one. Use only correct rating fuse to avoid damage the unit.

During operation, if there is symptom of over-heating or system mal-function, do switch off the unit and consult your dealer immediately. Please do not attempt to open up the unit since there is no serviceable parts inside.

To avoid damaging the LCD panel and cause serious injury to you or others, please observe the followings:

Do not drop the LCD display panel or subject it to direct impact.

Should the LCD panel is broken, do avoid all human contact to the broken glasses or fluid leaked out from the enclosure. If come into contact, do flush and clean affected areas with plenty of water. Seek medical attention immediately.

This unit is designed using high quality electronic components and manufactured under stringent quality control system. The system unit will provide many hours of quality performance if use correctly. Do follow the maintenance procedure below:

The battery life of the remote control unit is about six months long. To ensure effective control, please replace the batteries regularly. Do not use new and used batteries at the same time to avoid damaging the good battery.

Do not use any chemical solvent, cleaning agent or corrosive detergent to clean away dirt on the surface of the screen. By doing so, you may cause irreversible damage to the surface of the TFT screen. To clean off dirt or finger prints, we recommend the use of a soft damp lens cleaning cloth.

PRODUCT FEATURE

High resolution fullcolor TFT

Brand new LCD panel

Easy installation,compact size

provides VCR/VCD/DVD/Game playersignal input

Two video inputs

 
With remote control

on screen display menu

Auto power offif no signalfor 10 minutes

Low voltage autoalarm

FRONT PANEL

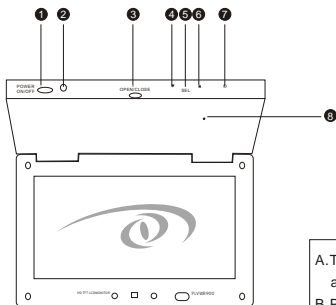


- 1.neon light power on/off
- 2.power indicator
- 3.open/close the monitor
- 4.negative adjustment
- 5.menu activate
- 6.positive adjustment
- 7.monitor power on/off
- 8.reset

- A.The image will beshown 4 to 5seconds later after press (7).
B.Press (1) for over4 seconds to turnthe neon off.
C.Reset to the factorydefault value by (8).

Note:Although the effective pixels for the liquid crystal is given as 99.98% or more, 0.02% of pixels may not light or may light incorrectly. It is a very common phenomenon in active matrix display technology, do not indicate fault or broken of the unit.

 REMOTE CONTROL

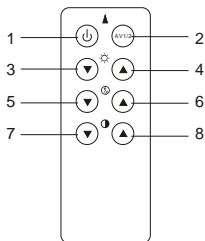


- 1.power on/off
- 2.V1/V2 switch
- 3.brightness -
- 4.brightness +
- 5.color -
- 7.color +
- 7.contrast -
- 8.contrast +

SPECIFICATION

Screen size	9inch(diagonal)
Display method	TFT active matrix system
Back light	Cold cathode fluorescent lamp
System	PAL & NTSC
Aspect ratio	16:9
Power source	DC 12V
Resolution	1024x532
Power consumption	10W
Max video input	1.0Vp-p
Input impedance	75 Ohm
Dimension	24.2x15.7x3.2cm

 WIRING



Pyle ,Inc
1600 63rd Street
Brooklyn, NY 11204
www.pyleaudio.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>