

Thank you for purchasing your Extra Loud Alarm Clock from RadioShack. Please read this user's guide before installing, setting up and using your new clock.



**CAUTION** RISK OF ELECTRIC SHOCK DO NOT OPEN

**WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture

**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

The lightning symbol is intended to alert you to the presence of uninsulated, dangerous voltage within this product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

The exclamation symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.



### Recycle Rechargeable Batteries

Placing rechargeable batteries in the trash can be harmful to the environment. Instead, recycle old rechargeable batteries at your local RadioShack store free of charge.

RadioShack participates in the RBRC® battery recycling program, and is committed to preserving the environment and conserving natural resources. Call 1-800-THE-SHACK (1-800-843-7422) for more information.



Protect the environment. Go to [E-CyclingCentral.com](http://E-CyclingCentral.com) to find an electronic recycling center near you.

### 1 Power your Clock

- Plug the power cord into a standard AC outlet. The display flashes.
- A backup battery can save your settings up to 8 hours if AC power is interrupted. Replace the battery if your settings are no longer save. Open the battery compartment, connect a 9V battery (not included) to the terminal and close the battery compartment.



### 2 Set the Clock

- Hold down **TIME** and repeatedly press **HOUR** or **MINUTE**. The PM light indicates evening settings.
- To adjust display brightness, slide the **DIMMER** switch to **HI** or **LO**.

### 3 Set the Alarm Time

- Hold down **ALARM** and repeatedly press **HOUR** or **MINUTE**. Then, slide the **ALARM ON/OFF** switch to **ON**. The **ALARM** light indicates when the alarm is on.
- To adjust the alarm volume, slide the **BUZZER** switch to **HI** or **LO**.
- Press and hold **ALARM** or **SNOOZE** to see the alarm time.

### 4 When the Buzzer Sounds

The buzzer will sound for up to about 2 hours at the alarm time.

- To pause the alarm temporarily (9 minutes), press **SNOOZE**.
- To reset the alarm, press **ALARM**. The buzzer will sound again the next day at the same time.
- To turn off the alarm, slide the **ALARM ON/OFF** switch to **OFF**.

### What's Included

Alarm Clock      User's Guide

### Specifications

Power Requirement .. AC120V 60Hz 5W  
 Battery Backup ..... one 9V battery  
 Dimension(HWD).....90 X 219 X 87 mm  
 Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

### Battery Notes

- Dispose of battery promptly and properly. Do not burn or bury them.
- Use only fresh battery of the required size and type.
- If you do not plan to use the clock for a week or more, remove the battery. Batteries can leak chemicals that can

damage electronic parts.

### Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for ninety (90) days after the date of purchase from a RadioShack-owned store or an authorized RadioShack franchisee or dealer. RadioShack MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store in the U.S. RadioShack will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

RadioShack EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact RadioShack at:

RadioShack Customer Relations  
 300 RadioShack Circle, Fort Worth, TX 76102 04/08

[www.RadioShack.com](http://www.RadioShack.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>