



Cat. No. 63-960

Extra-Loud Alarm Clock

Your RadioShack Extra-Loud Alarm Clock with adjustable alarm volume is an ideal timepiece for your bedroom.

Buzzer Hi/Lo Switch — lets you set the alarm to sound at a very loud or a normal level.

2-Inch Red LED Display — large digits mean the clock is easy to read.



Push Button Operation — makes the clock easy to use.

Snooze Feature — lets you temporarily turn off the alarm for about 9 minutes, so you can get a few extra minutes of sleep.

Battery Backup with Battery Sentinel® — keeps time and sounds the alarm at the set time during a power failure. It also lets you know when the battery needs to be installed or replaced.

Hi/Lo Dimmer — lets you adjust the display to suit the room's lighting.

Warning: To prevent fire or shock hazard, do not expose this product to rain or moisture.

	CAUTION	
RISK OF ELECTRIC SHOCK. DO NOT OPEN.		
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.</p>		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

© 1997 Tandy Corporation.
All Rights Reserved.

Battery Sentinel and RadioShack are registered trademarks used by Tandy Corporation.



CONNECTING TO AC POWER

Plug the alarm clock's power cord into a standard AC outlet. The display flashes **12:00** until you set the time (see "Setting the Time" on Page 3).

(Illustration)

Your alarm clock requires a 9-volt battery (not supplied) for its back-up power system. For the best performance and longest life, we recommend an alkaline battery, such as RadioShack Cat. No. 23-553.

Caution: Use only a fresh battery of the required size and recommended type.

Note: To prevent unnecessary drain on the battery, install it only after connecting the alarm clock to AC power.

(Illustration)

INSTALLING A BACKUP BATTERY

Your alarm clock has a back-up power system that operates the clock and alarm during a power failure. The display turns off, but the clock keeps running for at least 8 hours (depending on battery strength), and the alarm sounds at the alarm time.

The Battery Sentinel indicator, a small red dot at the bottom right of the display, appears if the battery is not installed or needs to be replaced.

(Illustration)

1. Push the battery compartment cover in the direction of the arrow and lift off the cover.
2. Snap the alarm clock's battery contacts onto the battery terminals, then put the battery into the compartment. The Battery Sentinel indicator turns off.
3. Replace the cover and slide it in the opposite direction to snap it into place.

Replace the battery when the Battery Sentinel indicator lights.

Warning: Always dispose of an old battery promptly and properly.

SETTING THE DIMMER

Set **DIMMER** to **LO** in low-light conditions, or to **HI** for bright light.

(Illustration)

SETTING THE ALARM TIME

(Illustration)

SETTING THE TIME

(Illustration)

While holding down **TIME**, press **HOUR**. The hour digits advance by 1 with each press. (Hold down **HOUR** to continuously advance the digits.)

Note: The PM indicator appears on the left side of the display during PM hours.

While holding down **TIME**, press **MINUTE**. The minute digits advance by 1 with each press. (Hold down **MINUTE** to continuously advance the digits.)

While holding down **ALARM**, press **HOUR**. The hour digits advance by 1 with each press. (Hold down **HOUR** to continuously advance the digits.)

The PM indicator appears on the left side of the display during PM hours.

While holding down **ALARM**, press **MINUTE**. The minute digits advance by 1 with each press. (Hold down **MINUTE** to continuously advance the digits.)

To display the preset alarm time at any time, press **ALARM**.

Note: You can press **ALARM**, **HOUR**, and **MINUTE** at the same time to set the alarm to 12:00 AM.



WAKING TO THE ALARM

To wake to the alarm, set **ALARM ON/OFF** to **ON**. The ALARM indicator lights. At the preset alarm time, the alarm sounds, then automatically turns off after 1 hour, 59 minutes. To turn the alarm off sooner, slide **ALARM ON/OFF** to **OFF**.

(Illustration)

Using Snooze

 
 
To silence the alarm but have it sound again in about 9 minutes, press **SNOOZE** after the alarm sounds. You can press **SNOOZE** as many times as you like.

(Illustration)

If you do not turn off the alarm, it automatically resets to sound at the same time the next day.

Set **BUZZER** to **HI** for an extra-loud alarm or to **LO** for a normal alarm sound level.

(Illustration)

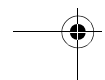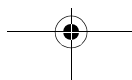

CARE AND MAINTENANCE

To enjoy your RadioShack Extra-Loud Alarm Clock for a long time:

- Keep the clock dry. If it gets wet, wipe it dry immediately.
- Handle the clock gently and carefully. Don't drop it.
- Use and store the clock only in normal temperature environments.
- Keep the clock away from dust and dirt.
- Wipe the clock with a damp cloth to keep it looking new.

Modifying or tampering with the clock's internal components can cause a malfunction and might invalidate your clock's warranty. If your clock is not working properly, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Power Requirement	AC 120V, 60 Hz, 5 Watts
Battery Sentinel	Standby 15 μ A
Battery Backup	One 9-Volt Battery (Cat. No. 23-553)
Dimensions (HWD)	$3\frac{7}{16} \times 8\frac{2}{3} \times 3\frac{3}{4}$ Inches (88 \times 220 \times 95 mm)
Weight	16 oz (0.45 kg)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

10A7

Printed in Hong Kong

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>