

World Time Travel Alarm Clock

63-994


OWNER'S MANUAL — Please read before using this equipment.

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

-  — Warning  — Important
 — Caution  — Note

Thank you for purchasing a RadioShack World Time Travel Alarm Clock. Your clock has a 20 city time display with an EL backlight so it is the perfect partner wherever your travels take you, day or night.

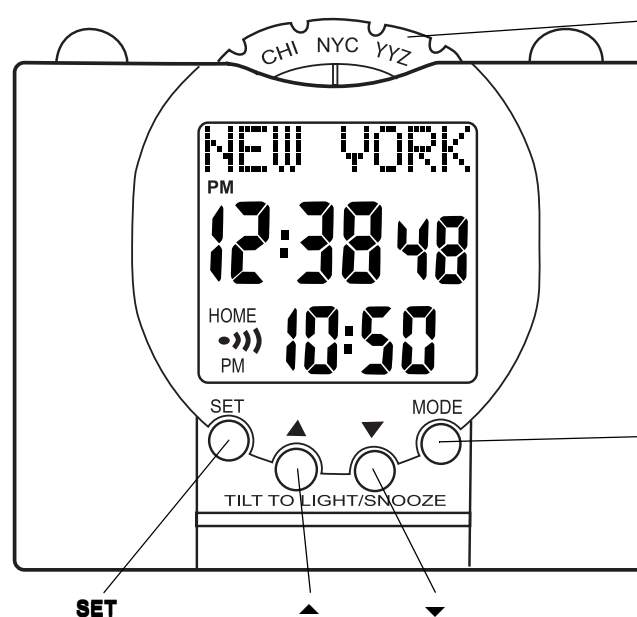

World Time Selection Wheel

Backlight — turns on for 3 seconds when you tilt the clock or press the two buttons on the top of the clock.

Built-in Stand — for easy viewing, lift the cover on the front of the clock and flip it under the clock to place the clock on a flat surface.

MODE

Snooze — lets you sleep for 9 extra minutes.

! WARNING !

Dispose of old batteries promptly and properly. Do not burn or bury them.

CAUTION

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Always remove old or weak batteries. Batteries can leak chemicals that can destroy electronic parts.

NOTE




Installing Batteries

All settings are lost when the batteries are replaced.


Setting the Home Time

- Positive and negative numbers represent the difference in hours from the Greenwich Mean Time (GMT).
- When rotating the world time selection wheel, do not press any other buttons or tilt the clock. Otherwise, the selected city name and time will not display until you release the button.

INSTALLING BATTERIES

You need two AAA batteries (not supplied) to power your clock. For the best performance and longest life, we recommend RadioShack alkaline batteries.   


1. Slide the battery compartment cover toward the bottom of the clock and lift it off.

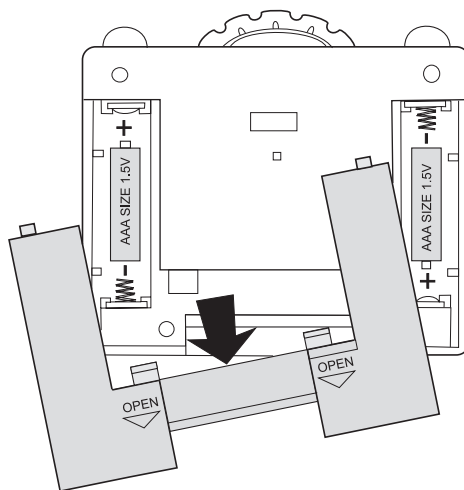

2. Place one AAA battery in each compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the cover.

SETTING THE HOME TIME

New York is the preset home time.

Rotate the world time selection wheel until the city you want to set for home time appears. There are 20 different cities for you to choose from. 

Display	Dial	Time Zone
BANGKOK	BKK	+ 7
CAIRO	CAI	+ 2
CALCUTTA	CCU	+ 5
CHICAGO	CHI	- 6
DENVER	DEN	- 7
FRANKFRT	FKT	+ 1
HONGKONG	HKG	+ 8
HONOLULU	HNL	-10
L.A.	LAX	- 8
LONDON	LON	+ 0
MANILA	MNL	+ 8
MEXICO	MEX	- 6
MOSCOW	MOW	+ 3
NEW YORK	NYC	- 5
PARIS	PAR	+ 1
ROME	ROM	+ 1
SEOUL	SEL	+ 9
SYDNEY	SYD	+10
TOKYO	TYO	+ 9
TORONTO	YYZ	- 5



RadioShack®

 www.radioshack.com™

© 2002 RadioShack Corporation.

 All Rights Reserved.

 RadioShack and RadioShack.com are trademarks

 used by RadioShack Corporation.

NOTE

Setting the Home Time

- A beep sounds anytime you press a button.
- If you do not press a button for about 20 seconds during any setting process, the clock stores the settings you've entered, exits setup, and the set time appears.

Viewing Daylight Savings Time Settings

To switch between DST and standard time, **HOME** must appear.

Setting the Alarm Time

If you do not silence the alarm, it beeps faster. After 2 minutes, the alarm stops beeping and enters snooze mode. **•••** continues flashing. In about 9 minutes, the alarm sounds again. If the alarm turns off a third time, **•••** remains on the display, and the alarm sounds at the same time the next day.

1. Hold down **SET** for about 2 seconds, the hour digits in the home time field flash.
2. Repeatedly press or hold down **▲** or **▼** to set the correct hour.
Pm appears for a PM hour.
3. Press **SET**, the minute digits flash.
4. Repeatedly press or hold down **▲** or **▼** to set the correct minute.
5. Press **SET** to confirm the setting.

SETTING THE ALARM TIME

1. Press **MODE** to enter alarm mode. The set alarm time appears in the home time field.
2. Hold down **SET** for about 2 seconds. The hour digits flash and **•••** appears.
3. Repeatedly press or hold down **▲** or **▼** to set the desired hour.
Pm appears for a PM hour.
4. Press **SET**. The minute digits flash.
5. Repeatedly press or hold down **▲** or **▼** to set the desired minute.
6. Press **SET** to confirm the setting.
7. Repeatedly press **MODE** to turn the alarm on and off. **•••** appears when the alarm is turned on.
8. Press **SET** again to return to the normal time display.

At the preset time, **•••** flashes and the alarm beeps. Press any button to silence the alarm.

VIEWING TIMES FOR OTHER CITIES

To view the time in another city, rotate the wheel until the time for the desired city appears.

VIEWING DAYLIGHT SAVINGS TIME SETTINGS

When **HOME** and the home time appear, repeatedly press **▲** or **▼** to see the Daylight Savings Time (DST) setting. **DST** and the DST time appear.

Before rotating the wheel to view the time in another city, press **▲** or **▼** to change from DST to standard time.

USING SNOOZE

When the alarm sounds, tilt the clock to silence the alarm for about 9 minutes. **•••** flashes.

Tilt the clock again before the alarm sounds to turn off the snooze. **•••** stops flashing. If you do not turn off the snooze, the alarm sounds again after 9 minutes.

You can use snooze twice.

CARE

Keep the clock dry; if it gets wet, wipe it dry immediately. Use and store the clock only in normal temperature environments. Handle the clock carefully; do not drop it. Keep the clock away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

If your clock is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the clock's internal components can cause a malfunction and might invalidate its warranty.

SPECIFICATIONS

- Alarm Frequency 1000 Hz.
- Power Source 2 AAA batteries
- Battery Life About 1 year
- Snooze Time 9 minutes
- Dimensions (HWD) 3 1/8 x 3 9/16 x 7/8 inches
(80 x 90 x 22 mm)
- Weight (without battery) 3.5 oz (100g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

RadioShack Corporation
Fort Worth, Texas 76102

63-994
07A02
Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>