

**® RadioShack**  
**Personal Safety Alarm with Flashlight**  
 49-1011

Thank you for purchasing the RadioShack Personal Safety Alarm with Flashlight. It combines an alarm and a flashlight into one convenient device that helps ensure your personal safety. Its siren is designed to startle and deter would-be attackers, and its compact design is perfect for discreet carrying. The supplied neck strap lets you wear your personal safety alarm anywhere.

**Removing the Insulation**

To prevent battery drain during shipping, your Personal Safety Alarm with Flashlight is shipped with an insulation strip inside the battery compartment that must be removed before use. To remove the insulation, remove the battery cover with a flat-head screwdriver and pull off the insulation strip. Replace the battery cover when finished.

**Using the Alarm**

1. To activate the alarm, pull the strap until the alarm sounds.
2. To stop the alarm, push back the security pin.



**Cautions:**


- The siren is very loud. Prolonged exposure may cause permanent hearing impairment or loss.
- Your flashlight may not work properly in temperatures below 32°F (0°C).
- Keep your alarm away from children.



**Replacing the Batteries**

Your Personal Safety Alarm comes with three 357A batteries for power. When the flashlight dims or the alarm weakens, replace the batteries.

1. Insert a flat-head screwdriver into the slot on the battery compartment cover to lift off the cover.
2. Insert the batteries into the compartment, matching the polarity (+) and (-) symbols marked on each side.
3. Insert the two locking tabs on the cover into the locking slots on the battery compartment and snap it down into place.

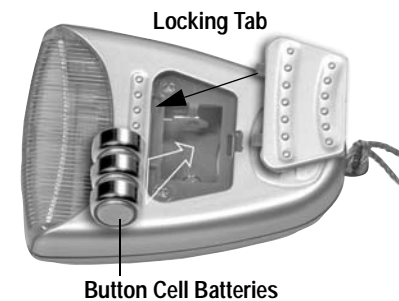


**Battery Cautions:**

- Use only fresh batteries of the required size and recommended type.
- If you do not plan to use the Personal Safety Alarm for a month or more, remove the batteries. Batteries may leak chemicals that can destroy electronic parts.
- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

**Using the Flashlight**

To turn on the flashlight, press and hold down **LIGHT** on the front of the alarm. Release **LIGHT** to turn the flashlight off.

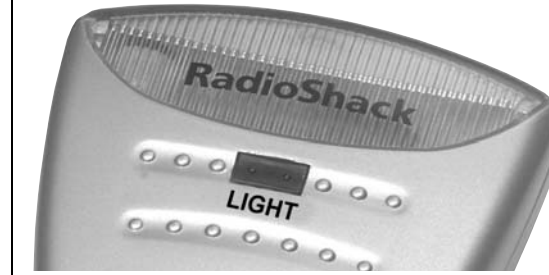

**Care**

Keep the alarm dry; if it gets wet, wipe it dry immediately. Use and store the alarm only in room temperature environments. Handle the alarm carefully; do not drop it. Keep the alarm away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

**Limited 90-Day Warranty**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lighting or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2004 RadioShack Corporation.  
 All Rights Reserved.  
 RadioShack and RadioShack.com are trademarks  
 used by RadioShack Corporation.

49-1011  
 Printed in China  
 01A04

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>