#### **RadioShack**®



۲

43-3575 900 MHz cordless telephone with caller id/call waiting id

#### **Ouick Start Guide**

Please read this user's guide before installing, setting up and using your new product www.radioshack.com



Note: Actual product may vary from the images found in this document.

# activating and charging your battery pack

Your phone's handset comes with a rechargeable nickel metal hydride (Ni-MH) battery pack already installed.

• Before charging the battery for the first time, push the pin for activation, located on the bottom of the handset (see label with instructions).

۲


Once activated, remove the label, and then place the handset in the base unit to charge.



- Do not plug your phone into the phone line while charging.
- Charge your phone for 15-20 hours without interruption.

### replacing your battery pack

- Unscrew your battery compartment cover and remove the old battery pack.
- Plug the replacement battery connectors (red and black wires) into the small, black jack inside the battery compartment. They fit only one way.
- S Replace your battery cover. To ensure it is securely connected, insert the bottom first.

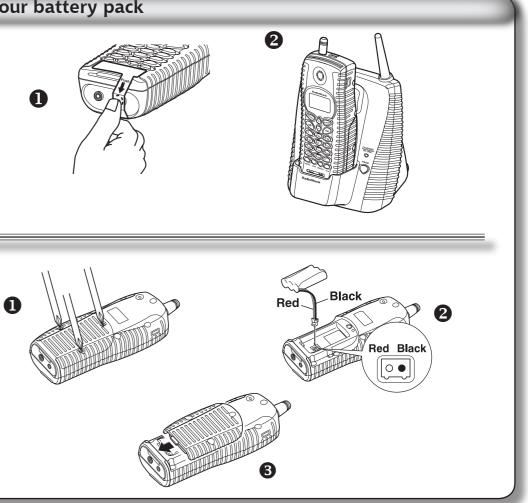

## using your cordless phone


#### connecting your phone

- Plug one end of the supplied long modular cord into the **TEL LINE** jack.
- **2** Insert the supplied AC adapter's barrel plug into the DC IN 9V jack on the bottom of the base and route the adapter's cord through the strain relief slot on the base.
- Plug the other end of the modular cord into a modular phone line jack.
- Plug the adapter into a standard AC outlet.



Note: Refer to page 8-9 of your User's Guide for wall mounting instructions.

# **RadioShack**

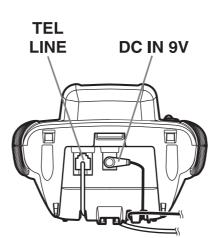

# To make a call:

- Pick up the handset.
- **O** Press TALK/ FLASH.
- Listen for the dial tone and dial the number.

#### OR

- Then press TALK/FLASH.

#### To receive a call:

If Auto Talk is on, just pick up the handset; and, if Auto Talk is off, pick up the handset and press TALK/FLASH.



©2005. RadioShack Corporation. All rights reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

1240 UCZZ01441BZ Printed in Chi

# making and receiving calls

TALK/FLASH



• Pick up the handset and dial the number.

If the handset is off the base and Auto Talk is on, press TALK/FLASH, any number, /TONE/< or #/>. Or, if Auto Talk is off, press TALK/FLASH. Refer to page 16 of your User's Guide for more information on the Auto Talk feature.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com