



What's Included

- Webcam
- Driver CD
- User's Guide

Thank you for purchasing this Gigaware Webcam with Mic from RadioShack. Your webcam with built-in microphone is convenient for voice and video chat. Please read this user's guide before installing, setting up, and using your new product.

Capture Button

Press to capture still images. To learn more about editing tools, refer to Videolmpression's online help.

Focus Ring

Rotate to adjust the focus.

Microphone

Located on back, near the USB cable.

LED

Lights when connect to your PC.

Multi-directional Base

Place the webcam on top of your monitor as shown or on any level surface. Adjust the multi-directional base for the best view.



USB Plug
Connect to your computer's USB port.



Video Conference

You can use your webcam for video conferences over the internet. The driver on the installation CD is compatible with most common instant-messenger programs.

Still Images

Your webcam can capture still images that you can save on your computer's hard drive.

Video Capture

You can use **Videolmpression 2.0** to record videos directly to your computer's hard drive.

1. Open **Videolmpression 2**. The **ARCISOFT VIDEOIMPRESSION** screen appears and the webcam's LED lights.
2. Click **Create a New Video**, then click **Capture From Device**.
3. Adjust the webcam for best picture quality. To adjust the color or contrast click **Settings**.
4. Click **●** to start recording and **■** to stop. The webcam records in AVI format.



Note: To learn more about video editing tools, refer to the Videolmpression application's online help.

System Requirements

- Operating System: Windows Vista™, Windows® XP, Windows 2000, Windows Me
- Processor: Pentium® II 350 MHz CPU
- Memory: 256 MB RAM
- Free Hard Disk Space: 500 MB
- Connection: USB 1.1/2.0 (Internet Connection)

Specifications

Image Sensor 640 x 480 Pixels, CMOS
 Lens Specification..... F2.4, f=4.9mm
 White Balance Auto
 Exposure Auto
 Frame Rate 640x480 Pixels @ 30fps
 320x240 Pixels @ 30fps
 Focus Range Manual Focus, 1 cm to Infinity
 Depth of Field 50 cm to Infinity
 PC Interface USB 1.1
 Video Format AVI
 Audio Built-in Mic
 Video Capture Resolution 640x480 / 320x240 pixels
 Snapshot Hardware
 Still Capture Resolution Up to 640x480 pixels
 Flicker Control 50Hz, 60Hz
 Power From USB Port

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

RF Emissions Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult your local **RadioShack** store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your product. Changes or modifications not expressly approved by **RadioShack** may cause interference and void the user's authority to operate the equipment.

FCC Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Product	Webcam with Mic
Model	25-157
Responsible Party	RadioShack 300 RadioShack Circle Fort Worth, TX 76102
Phone	817-415-3200

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a **RadioShack** owned store or an authorized **RadioShack** franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.** This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD. EXCEPT AS DESCRIBED ABOVE, RADIOSHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact **RadioShack** at:
RadioShack Customer Relations
 300 RadioShack Circle, Fort Worth, TX 76102 04/08

www.radioshack.com



Protect the environment by recycling used electronics. Go to www.ecyclingcentral.com to find a recycling location near you.

1 Install Drive

Turn on your computer and insert the Driver CD. When the **Webcam with Mic** screen appears, click **Driver** and follow the on-screen instructions.

Window Vista™ Users:

When the CD is inserted, click **Run Menu.exe**. When the **Webcam with Mic** screen appears, click **Driver**. During installation, a **User Account Control** message may appear asking you to cancel or allow program authorization of the webcam software. Select the option **Allow**, then follow the on-screen instructions.

2 Install Videolmpression 2

Reload the installation CD. When the **Webcam with Mic** menu appears, click **ArcSoft Videolmpression** and follow the on-screen instructions. When complete, a **Videolmpression 2** icon appears on your computer desktop.



3 Connect to Your PC

Plug the webcam into the computer's USB port.

For Windows ME/Windows 2000/Windows XP:

If the **Found New Hardware Wizard** appears, follow the on-screen instructions to complete installation.

For Windows Vista™:

When **Found New Hardware** screen displays, click **Locate and install driver software (recommended)**, and then click **Continue** to complete installation when **Windows needs your permission to continue** appears.

If the webcam does not function and your Windows operating system does not detect the webcam, refer to your Windows documentation for troubleshooting instructions.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>