

® RadioShack
Talking Memory
Frame
 63-1077


Installing the Batteries

You will need:

- Four AAA batteries (not supplied)

You may purchase alkaline batteries at your local RadioShack store.

1. Open the picture frame and slide off the clear faceplate from the memory frame.
2. Lift off the battery compartment cover.
3. Install the AAA batteries, as indicated by the polarity (+ and -) marked inside.
4. Replace the cover.

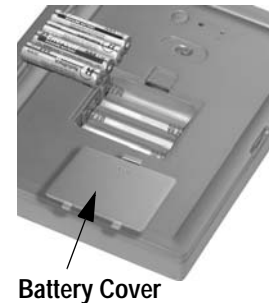

Battery Cover

Note: When the sound weakens, replace the batteries.

Battery Tips:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the memory frame for a month or more, remove the batteries. Batteries can leak chemicals that may destroy electronic parts.

What's Included

- Talking Memory Frame ♦ 2 Pks. Clay
 1 Pk. Colored Stones ♦ Stylus
 Owner's Manual



Operation

Recording a Message

You can record a message of your baby's voice up to 10 seconds long.

1. Slide **REC/LOCK** to **REC**.
2. Hold down **REC** while your baby coos, giggles or makes other precious sounds. Hold the frame close to your baby's mouth.
3. Release **REC** to stop recording.

Note: Slide **REC/LOCK** back to **LOCK** to prevent accidental erasing.



Playing a Message

Press **PLAY** on top of the memory frame to play the message.



Loading a Picture

1. Remove the clear faceplate and place a picture behind it.
2. Slide the faceplate and picture down into the slot located on top of the memory frame.

Using the Clay

1. Clean and dry the object or person you want to imprint.
2. Knead the clay until it shapes and fits the frame.
3. Place the shaped clay on the left side of the memory frame and flatten it with your palm so the clay spreads evenly. Remove excess clay.
4. Place and hold the object onto the clay for at least seven seconds and then remove it. Press the supplied stones into the clay to decorate it. Use the supplied stylus to write a message on the clay.
5. Lay the frame flat in a cool area for about 48 hours to allow the imprint to dry and the clay to harden. If the imprint fails, repeat Steps 2-5. Use the extra package if the clay is too hard to reshape.

Care & Service

Keep your memory frame dry; if it gets wet, wipe it dry immediately. Use and store it in room temperature environments only. Handle your memory frame carefully; do not drop it. Keep it away from dust and dirt, and wipe your frame with a damp cloth occasionally to keep it looking new. If your frame is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website (www.radioshack.com), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the memory frame's internal components can cause a malfunction and might invalidate its warranty.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state
 RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2004 RadioShack Corporation.
 All Rights Reserved.
 RadioShack and RadioShack.com are trademarks
 used by RadioShack Corporation.

63-1077
 Printed in China
 01A04

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>