
Explorer® Digital Set-Top User's Guide





Models 4240C™ and 4250C™
with Multi-Stream CableCARD™ Interface



**Scientific
Atlanta**
A CISCO COMPANY

Notice to Installers

The servicing instructions in this notice are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.

<p>Note to System Installer</p> <p>For this apparatus, the coaxial cable shield/screen shall be grounded as close as practical to the point of entry of the cable into the building. For products sold in the US and Canada, this reminder is provided to call the system installer's attention to Article 820-93 and Article 820-100 of the NEC (or Canadian Electrical Code Part 1), which provides guidelines for proper grounding of the coaxial cable shield.</p> <div style="text-align: center;">  </div> <p>This symbol is intended to alert you that uninsulated voltage within this product may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this product.</p> <p>Ce symbole a pour but d'alerter toute personne qu'un contact avec une pièce interne de ce produit, sous tension et non isolée, pourrait être suffisant pour provoquer un choc électrique. Il est donc dangereux d'être en contact avec toute pièce interne de ce produit.</p>	<div style="text-align: center;">  </div> <div style="text-align: center;"> <table border="1"> <tr><td>CAUTION</td></tr> <tr><td>RISK OF ELECTRIC SHOCK DO NOT OPEN</td></tr> <tr><td>AVIS</td></tr> <tr><td>RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR</td></tr> </table> </div> <div style="text-align: center;">  </div> <p>CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.</p> <p>WARNING TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.</p> <div style="text-align: center;">  </div> <p>This symbol is intended to alert you of the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.</p> <p>Ce symbole a pour but de vous avertir qu'une documentation importante sur le fonctionnement et l'entretien accompagne ce produit.</p>	CAUTION	RISK OF ELECTRIC SHOCK DO NOT OPEN	AVIS	RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR
CAUTION					
RISK OF ELECTRIC SHOCK DO NOT OPEN					
AVIS					
RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR					

20070131 SysInstaller 820 US/Canada/Intl

U.S. Patents

A patent notice is affixed to this product. In addition, the product may also be covered by one or more of the following patents:

4,498,169; 4,692,919; 4,748,667; 4,829,569; 4,866,770; 4,885,775; 4,888,799; 4,890,319; 4,922,456; 4,922,532; 4,924,498; 4,965,534; 4,991,011; 5,003,384; 5,012,510; 5,029,207; 5,045,816; 5,053,883; 5,054,071; 5,058,160; 5,142,575; 5,142,690; 5,146,526; 5,155,590; 5,214,390; 5,225,902; 5,225,925; 5,235,619; 5,237,610; 5,239,540; 5,241,610; 5,247,364; 5,255,086; 5,257,403; 5,267,071; 5,270,809; 5,271,041; 5,272,752; 5,282,028; 5,285,497; 5,287,351; 5,301,028; 5,309,514; 5,317,391; 5,319,709; 5,341,425; 5,347,388; 5,347,389; 5,357,276; 5,359,601; 5,361,156; 5,367,571; 5,379,141; 5,379,145; 5,381,481; 5,390,337; 5,400,401; 5,406,558; 5,418,782; 5,420,866; 5,420,923; 5,425,101; 5,428,404; 5,430,568; 5,434,610; 5,436,749; 5,438,370; 5,440,632; 5,442,472; 5,455,570; 5,457,701; 5,471,492; 5,477,199; 5,477,262; 5,477,282; 5,477,370; 5,481,389; 5,481,542; 5,485,221; 5,493,339; 5,497,187; 5,500,758; 5,502,499; 5,506,904; 5,519,780; 5,539,822; 5,550,825; 5,579,055; 5,579,057; 5,583,562; 5,592,551; 5,596,606; 5,600,378; 5,602,933; 5,640,388; 5,657,414; 5,675,575; 5,684,876; 5,715,515; 5,724,525; 5,734,822; 5,740,300; 5,742,677; 5,754,940; 5,757,416; 5,771,064; 5,774,859; 5,825,829; 5,826,167; 5,850,305; 5,854,703; 5,870,474; 5,892,607; 5,920,626; 5,923,755; 5,930,024; 5,930,515; 5,937,067; 5,963,352; 5,966,163; 5,982,424; 5,991,139; 5,999,207; 6,005,631; 6,005,938; 6,016,163; 6,028,941; 6,029,046; 6,052,384; 6,055,244; 6,072,532; 6,105,134; 6,148,039; 6,157,719; 6,188,729; 6,195,389; 6,212,278; 6,215,530; 6,219,358; 6,240,103; 6,243,145; 6,246,767; 6,252,964; 6,272,226; 6,292,081; 6,292,568; 6,320,131; 6,374,275; 6,405,239; 6,411,602; 6,417,949; 6,424,714; 6,424,717; 6,433,906; 6,438,139; 6,463,586; 6,467,091; 6,476,878; 6,493,876; 6,510,519; 6,516,002; 6,516,412; 6,526,508; 6,538,595; 6,546,013; 6,560,340; 6,567,118; 6,570,888; 6,622,308; 6,629,227; 6,664,984; 6,667,994; 6,671,879; 6,674,967; 6,678,891; 6,714,598; 6,721,352; 6,721,956; 6,725,459; 6,738,982; 6,744,892; 6,744,967; 6,751,271; 6,760,918; 6,795,972; 6,802,077; 6,804,708; 6,811,447; 6,817,028; 6,822,972; 6,823,385; 6,832,386; 6,845,106; 6,868,473; 6,874,075; 6,889,191; 6,909,471; 6,917,622; 6,917,628; 6,922,412; 6,927,806; 6,928,656; 6,931,058; 6,937,729; 6,969,279; 6,971,008; 6,971,121; 6,978,310; 6,986,156; 6,988,900; 6,996,838; 7,010,801; 7,053,960; 7,065,213; 7,069,578; 7,069,572; D348065; D354959; D359737; D363932; D390217; D434753; D507240; D507535; D513407; D516518; RE36368; RE36988

20070417 Patents

Contents

Important Safety Instructions.....	v
Welcome.....	1
Safety First	1
Identify Your Set-Top	1
What's in the Carton?	2
Additional Equipment You Might Need	2
What's on the Front Panel?	3
What's on the Back Panel?	4
Connecting the Set-Top.....	5
Connections for a Standard-Definition TV and VCR	6
View Television Programming	7
Troubleshooting.....	8
Frequently Asked Questions.....	9
Connecting to a TV Using Cable Out	10
Connecting to a TV Using Video Out and Audio Out.....	10
Connecting to a TV and VCR Using Cable Out.....	11
Connecting to a TV and VCR Using Video Out and Audio Out	11
Connecting to a Home Theater Receiver and TV.....	12
Index.....	13
FCC Compliance	Back Cover
Software and Firmware Use	Back Cover
Trademarks	Back Cover
Disclaimer.....	Back Cover

IMPORTANT SAFETY INSTRUCTIONS

Read These Instructions

Keep These Instructions

Heed All Warnings

Follow All Instructions

Power Source Warning

A label on this product indicates the correct power source for this product. Operate this product only from an electrical outlet with the voltage and frequency indicated on the product label. If you are uncertain of the type of power supply to your home or business, consult your service provider or your local power company.

Ground the Product



WARNING:

Avoid electric shock and fire hazard! Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

If this product connects to coaxial cable wiring, be sure the cable system is grounded (earthed). Grounding provides some protection against voltage surges and built-up static charges.

 
Outdoor Grounding System

If this product connects to an outdoor antenna or cable system, be sure the antenna or cable system is grounded (earthed). This provides some protection against voltage surges and built-up static charges.

Article 810 of the National Electric Code (NEC) ANSI/NFPA No. 70-1990, provides the following information:

- Grounding of the mast and supporting structure
- Grounding the lead-in wire to an antenna discharge unit
- Size of the grounding conductors

- Location of the antenna-discharge unit
- Connection to grounding electrodes
- Requirements for the grounding electrodes (see the following antenna grounding diagram as recommended by NEC ANSI/NFPA 70)

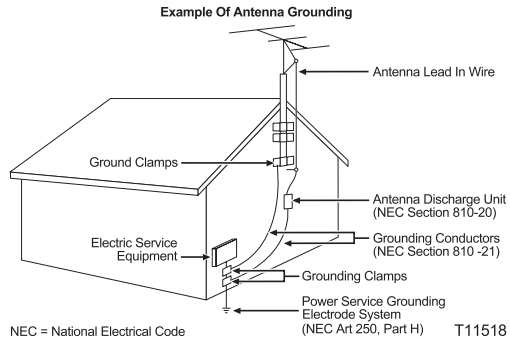

WARNING:

Avoid electric shock and fire hazard! Do not locate an outside antenna system in the vicinity of overhead power lines or power circuits. Touching power lines or circuits might be fatal.

Protect the Product from Lightning

For added protection, unplug this apparatus during lightning storms or when unused for long periods of time. In addition to disconnecting the AC power from the wall outlet, disconnect the signal inputs.

Verify the Power Source from the On/Off Power Light

When the on/off power light is not illuminated, the apparatus may still be connected to the power source. The light goes out when the apparatus is turned off, regardless of whether it is still plugged into an AC power source.

Eliminate AC Mains Overloads



WARNING:

Avoid electric shock and fire hazard! Do not overload AC mains, outlets, extension cords, or integral convenience receptacles. For products that require battery power or other power sources to operate them, refer to the operating instructions for those products.

IMPORTANT SAFETY INSTRUCTIONS, continued

Prevent Power Cord Damage

Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where the cord exits from the apparatus.

Provide Ventilation and Select a Location

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not place this apparatus on a bed, sofa, rug, or similar surface.
- Do not place this apparatus on an unstable surface.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not install this apparatus in an enclosure, such as a bookcase or rack, unless the installation provides proper ventilation.
- Do not place entertainment devices (such as VCRs or DVDs), lamps, books, vases with liquids, or other objects on top of this product.

Protect from Exposure to Moisture and Foreign Objects

Do not use this apparatus near water.



WARNING:
Avoid electric shock and fire hazard! Do not expose this product to liquids, rain, or moisture.



WARNING:
Avoid electric shock and fire hazard! Unplug this product before cleaning. Clean only with a dry cloth. Do not use a liquid cleaner or an aerosol cleaner. Do not use a magnetic/static cleaning device (dust remover) to clean this product.



WARNING:
Avoid electric shock and fire hazard! Never push objects through the openings in this product. Foreign objects can cause electrical shorts that can result in electric shock or fire.

Accessories Warning



WARNING:
Avoid electric shock and fire hazard! Only use attachments/accessories specified by your service provider or the manufacturer.

Service Warnings



WARNING:
Avoid electric shock! Do not open the cover of this product. Opening or removing the cover may expose you to dangerous voltages. If you open the cover, your warranty will be void. This product contains no user-serviceable parts. Refer all servicing to qualified service personnel.

Service is required when the apparatus has been damaged in any way, such as a power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Check Product Safety

Upon completion of any service or repairs to this product, the service technician must perform safety checks to determine that this product is in proper operating condition.

Protect the Product when Moving It

Always disconnect the power source when moving the apparatus or connecting or disconnecting cables.



WARNING:
Avoid personal injury and damage to this product! Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

20070320 Set-Top Cable US & Canada

Welcome

The Explorer® 4240C™ and 4250C™ Digital Set-Top with a Multi-Stream CableCARD™ (M-Card™) receives and displays digital signals and delivers programming in exceptional picture and audio quality. The M-Card provides system security and authorization of digital services. Through the 4240C and 4250C, you can also access interactive services, such as video-on-demand and pay-per-view programs. Contact your service provider for information about these and other available services. Use the instructions in this guide to install the 4240C or the 4250C and to access your program services.

Important: If the M-Card is removed, the set-top will not operate correctly.

 
For more information about this product, visit our website:
www.scientificatlanta.com/products/consumers/new_cableboxes.htm

Safety First

Before using this set-top, read the **Important Safety Instructions** section of this guide.

Identify Your Set-Top

To find the serial number for your set-top, look on the back for a label that is similar to the example shown here. The serial number begins with "STB SN" and is located at the top of the bar code.

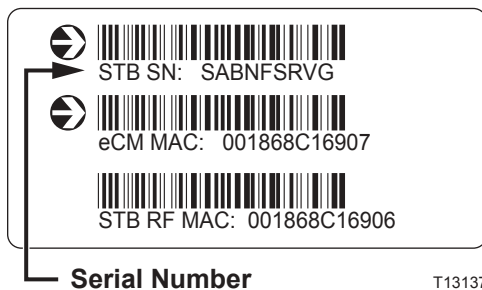

If your set-top requires troubleshooting in the future, your cable service provider may ask for this serial number.

Use the space provided here to record the serial number:

What's In The Carton?

The set-top carton contains the following items:



4240C or 4250C Set-top



Power Cord

Additional Equipment You Might Need

You might need some of the cables and adapters shown below for connecting the set-top to your home entertainment devices. See the connection information in the **Connection Diagrams** section for more information.

Check with your service provider for information about acquiring cables or adapters, or you can purchase cables or adapters from your local electronics supplier.



RF Coaxial
Cable



Audio
Left/Right
Cable



Composite
A/V Cables



S-Video
Cable



Coaxial Digital
Audio Cable

 




Multi-Stream
CableCARD™
(obtain from your
service provider)



IR Extender
Cable

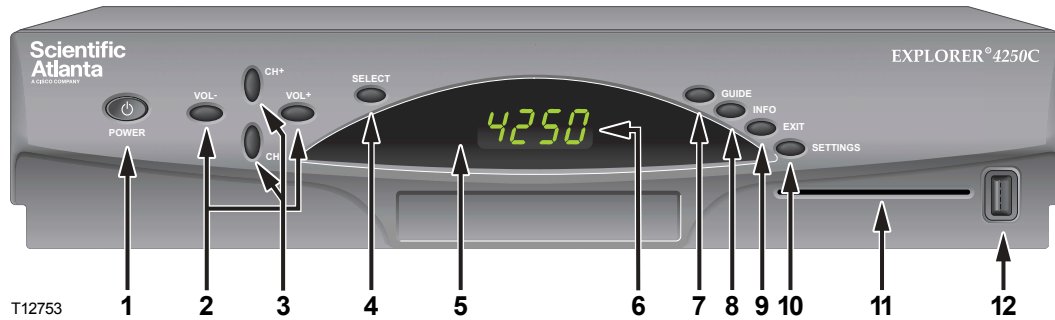
What's on the Front Panel?



- | | |
|---------------------------|--|
| 1 Power | Turns the set-top on and off |
| 2 VOL + and VOL - | Increases and decreases the volume |
| 3 CH + and CH - | Scrolls up and down through the channels |
| 4 Select | Provides access to your on-screen selection |
| 5 IR Sensor | Receives the infrared signal from the remote control |
| 6 LED Display | Displays the selected channel number and time of day. The LED also displays the following: <ul style="list-style-type: none">• Message ()• Power () |
| 7 Guide | Accesses on-screen services, such as the on-screen guide, video-on-demand, or pay-per-view |
| 8 Info | Displays a description of the selected program. This button is available from the on-screen guide and while viewing a program |
| 9 Exit | Exits menus, the on-screen guide, and program information |
| 10 Settings | Accesses the Settings menu |
| 11 Smart Card Slot | Reserved for future use |
| 12 USB Port | Connects to external equipment, such as a keyboard or mouse (reserved for future use) |

Note: This illustration may vary from the actual product.

 What's on the Back Panel?

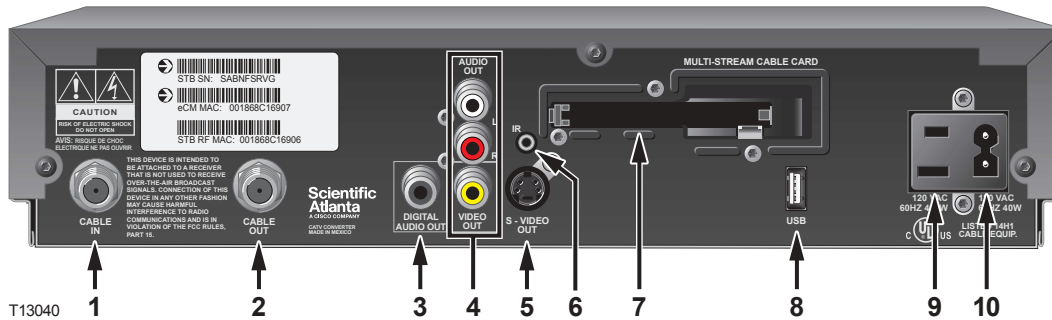


T13040

- | | |
|----------------------------------|---|
| 1 Cable In | Connects to a coaxial cable that delivers the signal from your service provider |
| 2 Cable Out | Connects to a coaxial cable that sends analog audio and video signals to a TV or VCR. These signals are standard-definition TV (SDTV) video and stereo audio |
| 3 Digital Audio Out | Connects to an RCA cable to send a digital audio signal to a surround-sound receiver or other digital audio device |
| 4 Audio Out and Video Out | Connects to the audio and video input of a TV or a VCR |
| 5 S-Video Out | Connects to an S-Video cable that sends an S-Video signal to your TV or VCR. This signal is standard definition, but higher quality than other SDTV connections |
| 6 IR | Connector reserved for future use |
| 7 Multi-Stream CableCARD | Slot for Multi-Stream CableCARD (M-Card) module for decrypting subscription digital channels. This set-top will not operate correctly without an M-Card module. Obtain an M-Card module from your service provider
Note: Your service provider may provide this when you first receive the set-top. |
| 8 USB | Connects to external USB devices such as a keyboard or a mouse |
| 9 AC Outlet | Connects to the AC power cord from another device, such as a TV |
| 10 AC Power Input | Connects to the power cord to deliver power to the set-top |


Note: This illustration may vary from the actual product.

Connecting the Set-Top

 To connect your set-top to your entertainment devices, complete these steps.

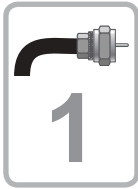

 Connect the coaxial cable that carries the signal from your cable service provider to the CABLE IN connector on the back panel of the set-top.

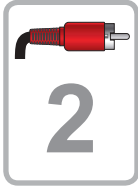

Connect your SDTV to the set-top. See the **Connection Diagrams** section of this guide.



Identify the additional devices you will connect to the set-top and TV. See the **Connection Diagrams** section of this guide.



Plug the set-top and the TV into an AC power source.

Important: To protect the set-top from power surge damage, ground (earth) your cable product to provide some protection against voltage surges and built-up static charges. To avoid these voltage surges that can be caused by lightning storms and power outages, plug the set-top into a surge protector to reduce the risk of damage.



Do not turn on the set-top or TV yet.



Wait several minutes for the set-top to receive the latest software, programming, and service information. One of the following will display on the front panel of the set-top:

- Current time
- Four dashes (----)

Notes: - If the current time appears, the update is complete.
- If four dashes appear, you must call your service provider to get the set-top authorized.

















To begin watching TV, turn the TV on, and press POWER on the front panel of the set-top or on the remote control.

Connections for a Standard-Definition TV and VCR

When using the set-top with an SDTV, you must make *one* of the following connections to view content. Some SDTVs may not have all these connections. In addition, you can make connections to a VCR to archive recordings to a VCR tape. Refer to your TV and VCR user guides and the cabling diagrams in this guide for more detailed information.

Note: The labeling on your TV may vary slightly.

Required Connections to an SDTV (use one)		Set-Top Connections		SDTV Connections	
Composite	When you set up the set-top in SD mode , the Video Out connector on the set-top is configured as a composite video out connector. See the Connection Diagrams section of this guide.	 VIDEO OUT	Video	 VIDEO IN	
		 AUDIO OUT L R		Audio	 L R
S-Video	The S-Video Out connection provides an optimal video connection to SDTVs.	 S-VIDEO OUT	Video	 S-VIDEO IN	
		 AUDIO OUT L R		Audio	 L R
Cable Out	The Cable Out connector provides a video and audio connection to an SDTV.	 CABLE OUT	Audio/Video	 CABLE IN/ ANT IN	
Optional Connection to a VCR		Set-Top Connections		VCR Connections	
VCR	For VCRs with Video and Left and Right Audio connectors, you can use the RCA connections (Video Out and Audio Out Left and Right) on the set-top.	 VIDEO OUT	Video	 VIDEO IN	
		 AUDIO OUT L R		Audio	 L R

View Television Programming

Access Services and Programs

Access cable services and programs by pressing the following keys on the remote control:

- **Guide**—Access the on-screen guide. The on-screen guide displays schedules of TV programs and other services available from your cable service provider, such as video-on-demand and pay-per-view programs.
- **Arrows**—Select a program in the schedule.
- **Info**—Display a specific program description (either from the on-screen guide or while viewing a program).
- **Select**—View a specific program in the guide.

Avoid Screen Burn-In!

Images such as letterbox bars or side bars, bright closed-captioning backgrounds, station logos, or any other stationary images may cause the screen in your TV to age unevenly; this is known as screen burn-in. Refer to the user's guide that came with your TV for more information.



WARNING:

Avoid screen burn-in!

Do not display the same fixed images on your TV screen for extended periods of time.

Troubleshooting

If the set-top does not perform as expected, the following tips may help. If you need further assistance, contact your cable service provider.

No Picture

- Verify that the M-Card module is installed.
- Verify that the power to your TV is turned on.
- If the set-top is plugged into a wall switch, verify that the switch is in the ON position.
Note: You should avoid plugging the set-top into an outlet controlled by a wall switch.
- Verify that all cables are properly connected.
- If your system includes a VCR or stereo, verify that you have properly connected them to the set-top.
- Verify that the TV is set to the proper input channel.

No Color

- Verify that the current TV program is broadcast in color.
- Adjust the TV color controls.

No Sound

- If your setup includes a VCR or stereo, verify that you have properly connected them to the set-top.
- Verify that the volume is turned up.
- Verify that the mute function is not on.

Automatic Software Updates

A message appears on the TV screen when the set-top and the M-Card module are receiving software updates. In addition, download information also appears on the front panel of the set-top during these updates. Wait for the current time to display on the front panel before continuing. When the time appears, the update is complete.

Note: If you need further assistance, contact your service provider.

Frequently Asked Questions

Where Are the Connection Diagrams?

The diagrams at the end of this guide show examples of common ways to connect the set-top to your TV, DVD, and home theater receiver. However, these diagrams do not show every possible combination of devices. Refer to the user's guides that came with your other electronic devices for further information.

 
What Cables Do I Need?

Some of the cables and adaptors shown in the diagrams may not be included with the set-top. Some of the required cables are shown in the connection diagrams.

Connection Diagrams


Connecting to a TV Using Cable Out

Explorer Digital Set-top

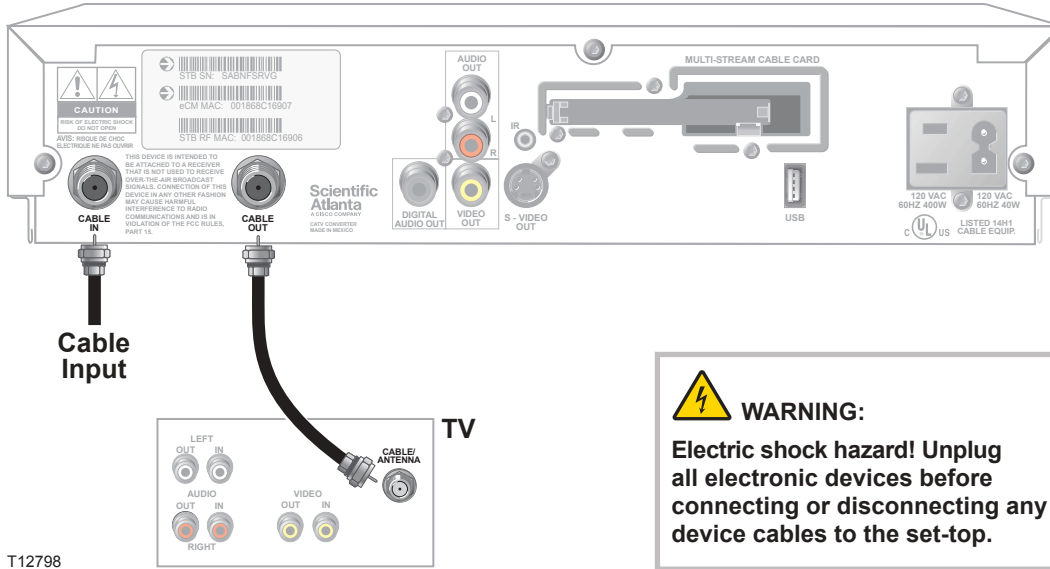


Connecting to a TV Using Video Out and Audio Out

 Explorer Digital Set-top

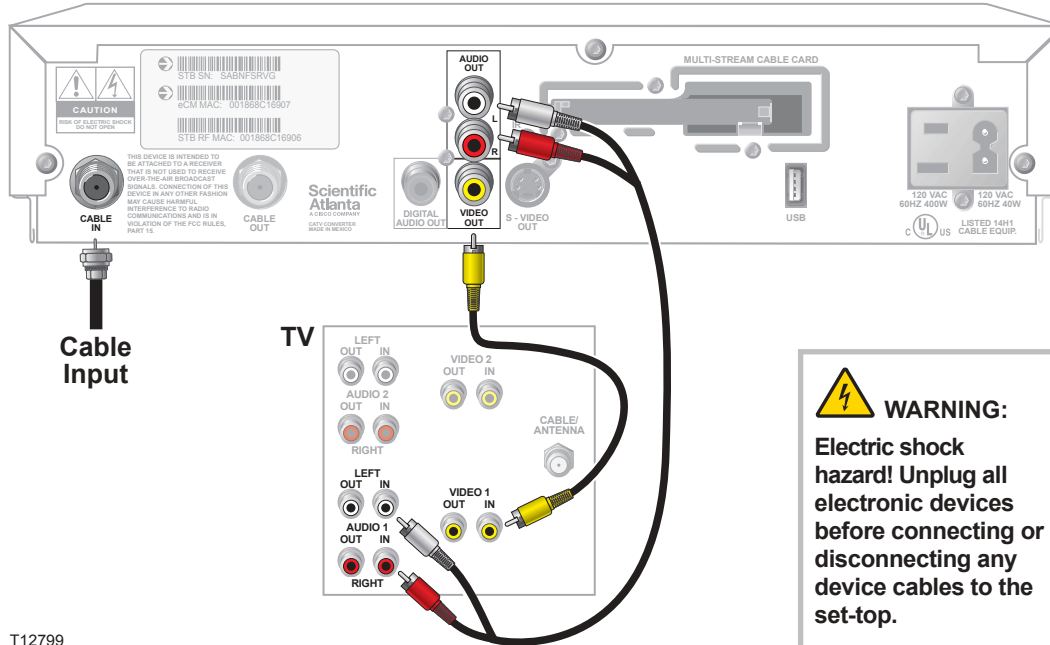


Connecting to a TV and VCR Using Cable Out

 Explorer Digital Set-top

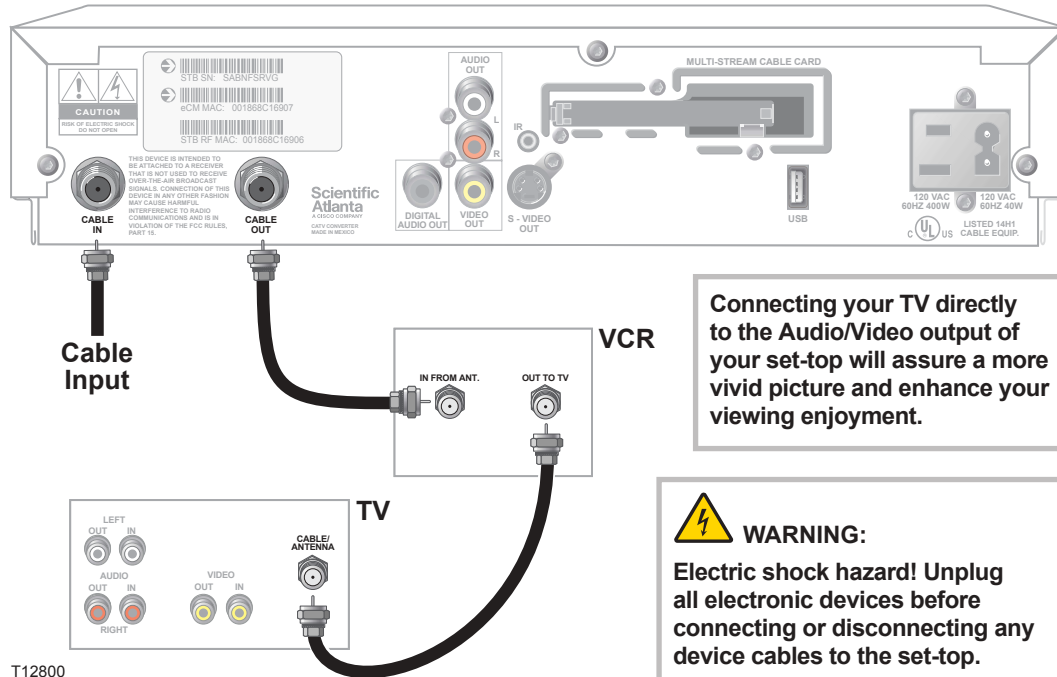


Connecting to a TV and VCR Using Video Out and Audio Out

 Explorer Digital Set-top

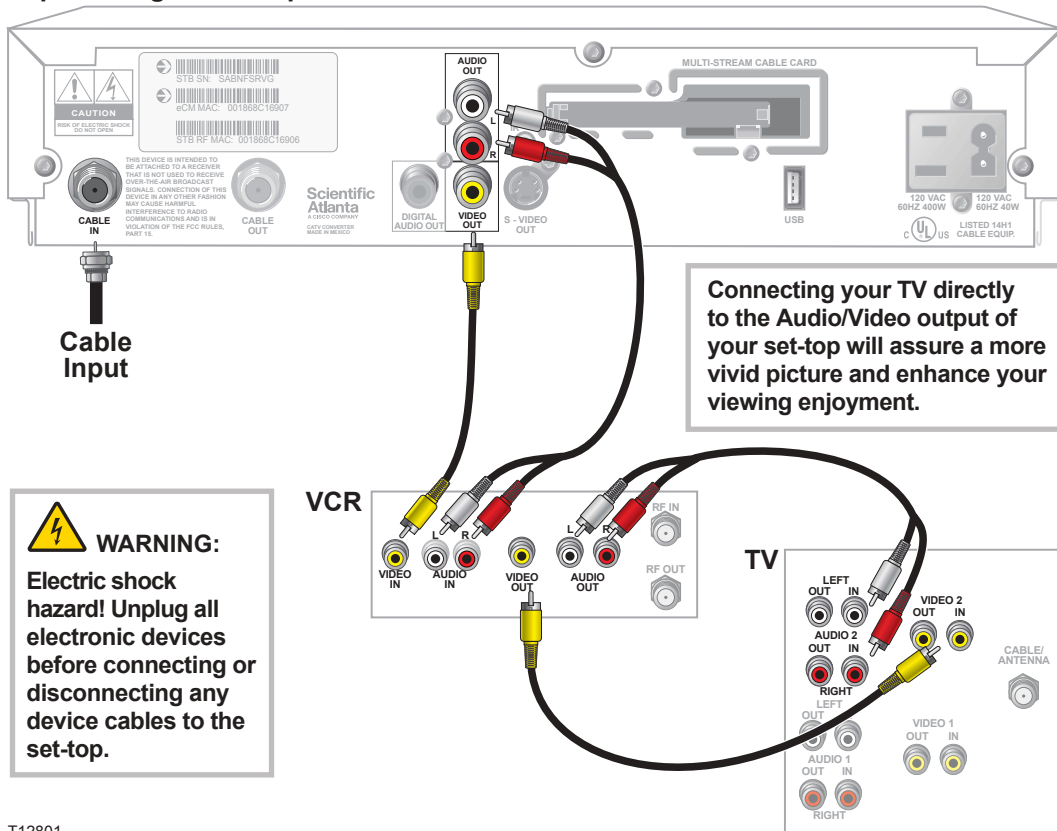

Connecting to a Home Theater Receiver and TV

 Explorer Digital Set-top

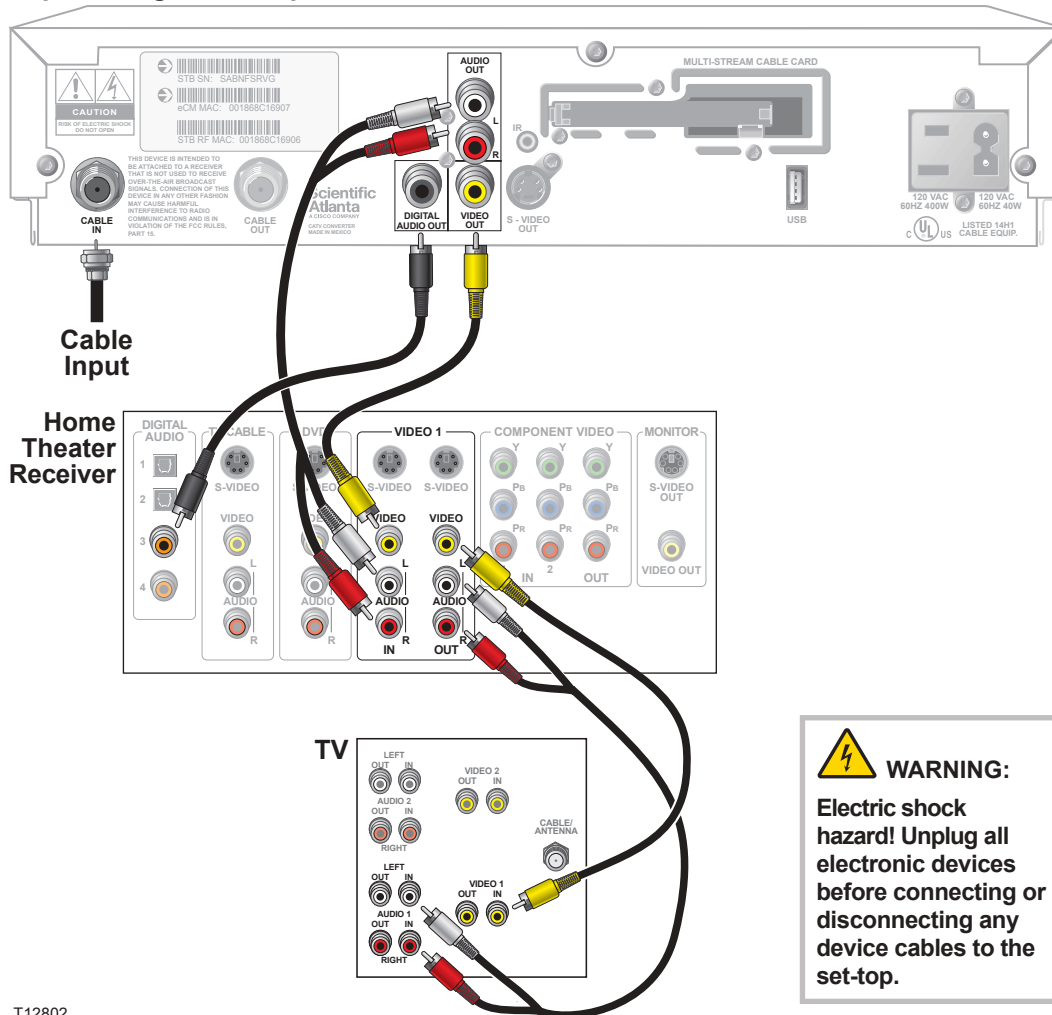

T12802

Index

A

- AC
 - Outlet v, 4
 - Power input 4

B

- Back panel 4
- Burn-in of screen 7

C

- CableCARD 1, 4
- Cables 2
- Cable Out, connector 4
- Compliance, FCC and Canadian EMI Back Cover
- Composite 6
- Connectors
 - See also Front panel; Back panel required for SDTV 6
 - VCR 6, 11
- Connecting the Set-Top to other devices;
 - TV Using Cable Out 10
 - TV Using Video Out and Audio Out 10
 - TV and VCR 11
 - TV and VCR Using Video Out and Audio Out 11
 - Home Theater Receiver and TV 12

D

- Dashes display 5
- Diagrams. See Connecting the Set-Top to other devices
- Display, LED 3

F

- FAQs 9
- FCC compliance Back Cover
- Frequently Asked Questions. See FAQs
- Front panel 3

H

- Home theater system connection 12

I

- IR Sensor 3

K

- Keys. See Front panel; Back panel

L

- LED Display 3

M

- Multi-stream CableCARD 1, 2, 4, 8
- M-Card. See Multi-stream CableCARD

P

- Performance tips. See Troubleshooting
- Picture
 - Doesn't display 8
 - No color 8
- Ports. See Connectors
- Programming, viewing 7

R

- Remote control 7

S

- S-Video 4, 6
- Safety v-vi, 1
- Screen burn-in 7
- SDTV Connections 6
- Serial number, locating 1
- Software updates 8
- Sound, troubleshooting 8

T

- Time display 5
- Troubleshooting 8

U

- Updating, software 8
- USB port 3, 4

V

- VCR connection 6, 11
- View programs 7

FCC Compliance

United States FCC Compliance

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against such interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna, if applicable.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the cable company or an experienced radio/television technician for help.

Any changes or modifications not expressly approved by Scientific-Atlanta, Inc., could void the user's authority to operate the equipment.

The information shown in the FCC Declaration of Conformity paragraph below is a requirement of the FCC and is intended to supply you with information regarding the FCC approval of this device. *The phone numbers listed are for FCC-related questions only and not intended for questions regarding the connection or operation for this device. Please contact your cable service provider for any questions you may have regarding the operation or installation of this device.*

FCC Declaration of Conformity

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:
1) the device may not cause harmful interference, and
2) the device must accept any interference received, including interference that may cause undesired operation.

EXPLORER Digital Set-top Model: 4240C and 4250C Manufactured by: Scientific-Atlanta, Inc.; 5030 Sugarloaf Parkway; Lawrenceville, Georgia 30044; USA Telephone 770-236-1077
--

**Scientific
Atlanta**
A CISCO COMPANY

Scientific Atlanta, A Cisco Company
5030 Sugarloaf Parkway
Box 465447
Lawrenceville, GA 30042

This document includes various trademarks of Scientific-Atlanta, Inc. Please see the Trademarks section of this document for a list of the Scientific-Atlanta, Inc., trademarks used in this document. All other trademarks shown are trademarks of their respective owners.

Product and service availability is subject to change without notice.

© 2007 by Scientific-Atlanta, Inc. All rights reserved.
July 2007

Canada EMI Regulation

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la class B est conforme à la norme NMB-003 du Canada.

20060628FDC

Software and Firmware Use

Scientific-Atlanta, Inc. owns copyrights to the software included in your set-top and furnishes the software to your cable service provider under a license agreement. You may only use or copy this software in accordance with the terms of your cable service provider.

Scientific-Atlanta, Inc. owns copyrights to the firmware in this equipment. You may only use the firmware in the equipment in which it is provided. Any reproduction or distribution of this firmware, or any portion of it, without the express written consent of Scientific-Atlanta, Inc. is prohibited.

Trademarks

Scientific Atlanta, the Scientific Atlanta logo, and Explorer are registered trademarks of Scientific-Atlanta, Inc.

4240C and 4250C are trademarks of Scientific-Atlanta, Inc.

Cisco, the Cisco logo, and Cisco Systems are trademarks or registered trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries.

CableCARD and M-Card are trademarks of Cable Television Laboratories, Inc.

Manufactured under license from Dolby Laboratories.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Dolby is a trademark of Dolby Laboratories.

Macrovision is a registered trademark of Macrovision Corp.

All other trademarks shown are trademarks of their respective owners.

Disclaimer

Scientific-Atlanta, Inc. assumes no responsibility for errors or omissions that may appear in this guide. Scientific-Atlanta, Inc. reserves the right to change this guide at any time without notice.

770.236.5000
www.scientificatlanta.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>