

Series 8600^x Remote Control User's Guide

TV Brands and Codes*

Find your three-number TV code among the following entries. Some brands may have more than one code. All codes have only three numbers. Once you find the correct code for your TV, write it in the box for future reference.

* These codes are REV A of the Model 8650-XT Remote Control; they are subject to change.

Television brand**	Three Number codes	Television brand**	Three Number codes
A-Mark	003	Infinity	027
Akai	004	IBL	027
Anam	032,067	Kawasho	081
Anam National	028	Kenwood	017
AOC	003, 010, 017, 025, 044	Kloss	023
Archer	003	Kloss Novabeam	013
Audiovox	003	KTV	022, 067, 071, 079
Candle	017, 023, 029, 072	Logik	007
Capehart	025	Luxman	029
Carver	027	LXI	024, 027, 047, 052, 054
Citizen	017, 022, 023, 029, 030, 035, 072	Magnavox	011, 013, 015, 017, 027, 038, 072, 073
Concerto	029	MGA	010, 017, 049, 053, 065
Contec	055, 067, 071	Mitsubishi	005, 010, 040, 053, 065
Caig	067	Mitsubishi Unified	049
Crown	022	MTC	010, 017, 029, 030, 034
Curtis Mathes	017, 022, 030	Multitech	074
CXC	067	NAD	054, 058
Daewoo	010, 022, 034, 035	NEC	010, 029, 060
Dayton	022	NEC Unified	017
Electrohome	022	Onwa	067
Emerson	022, 055, 064, 065, 066, 067, 068, 069, 070, 071, 076, 077, 079, 080	Optonica	036, 057
Envision	017	Panasonic	000, 027, 028
Fisher	052, 056	Penney	009, 010, 012, 017, 022, 024, 030, 041, 043, 048
Fortress	036	Penny	019
Fujitsu	066	Philco	010, 011, 013, 015, 017, 027, 072, 073
Funai	066, 067	Philips	001, 027
Futuretech	067	Pioneer	021, 058
GE	000, 012, 014, 016, 024, 028, 063, 065, 080	Portland	010, 022
Goldstar	002, 010, 022, 029, 065	Proton	018, 022, 025, 065
Hallmark	065	Pulsar	008
Hitachi	021, 022, 029, 037, 039, 045, 050, 062, 075	Quasar	000, 028
		Radio Shack	019, 022, 057, 067
		RCA	009, 010, 016, 021, 043, 063, 084

Television brand**

RCA Unified
Realistic
Sampo
Samsung

Sanyo
Scott
Sears

Sharp
Signature
Sony
Sony Unified
Soundesign
Spectricon
SSS
Supre-Macy
Sylvania

Symphonic
Tandy
Tatung
Technics
Techwood
Teknika

Tera
TMK
Toshiba

Tosonic
Totevision
Universal
Vector Research
Victor
Video Concepts
Vidtech
Viking
Wards

Yamaha
Zenith
Zenith Unified
Zonda

Three-number codes

024
052
017, 025, 041
010, 017, 019, 022, 029, 030
046, 052, 056
022, 066, 067, 076
006, 024, 027, 029, 046, 047, 048, 052, 054, 056, 059, 065, 066
022, 036, 051, 057
007
004, 033, 042
001
065, 067, 072
003, 044
010, 067
023
011, 013, 015, 017, 027, 031, 072, 073

061
036
028
000
029
007, 010, 022, 023, 029, 030, 035, 049, 066, 067, 072, 082, 083

018
029, 065
020, 030, 048, 052, 054

071
022
012, 014
017
026
040
010, 065
023
007, 010, 011, 012, 014, 015, 016, 017, 027, 038, 057, 063, 065, 066, 073
010, 017
007
008
003

**All trademarks apply.



Series 8600^x™ Remote Control

Before You Begin

You may use your remote control to operate your 8600^x Home Communications Terminal right away. There are instructions for using the keys on the back of your remote control. But if you want your remote control to operate your TV power on/off, volume and mute controls, you need to follow the instructions that follow.

To control your TV functions, you need to tell your remote control the type of TV you are using. This will enable you to use your remote control to operate the power, on/off, volume and mute controls on your TV. To tell your remote control the type of TV you are using, follow steps 1 through 4.

Step 1.

Find your TV code.

Find the three-number TV code(s) that corresponds to your TV. Most brands have more than one code. Start with the first code.

Step 2.

Turn your TV on.

Step 3.

To tell your remote control to turn your TV on and off, and to control your TV's volume and mute, follow the three steps below.

(If you want your remote control to only turn your TV on and off, skip this step and go to step 4.)

- A. Hold down the TV POWER key.
- B. Enter your three-number TV code.
- C. Release the TV POWER key.

- Your TV should turn off when you enter the third number of the code.
- If your TV does not turn off when you enter the third number of the code, turn to TV Brands and Codes and find the next code for your TV. Repeat step 3 using the next code. Continue repeating this step until your TV turns off.

If none of the codes for your type of TV work, see If You Have A Problem in the guide.

Step 4.

To tell your remote control to ONLY turn your TV on and off, follow the four steps below.

- A. Hold down the TV POWER key.
- B. Press 9
- C. Enter your three-number TV code.
- D. Release the TV POWER key.

- Your TV should turn off when you enter the third number of the code
- If your TV does not turn off when you enter the third number of the code, turn to TV Brands and Codes and find the next code for your TV. Repeat step 3 using the next code. Continue repeating this step until your TV turns off.

If none of the codes for your type of TV work, see If You Have A Problem in the guide.

If You Have A Problem

If you are unable to find the correct code in TV Brands and Codes, the Series 8600^x Remote Control can search all the codes for you. To do this, do the following:

1. Turn your TV on.
2. Hold TV POWER down and press 999 on the number keys to tell your remote control to operate your TV power on/off, volume and mute. Or, press 9999 if you want your remote control to operate only the TV power on/off.
3. Repeatedly press TV POWER until your TV turns off. When your TV turns off, stop pressing TV POWER. (There are at least 85 different codes, so this may take some time.)
4. Press LAST

You may press MENU at any time to end the search.

If your remote control will not operate your TV, try the following:

- Make sure the remote control is correctly programmed - see steps 1 through 4
- Shorten the distance between the remote control and the TV. Also, point the remote control directly at your TV or home communications terminal
- Replace the batteries. Your remote control uses two AA alkaline batteries.

If you replace the batteries in the remote control, you must repeat steps 1 through 4.

8600^x™ is a trademark of Scientific-Atlanta, Inc.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>