SEARS OWNER'S INSTRUCTIONS

FEATURES OF THE MULTI-FUNCTION KEYLESS ENTRY

This remote control can be used with any 53000SRT series garage door opener receiver.

Personalized Code: Up to 10,000 possible combinations. Code can easily be changed if desired.

Operation: Opener activates when 4-digit code and ENTER button are pressed.

If wrong numbers are accidentally pressed, correction can be made immediately. The ENTER key will transmit only the last four digits.

The keypad will blink for 15 seconds after the code is transmitted. During that time you can STOP or REVERSE door travel just by pressing the ENTER key.

The Multi-Function Keyless Entry can be used with any 'SMART' receiver. The keypad will illuminate for 5 seconds at the first push of **ANY** key.

All 53000SRT garage door opener receivers have a separate memory channel for the Multi-Function Keyless Entry to operate the opener.

Ø

Battery

Cover

Power Supply: 12 Volt battery.

MODEL 139.53776 MULTI-FUNCTION KEYLESS ENTRY

To comply with FCC rules, adjustment or modification of receiver and/or transmitter is prohibited, except for changing the code setting and replacing the transmitterl battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.



Children operating or playing with a garage door opener can injure themselves or others. The garage door could close and cause serious injury or death.

Install the door control (or any additional push buttons) out of the reach of children and away from all moving parts of the door and door hardware, but where the garage door is visible. Do not allow children to operate the push button(s) or the remote control(s).

A moving garage door could injure someone under it. Activate the opener only when the door is properly adjusted, you can see it clearly, and there are no obstructions to door travel.

 
Open the keypad cover and remove the battery compartment screw. Set cover aside and remove battery. **NOTE BATTERY POLARITY AS MARKED ON COMPARTMENT.** Follow the installation instructions described below.

 
Battery

INSTALLATION

 Center the keypad at eye level against the selected location on the garage exterior (as shown below).

NOTE: For a one-piece door on a brick, stone or aluminum sided garage, use the optional location shown in the illustration to avoid injury as the door swings up and out.







SETTING THE CODE


You may want someone to help at this point.

The following procedure prevents the opener from learning the code of another remote control that is transmitting.

- 1. Decide on a 4-digit code using numbers from 0 to 9. You can use a number more than once (for example, 4, 0, 4, 1).
- 2. Press the selected code digits on the keypad. PRESS AND HOLD the ENTER button. The keypad light will blink. Press the 'Smart' button on the opener end panel. The adjacent indicator light will flash and the door will begin to move. The receiver has now learned the selected keypad code.

After programming the keypad, test your portable remote control. If the pushbutton(s) no longer activates the door opener, reprogram the remote control.

To change your code at any time, repeat Steps 1 and 2.

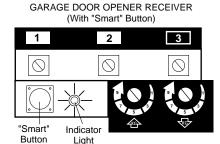

BATTERY: The 12 Volt battery should produce power for at least one year. As long as there is adequate power, the keypad will illuminate and receiver will operate when number and ENTER keys are pressed. Replace the battery when keypad illumination becomes dim.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com