


Quick Guide to the Sekonic L-408

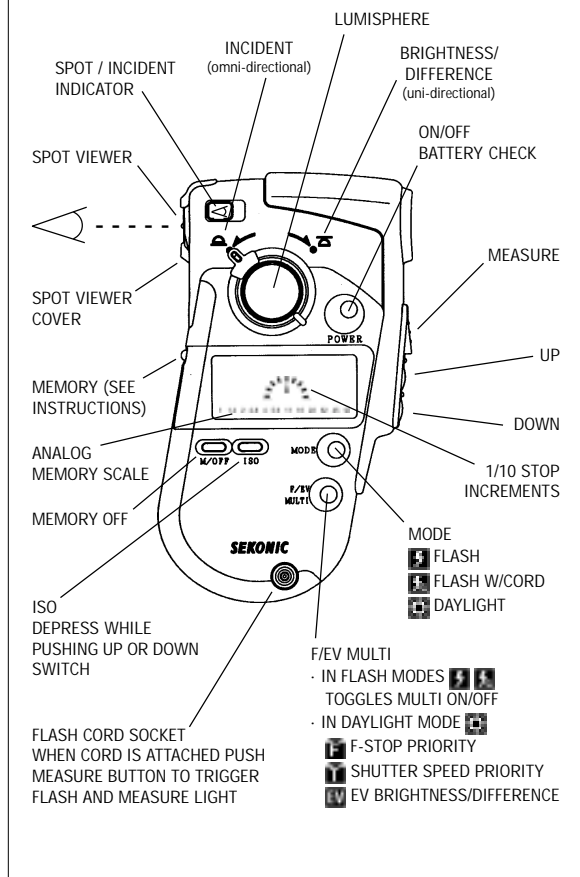

Basic Operation - Sekonic L-408

On/Off/Battery Check

Press Power button. To check battery power hold down button. Power is indicated in 1/10th steps

Set ISO

Hold down ISO button while depressing Up or Down button

Use as Spot Meter

Slide open Spot Viewer Cover, sight through window


Use as Incident Meter

Close Spot Viewer Cover, rotate Lumisphere to high position


Measure Brightness/Contrast Difference

Close Spot Viewer Cover, rotate Lumisphere to low position


Daylight Reading

Select  Daylight Mode, depress Measure button

Cordless Flash Reading

Select  Flash Mode, depress Measure button, manually trigger flash


Flash Reading Using Flash Cord

Select  Flash with Cord Mode, insert flash cord, depress Measure button

EV Reading

Select  Daylight Mode, depress F/EV Multi button to see 

Select Shutter or Aperture Priority

Select  Daylight Mode. Toggle F/EV Multi button.

Shutter priority =  Aperture priority = 

Set Exposure Compensation

Press ISO and F/EV Multi simultaneously and toggle Up/Down switch to set in 1/10th step increments

PRINTED IN USA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>