operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception. If this equipment does cause interference to radio are television reception (which you can

If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:

Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).

Move the unit away from the equipment that is receiving interference.

Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits. If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.
This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

**Before You Begin** 

• Do not use your system immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction. If moisture forms inside this

to malfunction. If moisture forms inside this system, it may not operate properly. To correthe problem, turn off the power and wait about 30 minutes for moisture to evaporate. This system is fitted with a laser. To avoid accidents, it is to be opened by qualified technicians only.

cover the laser lens and/or the tray could be bumped into accidentally.

• Do not place the system near wet areas such as bathrooms and pool side. Avoid storing the system at humid places or near abnormally heated areas.

• Power is continuously supplied to the system. To disconnect power completely, unplug the power cord from the power outlet.

• Ensure minimum distance around the

Ensure minimum distance around the apparatus for sufficient ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, etc.
 No naked flame source, such as lighted candles, should be placed on the apparatus.
 Attention should be paid to enviornment aspects of battery disposal.

Plug the power supply cord into the AC power jack on the back of the unit, and into an AC power supply outlet that accepts the plug supplied with your unit.

**Useful Advice** 

### For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different sort. Be not a transfer or use a different plug of the different one. Do not attempt to bypass this safety feature.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Have a Blast-Just Not in your marker should be added to the sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone are in place.

**Battery Power** 

You can insert 6 C-sized alkaline batteries (not supplied) and you can take your stereo just about



## **Safety Information**

### **Technical Information**

Product: Portable CD Radio Brand: RCA Model: RCD029/RCD030

### **Electrical** Consumption

Power Supply: 120V ~ 60Hz Power Consumption: 15 Watts

lvaro Obregón No. 151. Piso 13. Col. Roma. Delegación Cuauhtémoc C.P. 06700. México, D.F. Telefono: 52-55-11-020360 RFC: CTM-980723-KS5

In the event that service should be required, you may need the model number. In the space below record the date and place of purchase: Model No.

## **Service Information**

This product should be serviced only by those



WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT

AC ~ IN - Insert the power cord here.

**Bottom View** 

Antenna - Extend the antenna for better radio

OPEN - Push and slide to lift up the battery

## **Important Information**

### **Safety Precautions**

Never open the cabinet under any circumstances. Any repairs or internal adjustments should be made only by a trained technician.
Never operate this product with the cabinet removed.
Do not use your System immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.

Keep vour unit away from humid areas

the system to malfunction.
Keep your unit away from humid areas
and abnormally hot places.
Do not touch the player with wet hands.
f any liquid enters the player cabinet,
take the player to a trained technician

take the player to a trained technician for inspection.

This compact disc player uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.


Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs.

 Do not touch the pick-up lens which is located inside the disc compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time. If the lens becomes dirty, clean it with a soft brush, or use an air blower brush designed for camera lenses.
 The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
 No naked flame sources, such as lighted candles, should be placed on the apparatus. Do not touch the pick-up lens which is

apparatus.
Attention should be drawn to the

Display

Minimum distances around the apparatus for sufficient ventilation.

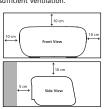

The ventilation should not be impeded by covering the ventilation opening with items, such as newspaper, table-cloths, curtains, etc.
The rating plate is located at the bottom cabinet of apparatus.

### **Headset Safety**

- Do not play your headset at high volume. Hearing experts warn against extended high-volume play.
   If you experience ringing in your ears, reduce volume or discontinue use.
   You should use with extreme caution or temporarily discontinue use in potentially hazardous situations.

  Even if your headset is an open air designed.

- Even if your headset is an open-air designed to let you to hear outside sounds, do not turn up the volume so high that you are unable to hear what is around you.

### Don't Infringe

PROGRAM REPEAT 3

FM Whx 5

7. Radio band.

REPEAT

6. In CD mode - displays track information In radio mode - displays radio frequency.

8. AUX mode is selected for connecting with mp3

This product should only be used for the purposes for which it is sold, that is, entertainment, violating no copyright law. Any attempts to use this product for unintended purposes are unlawful and therefore not condoned by Thomson.

# RСЛ

user manual

IMPORTADOR
Comercializadora Thomson de México, S.A. de C.V.
Álvaro Obregón No. 151. Piso 13.
Col. Roma. Delegación Cuauhtémoc
C.P. 06700. México, D.F.
Telefono: 52-55-11-020360
RFC: CTM-980723-KS5

EXPORTER EXPORTER
Thomson Inc.
P.O. Box 1976
Indianapolis, IN 46206 - 1976
©2006 Thomson Inc.
Trademark(s) © Registered
Marque(s) © Deposée(s)
Marca(s) © Registrada(s)
www.rca.com Printed in China / Impreso en China

5625 4840 (EN/F/E)

## Radio

### **Selecting Radio Mode**

Slide the **SELECTION** switch to RADIO

### **Selecting Radio Band**

Slide the **BAND AM/FM** switch to select FM or AM band.

### Tuning to a station

## Típs: Extend or reposition the antenna for better FM reception. Rotate the unit for better AM reception.

Turn the **TUNING** knob to select radio frequencies.

## Selecting mp3 Input

Slide the **SELECTION** switch to position

mp3 Input 🖫

the audio cable into the mp3 player's headphor jack and start playback of the mp3 player. Close the storage compartment.



## Connecting mp3 Player

1. Press REV or F.FWD to skip to the

Press STOP to stop playback.

## **RCD029 RCD030**

## **CD Playback**

## Slide the **SELECTION** switch to CD position.

### **Loading Music**

Press the **PUSH TO OPEN** button on the unit front to slide disc tray out. Place a disc on the disc tray with the label side facing up and then push the disc tray back in.

In stop mode, press **PLAY/PAUSE** to begin playback.

During playback, press PLAY/PAUSE to pause playback. Press again to resume.

The ► icon flashes in pause mode.


### **Skipping and Searching**


2. Press and hold REV or F.FWD to search

## CD Playback

## **Creating Programs**

**AC Power** 

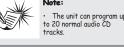

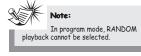

In CD stop mode, press **PROGRAM** to enter program mode.

The PROGRAM icon flashes on the display. "PO1" (first program position) shows briefly on the display followed by "00" flashing.

2. Press **REW** or **F.FWD** to select the track to

programming.

5. Press **PLAY/PAUSE** in program mode to start program playback.

 Press **PROGRAM** to store the selected 4. Repeat step 2 and 3 to continue

## Displaying and Editing


Press **PROGRAM** repeatedly to recall and display program. Program position shows first, followed by track number. While track number is displayed, press **REW** or **F.FWD** to edit track number. Press **PROGRAM** to store newly selected track.

## **Deleting Programs**

Press **STOP** in CD stop mode to delete all the stored tracks.



Opening the CD compartment door or switching mode will delete all the stored tracks.

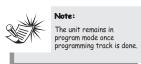

## **Back View**

## **Top View**

TUNING - Selects radio frequency.

supplied) and you can take your stereo just about anywhere.

• Open the battery compartment door on the bottom of the unit by pressing down on the tab and pulling out the cover.

• Before inserting the batteries, observe the polarities (that is, + and -) of the battery, then relate the polarities to the engraved diagram located on the battery compartment door. Insert batteries in the battery compartment.

PROGRAM - Enters CD program

BASS - Turns bass boost on and off.

Note that the AC line cord must be unplugged from the jack on the back of the unit to operate on batteries.

Important Battery Information

Remove the batteries to avoid leakage if you do not use your system for more than one month
Siccard leaky batteries immediately as leaking batteries may cause skin burns or other personal injuries. Dispose of batteries in the proper manner, according to provincial and local results in the proper.

regulations.

• Any battery may leak electrolyte under the following circumstances:

- if mixed with a different battery type,

if mixed with a different battery type,
if inserted incorrectly,
if all batteries are not replaced at the same time,
if dlisposed of in fire, or
if an attempt is made to charge a battery not
intended to be recharged
• Be sure to remove batteries when storing the
set for more than 30 days. Leaky batteries can
badly damage the system. Be sure to dispose of
leaky, weak or dead batteries properly according
to federal, state, and local regulations. To prevent
injury or damage, do not reverse batteries and do
not mix battery type.

## **General Controls**

BAND AM/FM - Selects AM or FM band .

SELECTION ( ) / CD/ RADIO/ OFF) - Selects operation mode. To switch off the unit, select OFF.

VOL. - Adjusts volume. PUSH TO OPEN - Push to open the mp3
device storage compartment door. Push the



**REW** - In CD mode - goes back to the previous track or searches backward.

**Troubleshooting Tips** 

Unplug the unit for a moment, and then plug it back in.
 Check the outlet by plugging in another device

Adjust the antenna for better reception
 Try turning off electrical appliances near the unit, such as hair dryers, vacuum cleaners, or fluorescent lights

Adjust volume setting.Make sure you've selected the correct function

Make sure you've put a CD in the tray
 Make sure the CD's label is facing up
 Try another CD
 Make sure that Pause mode is not activated
 Make sure CD function is selected

Ensure volume of the mp3 player is turned up.

• Clean the CD (as explained in "Maintenance")
• Check CD for warping, scratches, or other damage

In case of misfunction due to electrostatic discharge just reset the product (disconnect and reconnect of the power source may be required) to resume normal operation.

PLAY/PAUSE - Starts and pauses playback.

Problem Solution

CD sound skips

No sound in 🖥

**ESD Remark:** 

## 000

**F.FWD** - In CD modes - goes to the next track or searches forward.

## Front View

STOP - In CD modes - stops playback **PUSH TO OPEN** - Opens disc tray. Push the

## **Sound Feature**

### **Bass Boost System**

1. Program mode is activated

2. Repeat mode is activated.

3. Shuffle mode is activated

4. Playback in progress

5. Radio frequency unit

Press BASS to turn the digital bass boost

**Maintenance** Cleaning the exterior

Disconnect the system from AC power before cleaning the exterior of the unit with a soft dust cloth

 Clean the exterior with a soft clean cloth or slightly moistened chamois leather. DO NOT use solvents as it may cause damage to the unit. **Handling CDs** 

 Do not touch the signal surfaces. Hold CDs by the edges, or by one edge and
 the hole Do not affix labels or adhesive tapes to the label surfaces. Do not scratch or damage the label.

Make sure CDs are stored in their original case after use. Keep them away from damp, humid or abnormally heated places.

## **Cleaning CDs**

Dirty CDs can cause poor sound quality. Always keep CDs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.

 If a CD becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt awa gently, and then remove any water drops with a dry cloth. Do not use record cleaning sprays or antistatic agents on CDs. Also, never clean CDs with benzene, thinner, or other volatile solvents which may cause damage to disc surface.

**CD Lens Care** When your CD lens gets dirty it can also cause the system to output poor sound quality. To clean the lens you will need to purchase a CD lens deaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the ones accompanying the lens cleaner.

## **Technical Specification**

Power supply: 120V-60Hz
Dimensions ( H x W x D mm):
Unit size - 155 x 336 x 222
Weight: 1.87 kg
CD player: Response curve (+/- 2dB):
60Hz to 20 kHz
Rating Plate: Look for it at the bottom of the set.

The descriptions and characteristics in this owner's manual are for the purpose of general reference on not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and



# It is important to read this instruction book prior to using your new product for the first time.


## **Selecting CD Mode**

EN/F/E

**Playing and Pausing** 

The ▶ icon is displayed.

**Stoping Playback** 

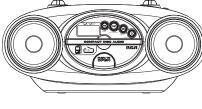

**Playback Mode** In CD mode, press **MODE** repeatedly to select among the following playback modes with icons show on the display :

 REPEAT - Repeats all tracks 

REPEAT (flashes) - Repeats current track

































Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com