

## FCC information

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product. This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for

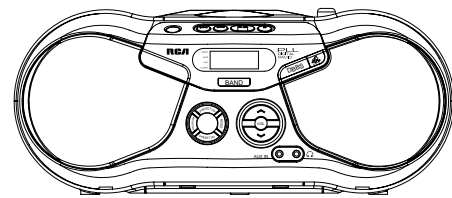

## ENE

It is important to read this instruction prior to using your new product for the first time. Es importante leer este manual antes de usar por vez primera su equipo.

## Before you begin

### Useful advice

- Do not use your system immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction. If moisture forms inside this system, it may not operate properly. To correct the problem, turn off the power and wait about 30 minutes for moisture to evaporate.
- This system is fitted with a laser. To avoid accidents, it is to be opened by qualified technicians only.
- Never leave the tray open as dust could cover the laser lens and/or the tray could be bumped into accidentally.
- Do not place the system near wet areas such as bathrooms and pool side. Avoid storing the system at humid places or near abnormally heated areas.
- Power is continuously supplied to the system. To disconnect power completely, unplug the power cord from the power outlet.
- Ensure minimum distance around the apparatus for sufficient ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, etc.
- No naked flame source, such as lighted candles, should be placed on the apparatus.

### AC power

Plug the power supply cord into the AC power jack on the back of the unit, and into an AC power supply outlet that accepts the plug supplied with your unit.

### Battery power

You can insert 6 D-sized alkaline batteries (not supplied) and you can take your stereo just about anywhere.

- Open the battery compartment door on the bottom of the unit by pressing down on the tab and pulling out the cover.
- Before inserting the batteries, observe the polarities (that is, + and -) of the battery, then relate the polarities to the engraved diagram located on the battery compartment door. Insert batteries in the battery compartment.

**Note that the AC line cord must be unplugged from the jack on the back of the unit to operate on batteries.**

## AUDIO AND COMMUNICATIONS DIVISION PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE IMPORTANT SAFETY INSTRUCTIONS

 
Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Before using the product, please follow and adhere to all warnings, safety and operating instructions located on the product and in the user book. Save all instructions for future reference.

additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio-TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies. This product complies with DHHHS Rules 21 CFR subchapter J. Applicable at the date of manufacture.

### For your records

In the event that service should be required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number:  
 Model No.:  
 Date of Purchase:  
 Place of Purchase:  
 Serial No.:

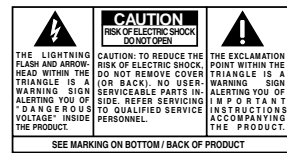

SEE MARKING ON BOTTOM / BACK OF PRODUCT  
**WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

- Do not expose product to rain and do not use near water; such as, sink, wet basement, swimming pools, etc.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, bookcase or cabinet that may prevent air flow through vent openings.
- Do not handle the unit or power cord when your hands are wet or damp.
- Carts and Stands — The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- Damage Requiring Service—This product should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been

- Do not expose product to extreme temperatures such as found near a hot radiator or stove, or in a car parked in the Summer sun.
- Connect power cord only to AC power source as marked on the product.
- Some products employ a polarized AC line plug (one blade is wider). This is a safety feature. The plug will go in the power outlet only one way. If the plug doesn't go into the outlet completely, turn the plug over and put it in the other way. If it still doesn't fit, contact a qualified electrician to change the outlet. Do not defeat the safety purpose of the polarized plug.
- Route power cord to prevent it from being pinched, or walked on, or melted by a hot stove or radiator.
- To clean cabinet, unplug AC power cord, then use a soft cloth dampened only with water.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Unplug AC power cord from outlet during a lightning storm or when product is left unused for a long period of time to prevent damage due to lightning or power line surges.
- Care should be taken so that objects do not fall and liquids do not spill into the product.
- Never add accessories that the product has not been designed to accommodate.
- Use only the manufacturer's approved mounting instructions and hardware when installing product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.

- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- Do not handle the unit or power cord when your hands are wet or damp.
- Carts and Stands — The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- Damage Requiring Service—This product should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been
- damaged; or
- B. Objects have fallen, or liquid has been spilled into the product; or
- C. The product has been exposed to rain; or
- D. The product does not appear to operate normally or exhibits a marked change in performance; or
- E. The product has been dropped, or the cabinet damaged.
- When service or repairs are completed, ask the service technician to perform the safety check described in the service manual and to confirm that replacement parts have the same safety characteristics as the original parts.
- Overloading - Do not overload the wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.
- IF YOUR PRODUCT OPERATES ON BATTERIES,** adhere to the following precautions:
  - A. Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, or if all batteries are not replaced at the same time.
  - B. Any battery may leak electrolyte or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged.
  - C. Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to provincial and local regulations.
  - IF YOUR PRODUCT IS EQUIPPED WITH ANTENNA TERMINALS,** and if an outdoor antenna is connected, be sure the system is grounded so as to provide some protection against voltage surge and built-up static charges. An outdoor antenna should be located away from power lines.
  - IF PRODUCT IS TO BE CONNECTED TO A CATV SYSTEM,** call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## General controls

### Top view

**SOURCE** to select among the radio, CD, AUX IN and power off modes.  
 ◀▶ to go to the previous track/file or search backward. To tune down frequency in the radio mode.  
 ▶▶ to go to the next track/file or search forward. To tune up frequency in the radio mode.  
 ■ to start and pause the playback.  
 ■ to stop the playback.  
**OPEN** Press to open the disc compartment door.

### Front view

**BAND** to select the radio band.  
**DBBS** to switch on or off the bass boost.  
 🎵 To select among Rock, Jazz, Pop, Classic and equalizer off modes.  
**VOL** To adjust the volume.  
**PRESET UP / PRESET DN** to select the radio preset stations.  
**PROGRAM** to enter the program mode and confirm the program settings. To set the radio preset channels in the radio mode.  
**MODE** to select among the repeat current track/file, repeat all tracks/files and random playback modes.  
**AUX IN** To connect an audio cable for external audio input. Select AUX IN mode by pressing **SOURCE**.  
 🎧 To connect the headphones.

- Do not expose product to extreme temperatures such as found near a hot radiator or stove, or in a car parked in the Summer sun.
- Connect power cord only to AC power source as marked on the product.
- Some products employ a polarized AC line plug (one blade is wider). This is a safety feature. The plug will go in the power outlet only one way. If the plug doesn't go into the outlet completely, turn the plug over and put it in the other way. If it still doesn't fit, contact a qualified electrician to change the outlet. Do not defeat the safety purpose of the polarized plug.
- Route power cord to prevent it from being pinched, or walked on, or melted by a hot stove or radiator.
- To clean cabinet, unplug AC power cord, then use a soft cloth dampened only with water.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Unplug AC power cord from outlet during a lightning storm or when product is left unused for a long period of time to prevent damage due to lightning or power line surges.
- Care should be taken so that objects do not fall and liquids do not spill into the product.
- Never add accessories that the product has not been designed to accommodate.
- Use only the manufacturer's approved mounting instructions and hardware when installing product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.

- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- Do not handle the unit or power cord when your hands are wet or damp.
- Carts and Stands — The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- Damage Requiring Service—This product should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been
- damaged; or
- B. Objects have fallen, or liquid has been spilled into the product; or
- C. The product has been exposed to rain; or
- D. The product does not appear to operate normally or exhibits a marked change in performance; or
- E. The product has been dropped, or the cabinet damaged.
- When service or repairs are completed, ask the service technician to perform the safety check described in the service manual and to confirm that replacement parts have the same safety characteristics as the original parts.
- Overloading - Do not overload the wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.
- IF YOUR PRODUCT OPERATES ON BATTERIES,** adhere to the following precautions:
  - A. Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, or if all batteries are not replaced at the same time.
  - B. Any battery may leak electrolyte or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged.
  - C. Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to provincial and local regulations.
  - IF YOUR PRODUCT IS EQUIPPED WITH ANTENNA TERMINALS,** and if an outdoor antenna is connected, be sure the system is grounded so as to provide some protection against voltage surge and built-up static charges. An outdoor antenna should be located away from power lines.
  - IF PRODUCT IS TO BE CONNECTED TO A CATV SYSTEM,** call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

### Display

- Sound equalizer modes
- Auxio-in mode selected
- Program mode activated
- Repeat mode
- Disc contains mp3 files
- DBBS mode activated
- Random mode
- Playback in progress
- Radio frequency unit
- Radio band
- Displays track/file number, volume level, radio frequency, preset station number and program location number during corresponding operations.

## Important information

## English

### For your safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug will not go into the outlet completely, turn the plug over and try to insert it the other way. If it still does not fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

### Service information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

### Technical information

Product: Portable CD radio  
 Brand: RCA  
 Model: RCD200

### Electrical consumption

Power Supply: 120V - 60Hz  
 Power Consumption: 15 Watts

### IMPORTER

Comercializadora Thomson de México, S.A. de C.V.  
 Álvaro Obregón No. 151. Piso 13.  
 Col. Roma. Delegación Cuauhtémoc  
 C.P. 06700, México, D.F.  
 Telefono: 52-55-11-020360  
 RFC: CTM-980723-K55

### EXPORTER

 
 
Thomson Inc.  
 P.O. Box 1976  
 Indianapolis, IN 46206 - 1976  
 ©2007 Thomson Inc.  
 Trademark(s) © Registered  
 Marque(s) © Déposé(s)  
 Marca(s) © Registrad(s)  
 www.rcaudiovideo.com  
 Printed in China / Impreso en China

## Important information

### Safety precautions

- Never open the cabinet under any circumstances. Any repairs or internal adjustments should be made only by a trained technician.
- Never operate this product with the cabinet removed.
- Do not use your system immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
- Keep your unit away from humid areas and abnormally hot places.
- Do not touch the player with wet hands. If any liquid enters the player cabinet, take the player to a trained technician for inspection.
- This compact disc player uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.
- Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs.
- Do not touch the pick-up lens which is located inside the disc compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time. If the lens becomes dirty, clean it with a soft brush, or use an air blower brush designed for camera lenses.

- The apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- Minimum distances should be kept around the apparatus for sufficient ventilation.

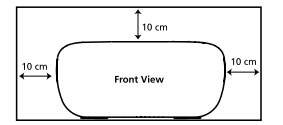

- The ventilation should not be impeded by covering the ventilation opening with items, such as newspaper, table-cloths, curtains, etc.
- The rating plate is located at the bottom cabinet of apparatus.


## Radio
 
### Select radio mode

When the unit is turned off, press **SOURCE** to turn the unit on. Press **SOURCE** repeatedly to select radio mode.

### Select radio band

Press **BAND** to select FM or AM band.



### Tuning to a station

- Press ◀▶ to tune down radio frequency.
- Press ▶▶ to tune up radio frequency.
- Press and hold ◀▶ or ▶▶ to automatically tune to the next station.

### Setting preset stations

- In the radio mode, press **BAND** to select a radio band.
- Press ◀▶ or ▶▶ to select the station to be saved as a preset station.
- Press **PROGRAM**.
- Press **PRESET UP** or **PRESET DN** repeatedly to assign a preset station number.
- Press **PROGRAM** to confirm.
- Repeat steps 2 to 5 to set additional preset stations.
- There are 20 preset locations for FM and 12 preset locations for AM on this unit.

### Using Presets

- Press **BAND** to select a radio band.
- Press **PRESET UP** or **PRESET DOWN** repeatedly to access the desired preset stations.

## CD playback

### Selecting CD mode

When the unit is turned off, press **SOURCE** to turn the unit on. Press **SOURCE** repeatedly to select the CD mode.

### Loading music

Press the **OPEN** button to open the disc compartment door. "-- --" shows on the display when the door is open. Place a disc on the disc tray with the label side facing up and then close the door. "-- --" flashes on the display when disc is being read. The total number of track/file is then shown on the display.

### mp3

When playing an mp3 disc, the display shows the total number of tracks without the folder structure.

### Play and pause

- In stop mode, press ▶ to begin playback. The ▶ icon is displayed.
- During playback, press ▶ to pause playback. Press again to resume. The ▶ icon and the current track/file number are flashing in the pause mode.

### Skip and search

- Press ◀▶ or ▶▶ to skip to the previous or next track respectively.
- Press and hold ◀▶ or ▶▶ to search quickly current track backward or forward respectively.

### Stop playback

Press ■ to stop the playback.

### Playback mode

In CD / mp3 mode, press **MODE** repeatedly to select among:

- REPEAT 1 - Repeats current track/file.
- REPEAT ALL - Repeats the entire disc.
- ⊖ - Random playback.
- (No icon) - Normal playback.

## CD playback

### Creating programs

- The unit can program up to 64 normal audio CD tracks and 64 mp3 tracks.
- Folder program is not supported by this unit.

- In the CD stop mode, press **PROGRAM** to enter the program mode. The PROGRAM icon shows on the display with "P01" (first program location) and "000" (for selecting track/file number) flash on the display.
- Press ◀▶ or ▶▶ to select the track to be stored.
- Press **PROGRAM** to store the selected track.
- Repeat step 2 and 3 to continue programming.
- Press ▶▶ in the program mode to start the program playback. Press ■ to exit the program creating mode.

The unit remains in program mode once programming track is done. In the program mode, random playback mode cannot be selected.

### Displaying and editing program list

- Press **PROGRAM** repeatedly to recall and display the program.
- While track number is displayed, press ◀▶ or ▶▶ to edit the track number. Press **PROGRAM** to store the newly selected track.

### Deleting program list

Opening the CD compartment door or switching mode will delete all the stored tracks.

### Poor radio reception

- Adjust the antenna for better reception
- Try turning off electrical appliances near the unit, such as hair dryers, vacuum cleaners, or fluorescent lights

### CD doesn't play

- Make sure you've put a CD in the tray
- Make sure the CD's label is facing up
- Try another CD
- Make sure that Pause mode is not activated
- Make sure CD function is selected

### ESD remark:

In case of misfunction due to electrostatic discharge just reset the product (disconnect and reconnect of the power source may be required) to resume normal operation.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>