

 
IMPORTADOR  
Comercializadora Thomson de México, S.A. de C.V.  
Miguel de Cervantes Saavedra 57  
Col. Ampliación Granada  
C.P. 11529 Mexico D.F.  
Teléfono: (55)25 81 53 20  
RFC: CTM-980723-KS5

0151

EXPORTER  
Thomson multimedia Inc.  
P.O. Box 1976  
Indianapolis, IN 46206 -1976  
© 2002 Thomson multimedia Inc.  
Trademark(s) ® Registered  
Marca(s) Registrada(s)  
Marque(s) ® Déposé(e)s  
55305630 Rev.1 (EN/F/E)  
www.rca.com  
Printed In China / Impreso en China

# RCA

u  
s  
e  
r  
m  
a  
n  
u  
a  
l

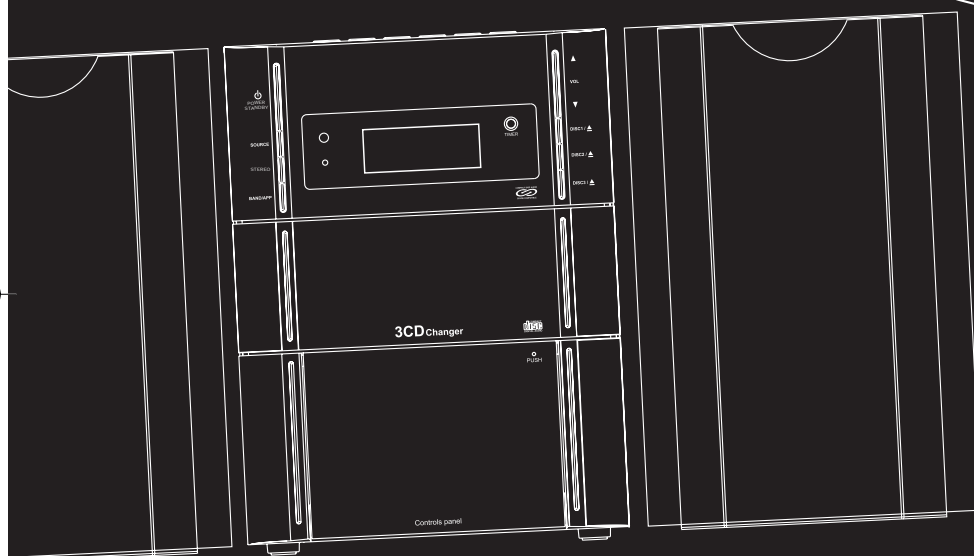

## RS2005/RS2007

It is important to read this instruction book prior to using your new product for the first time.  
Es importante leer este manual antes de usar por vez primera su equipo.

# FCC Information

EN

## FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. In accordance with FCC requirements, changes or modifications not expressly approved by Thomson multimedia Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

Have a Blast- Just Not in Your Eardrums

Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphones are in place.



## Technical specification

Product: Compact Audio System

Brand: RCA

Model: RS2005 / RS2007

## Electrical Consumption:

Power Supply: 120V~ 60 Hz

Power consumption: 15 Watts

## IMPORTER

Comercializadora Thomson de México, S.A. de C.V.

Miguel de Cervantes Saavedra 57

Col. Ampliación Granada

 
C.P. 11529 Mexico D.F.

Telefono: (55)25 81 53 20

RFC: CTM-980723-KS5

## For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

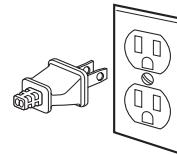

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

## For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Model No.

Remote Control No.

Date of Purchase

Place of Purchase



Serial No.

## Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

# Safety Information

EN

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
THE LIGHTNING FLASH AND ARROW-HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.	CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

**WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

## Table of Contents

<p><b>FCC Information</b></p> <p><b>Safety Information</b></p> <p><b>Getting Started . . . . .2</b></p> <p>Unpacking the system . . . . .2</p> <p>Back View . . . . .2</p> <p>Installation . . . . .2</p> <p><b>General Controls . . . . .3</b></p> <p>Main Unit . . . . .3</p> <p>Remote Control . . . . .4</p> <p><b>Display Settings</b></p> <p>Display . . . . .5</p> <p>Display Clock / Timer . . . . .5</p> <p>    Setting the Clock . . . . .5</p> <p>    Setting the Timer . . . . .5</p> <p>    Activating the Timer . . . . .5</p> <p>    Sleep Mode . . . . .5</p> <p><b>Sound Features . . . . .6</b></p> <p>X-Boost . . . . .6</p> <p>Volume Control . . . . .6</p> <p>Muting Audio . . . . .6</p> <p><b>CD Player</b></p> <p>Notes on CD-R/RW Disc . . . . .6</p> <p>Loading Discs . . . . .6</p>	<p>Playing Discs . . . . .6</p> <p>    Play and Load</p> <p>    Simultaneously . . . . .6</p> <p>    Skipping a Disc . . . . .6</p> <p>    Searching Through a CD . . . . .6</p> <p>    Shuffling the Play Order . . . . .7</p> <p>    Sampling Tracks . . . . .7</p> <p>    Repeat . . . . .7</p> <p>    Setting Up a CD Program . . . . .7</p> <p>    Playing a Program List . . . . .7</p> <p>    Display and Edit the Program List . . . . .7</p> <p>    Deleting Program List . . . . .7</p> <p><b>Radio . . . . .8</b></p> <p>Selecting Tuner Band . . . . .8</p> <p>Tuning to a Station . . . . .8</p> <p>Using Presets . . . . .8</p> <p>Auto Preset Programming . . . . .8</p> <p>Manually Setting Presets . . . . .8</p> <p>Suppressing Stereo Signal . . . . .8</p> <p><b>Tape Player</b></p> <p>Playing a Tape . . . . .9</p> <p>Recording . . . . .9</p> <p>    From Tuner . . . . .9</p> <p>    From CD . . . . .9</p>	<p><b>Troubleshooting Tips . .10</b></p> <p><b>Maintenance . . . . .11</b></p> <p>Cleaning . . . . .11</p> <p>CD Player . . . . .11</p> <p>Tape Player . . . . .11</p> <p>Handling CDs . . . . .11</p> <p>Cleaning CDs . . . . .11</p> <p>CD Lens Care . . . . .11</p> <p><b>Important Information 12</b></p> <p>Safety Precautions . . . . .12</p> <p>Important Battery Information . . . . .12</p> <p>Headset Safety . . . . .12</p> <p>Don't Infringe . . . . .12</p> <p>Technical Specification . . . . .12</p> <p><b>Limited Warranty (U.S.) . . . . .13</b></p> <p><b>Limited Warranty (Canada) . . . . .15</b></p>
---	--	---

 
# Getting Started

## EN Unpacking the system:

You should have the following:


- one main unit (with 2 main speakers);
- one remote control;
- one user's guide;
- one safety leaflet.
- Owner and registration Card

## Back View

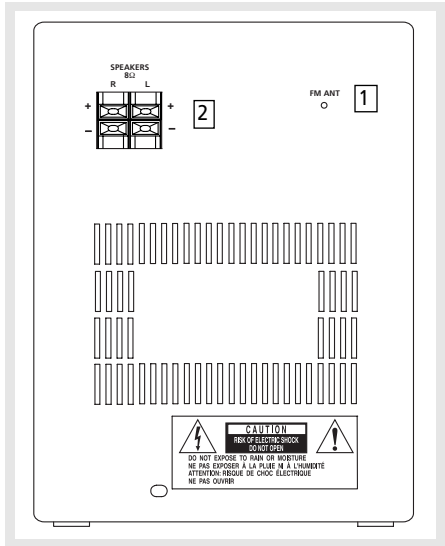

1. FM Pigtail Antenna
2. Main Speaker Jacks

## Speaker Wire Connection

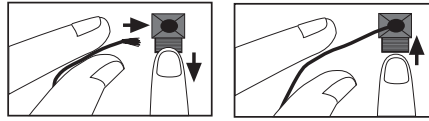 


Push terminal tab down to insert wire.

Release tab to lock wire in the terminal.


**NOTE:** Make sure the insulation is completely removed from the ends of the speaker wires at all connection points.

## Installation

 To ensure sufficient ventilation, keep the spacings shown below free from other surfaces:

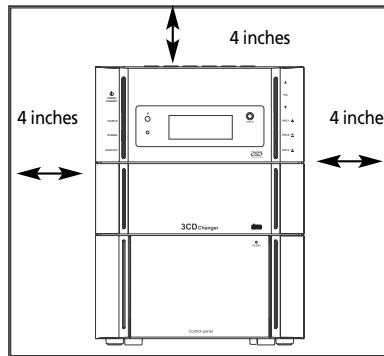


Front View

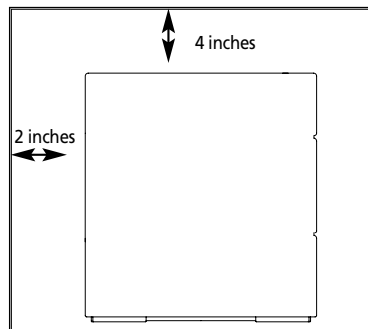 

Side View

# General Controls
 
## Main Unit

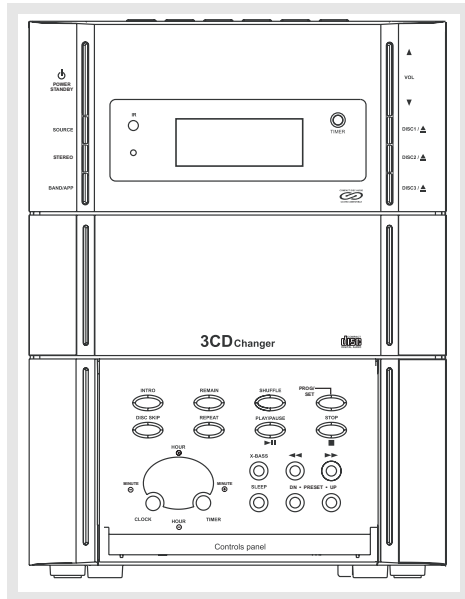

## Front Panel

- POWER/STANDBY** — Turns power on or off (STANDBY mode).
- SOURCE** - Selects CD player / tuner / tape player.
- VOL** ▲ / ▼ - Increases / decreases volume.
- DISC1/▲** , **DISC2/▲** , **DISC3/▲** - Opens the corresponding disc tray.
- STEREO** - Selects stereo and mono sound in tuner mode.
- BAND/APP** - Selects radio band; selects automatic preset programming.

## Control Panel

- INTRO** - Selects intro playback in CD mode.
- REMAIN** - Selects display options to show track elapse time, track remain time or disc remain time in CD mode.
- SHUFFLE** - Selects random playback in CD mode.
- PROG/SET** - Enters program mode for CD and Tuner; applies new settings for Clock and Timer mode.
- DISC SKIP** - Skips to the next CD.
- REPEAT** - Selects among repeat options in CD mode.
- PLAY/PAUSE** ►|| - Plays and pauses CD.
- STOP** ■ - Stops CD playback.
- In CD Program mode* - Clears program.
- SKIP FORWARD** ►► - Increments radio frequency, goes to the next CD track or setting mode.

**SKIP BACKWARD** ◀◀ - Decrements radio frequency, goes to the previous CD track or setting mode.

**X-BASS** - Turns X-Bass on/off.

**SLEEP** - Selects sleep duration.

**PRESET • UP** - *In CD mode* - Goes to the next CD track; selects the next program location.

*In Tuner mode* - Selects the next preset station.

*In Clock or Timer mode* - Increases hour and minute digit.

**DN • PRESET** - *In CD mode* - Goes to the previous CD track; selects the previous program location.

*In Tuner mode* - Selects the previous preset station.

 
*In Clock or Timer mode* - Decreases hour and minute digit.

**CLOCK** - Enters clock setting mode; shows clock time.

**TIMER** - Enters timer setting mode; Turns on/ off timer.

**HOUR** - / + - Increases / decreases the hour digit in clock and timer setting mode.

**MINUTE** - / + - Increases / decreases the minute digit in clock and timer setting mode.

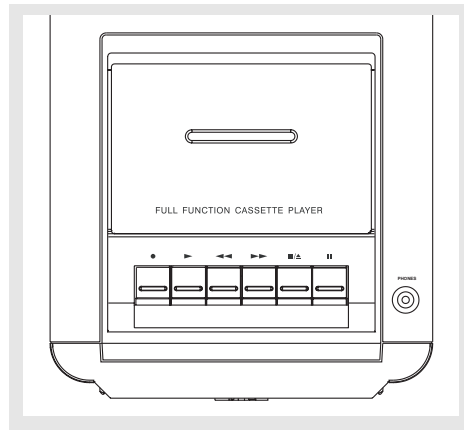

## Top Panel

**PHONES** — Jack for connecting headphones.

 
## Tape Player

- Record
- ▶ Play
- ◀◀ Rewind
- ▶▶ Fast-Forward
- ▲ Stop/Eject
- || Pause

EN

# General Controls

## EN Remote Control

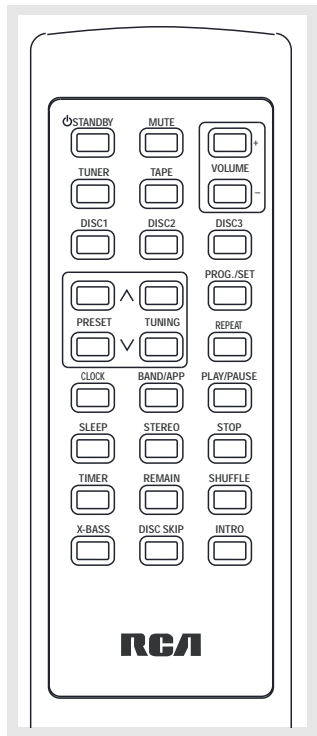

**STANDBY** — Turns power on or off from standby mode.

**MUTE** - Mutes audio output.

**TUNER** — Selects radio tuner.

**TAPE** — Selects tape player.

**VOLUME** - or + - Decreases or Increases volume level.

**DISC1 / DISC2 / DISC3** - Selects disc 1,2 or 3 playback.

**PRESET UP ^ /DOWN v** — Selects next/ previous preset station.

*In Clock or Timer mode* - Increases / decreases the hour or minute digit.

**TUNING UP ^ /DOWN v** - *In CD mode* - Skips forward to the next track or skips backward to the previous track.

*In Tuner mode* - Tunes up or down radio frequency.

**PROG./SET** - Enters program mode for CD and Tuner mode; applies new settings for Clock and Timer modes.

**REPEAT** - Selects repeat options (repeat a track, CD or all CDs).

**CLOCK** - Shows clock time and enters clock setting mode.

**BAND/APP** - Selects radio band; selects automatic preset programming.

**PLAY/PAUSES** - Plays and pauses CD.

**SLEEP** - Selects sleep duration.

**STEREO** - Selects stereo and mono sound in tuner mode.

**STOP** - *In CD mode* - Stops CD playback.

*In program mode* - Clears program.

**TIMER** - Enters timer setting mode; Turns on/ off timer.

**REMAIN** - *In CD mode* - Selects display options to show track elapse time, track remain time or disc remain time in CD mode.

**SHUFFLE** - Selects random playback in CD mode.

**X-BASS** - Turns X-Bass on/off.

**DISC SKIP** - Skips to the next CD.

**INTRO** - Selects intro playback in CD mode.

**NOTE:** Cassette functions can not be operated from the remote control.

### Installing Batteries

 
The remote control must be inserted with 2 "AAA" or "UM-4" or "R03" batteries prior use. Follow the steps below to ensure correct installation.

1. Remove the battery compartment door (located at the back of the remote control) by sliding the compartment door in the direction of the arrow and then lifting the door out and off the cabinet.
2. Before inserting the batteries, observe the polarities (that is, + and -) of the battery, then relate the polarities to the engraved diagram inside the battery compartment. Now insert the batteries.
3. After installation of the batteries, replace and fit the lid to cover the batteries. Lightly push it close with a snap.

# Display Settings

EN

## Display

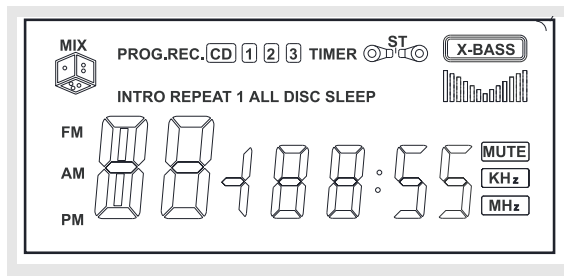

## Display Clock / Timer

### Setting the Clock

1. Press **CLOCK** twice. The hour flashes on the display.
2. Press **HOUR -** or **+** on the main unit or **PRESET ^** or **∨** on the remote control to set the hour and then press **CLOCK** to shift to minute digits.
3. Press **MINUTE -** or **+** on the main unit or **PRESET ^** or **∨** on the remote control to set the minute.
4. Press **CLOCK** to save settings.

#### Note:

- Press **CLOCK** to display the current time for about 2 seconds.
- Press and hold **CLOCK** to select between 12 hour and 24 hour clock format.

### Setting the Timer

1. Press and hold **TIMER** until the **ON** appear with the hour flashing (**ON** - timer on time)
2. For setting time, press **HOUR -** or **+** on the main unit or **PRESET ^** or **∨** on the remote control to set the hour and then press **TIMER** to shift to minute digits.
3. Press **MINUTE -** or **+** on the main unit or **PRESET ^** or **∨** on the remote control to set the minute and then press **TIMER** to shift to move on to source selection.
4. Press **PRESET DN** or **UP** to select source CD / Tuner (TU) / Cassette (CA).
5. If CD is selected as the source, press **PRESET DN** or **UP** to select disc.  
If Tuner is selected as the source, press **PRESET DN** or **UP** to select the preset station. Press **TIMER** to shift to select volume.

6. Press **PRESET DN** or **UP** to select volume level (00-32) then press **TIMER** to set timer off time.
7. Repeat steps 2 and 3 to set timer off time (OF) Press **TIMER** to save your settings.

### Activating the Timer

Press and release **TIMER** to turn on/off the timer. The timer indicator will lit.

### Sleep Mode

You can select the time interval in minutes before the unit turns off automatically. Press **SLEEP** to select among SL 00, 120, 105, 90, 75, 60, 45, 30, and 15 minutes.

#### Note:

When LCD display shows "RESET", Press **POWER/STANDBY** to turn the unit off and on again or unplug and plug the AC power cord again.



# Sound Features

## EN X-BASS

Press **X-BASS** to turn on/off boosting the bass frequency.

## Muting Audio

Press **MUTE** on the remote to cut the sound. (Remote Only)

## Volume Control

Press **VOL** ▲ or ▼ on the main unit or **VOLUME +** or - on the remote control to adjust volume level.

# CD Player



This unit is compatible with CD-RW/ CD-R discs for playback.

### Notes on CD-R/RW Disc:

- Do not affix any type of labels to either side (recordable or labeled side) of a CD-R/RW disc as this may result in the unit malfunctioning.
- To avoid damages to the CD-R/RW disc, do not open the disc compartment door while the disc is being read.
- Do not load an unrecorded CD-R/RW disc into the unit. This may take a longer time to read the disc.
- **Playback capability for CD-RW discs may vary due to variations in the quality of the CD-RW disc and the recorder used to create the disc.**

## Loading Discs

1. Press **SOURCE** repeatedly on the main unit or one of the disc numbers (**DISC1 / DISC2 / DISC3**) on the remote control to select CD mode.
2. Press **DISC1/▲** or **DISC2/▲** or **DISC3/▲** to open the corresponding disc drawer.
3. Insert up to 3 discs with label face up. (Press **DISC SKIP** to change to the next disc carrier.)
4. Press the corresponding disc location on the main unit again to close the drawer. Loaded disc position icon lights.

## Playing Discs

- Press **PLAY/PAUSE** ►|| to begin or pause play, and **STOP** ■ to stop playback.

## Play and Load Simultaneously

1. Press **DISC1/▲** , **DISC2/▲** , **DISC3/▲** to select and open one of the available disc trays other than the one that is playing.
2. Press again to close the tray.

## Skipping a Disc

Press **DISC SKIP**.

## Searching Through a CD

- Press **SKIP FORWARD** ►► / **SKIP BACKWARD** ◀◀ on the main unit or **TUNING** ^ or v on the remote control to skip to the next or previous track.
- Press and hold **SKIP FORWARD** ►► / **SKIP BACKWARD** ◀◀ on the main unit or **TUNING** ^ or v on the remote control to search through a CD while it is playing.

# CD Player

EN

## Shuffling the Play Order

Press **SHUFFLE** to turn on/off the playing of tracks in random order.

## Sampling Tracks

Press **INTRO** to play the first 10 seconds of each track on the current disc, all discs in the tray, or turn **INTRO** mode off.

## Repeat

Press **REPEAT** to repeat the current track, current disc, all discs, or turn **REPEAT** mode off.

**Note:** You may also press **REPEAT** to select 1 disc or all discs before activating **SHUFFLE** function.

## Setting Up a CD Program

You can program the CD player to play up to any 20 tracks on the CDs in the tray.

1. While the CD player is stopped, press **PROG/SET** to enter program mode. The system displays the next available program number: "00 Pr01".

00 Pr01

Track number

program location

2. Press **DISC SKIP** on the main unit or the disc number on the remote control (**DISC1 / DISC2 / DISC3**) to select disc.
3. Press **SKIP FORWARD** **▶▶** / **SKIP BACKWARD** **◀◀** on the main unit or **TUNING** **^** or **∨** on the remote control to select track to enter into memory.
4. Repeat steps 1 to 3 to store more tracks into program memory.

## Playing a Program List

While in PROGRAM mode (press **PROG/SET** to enter), press **PLAY**.

## Display and Edit Program List

1. While the CD player is stopped, press **PROG/SET** to enter PROGRAM mode.
2. Press **PROG/SET** repeatedly to list each track assignment in the program list.

01 Ed01

3. Repeat steps 2 and 3 under "Setting Up a CD Program" to edit the track to store into memory.

## Deleting Program List

While in PROGRAM mode, press and hold **STOP** for 5 seconds. The system displays the message **CLEAR**.

### Tips:

- You can create a program of up to 20 tracks.
- Press **REMAIN** repeatedly to view elapsed track time, track number, track remain time and disc remain time.

**Caution:** Do not push to force closing of the tray during CD playback or tray opening.

# Radio

## EN Selecting Tuner Band

1. Press **SOURCE** on the main unit or **TUNER** on the remote control to enter Tuner (TU) mode.
2. Press **BAND/APP** to select between AM or FM radio band.

**Tip:** Your audio system has 30 preset stations.

## Tuning to a Station

Press **SKIP FORWARD** **>>** / **SKIP BACKWARD** **<<** on the main unit or **TUNING** **^** or **v** on the remote control to select frequency.

## Using Presets

The tuner can be in either TUNE or PRESET mode.

When in PRESET mode, the PROG light is on.

- Press **PROG/SET** to enter PRESET mode.
- Press **PRESET DN** or **UP** on the main system or **PRESET** **^** or **v** on the remote control to access the previous or next preset station.

 


- Press **PROG/SET** again to go to the selected preset station. The display first shows the preset program number and after a few seconds, the preset program and frequency will be displayed.



## Auto Preset Programming

Press and hold **BAND/APP** button for 2 seconds to scan stations in FM and AM band. The stations will then be stored as preset channels. A maximum of 30 stations can be stored. Beware of your preset channels being erased accidentally because the scanning and storing process is automatic upon pressing the button. You can stop the automatic scan by pressing any button, but the erased stations cannot be recovered.




## Manually Setting Presets

1. Press **SKIP FORWARD** **>>** / **SKIP BACKWARD** **<<** to access the desired frequency.
2. Press the **PROG/SET** button once.
3. The most recently accessed program location will be displayed.
4. If a different program location is preferred, press **PRESET DN** or **UP** on the main unit or **PRESET** **^** or **v** on the remote control to move to the desired preset number (1-30).
5. Press **PROG/SET** to store the selected frequency at that preset.

## Suppressing Stereo Signal

Press **STEREO** to toggle between FM mono and stereo for stereo FM stations.
 
# Tape Player

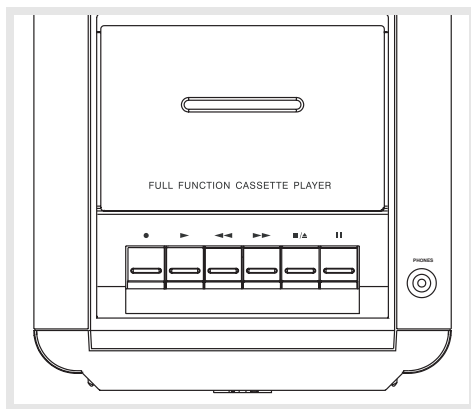

## Tape Player

- RECORD
- ▶ PLAY
- ◀◀ REWIND
- ▶▶ FAST FORWARD
- ▲ STOP/EJECT
- || PAUSE

## Playing a Tape

1. Press **SOURCE** on the main unit repeatedly or **TAPE** on the remote to enter Tape mode (CA).
2. Press **STOP/EJECT** to open the cassette door.
3. Insert a tape into the door and push the door closed.
4. Press **REWIND/FAST FORWARD** to position the tape to the desired starting position.
5. Press **PLAY** to begin playback.
6. Press **PAUSE** to pause playback.

## Recording

### From Tuner

1. Insert a tape into deck.
2. Press **SOURCE** repeatedly on the main unit or **TUNER** on the remote control to select Tuner (TU) and
3. Press **BAND/APP** to access the desired radio band.
4. Press **SKIP FORWARD** ▶▶ or **SKIP BACKWARD** ◀◀ on the main unit or **TUNING** ^ or v on the remote control to tune to the station to be recorded.
5. Press **RECORD** to begin recording.
6. Press **STOP** to end recording.

### From CD

1. Insert a tape into deck .
2. Press **SOURCE** repeatedly on the main unit to select CD then press **DISC SKIP** to select the disc to be recorded.  
or  
Press **DISC1 / DISC2 / DISC3** on the remote to select the disc to be recorded directly
3. Press **SKIP FORWARD** ▶▶ or **SKIP BACKWARD** ◀◀ on the main unit or **TUNING** ^ or v to select the track to be recorded.  
or  
Press **PROG/SET** to enter program mode.
4. Press **RECORD** to begin recording.
5. Press **STOP** to end recording.

EN

# Troubleshooting Tips

EN

<b>Problem</b>	<b>Solution</b>	<b>Problem</b>	<b>Solution</b>
<i>System will not turn on</i>	<ul style="list-style-type: none"> <li>• Check power cord for a secure connection.</li> <li>• Unplug the unit for a moment, and then plug into power source again.</li> <li>• Check the outlet by plugging in another device.</li> </ul>	<i>CD button will not respond, or does not change discs when you press DISC SKIP</i>	<ul style="list-style-type: none"> <li>• Switch to another function (TAPE, Tuner) and then back to CD.</li> </ul>
<i>No sound</i>	<ul style="list-style-type: none"> <li>• Increase the volume setting.</li> <li>• Check connection to speakers.</li> <li>• Check that you have selected the appropriate function: CD, TAPE, Tuner.</li> <li>• Make sure mute is off.</li> </ul>	<i>Distorted or noisy tape recordings</i>	<ul style="list-style-type: none"> <li>• Inspect the tape head, clean it if necessary.</li> </ul>
<i>Poor radio reception</i>	<ul style="list-style-type: none"> <li>• Check antenna connection.</li> <li>• Move antenna.</li> <li>• Turn off nearby electrical appliances, such as hair dryer, vacuum cleaner, microwave, fluorescent lights.</li> </ul>	<i>Remote control does not work</i>	<ul style="list-style-type: none"> <li>• Check that the batteries are properly installed.</li> <li>• Replace weak batteries.</li> <li>• Check the system is plugged into power source.</li> <li>• Point the remote directly at the system's front panel.</li> <li>• Move closer to the system.</li> <li>• Remove any obstacles between the remote and the system.</li> </ul>
<i>CD does not play</i>	<ul style="list-style-type: none"> <li>• Check that CD is in the tray.</li> <li>• Check that CD label is facing up.</li> <li>• Check that PAUSE mode is not on.</li> <li>• Check that CD function is selected.</li> <li>• Use CD lens cleaner.</li> <li>• Clean the disc.</li> </ul>		
<i>CD sound skips</i>	<ul style="list-style-type: none"> <li>• Clean the disc.</li> <li>• Check disc for warping, scratches, or other damage.</li> <li>• Check if something is causing the system to vibrate. If so, move the system.</li> <li>• Make sure the speakers are at least 3 feet away or on a different surface from the main unit.</li> </ul>		

# Maintenance

Disconnect the audio system from the power source before performing any maintenance.

## Cleaning

Clean the exterior of the system using a soft dust cloth.

 
## CD Player

**CAUTION!** This system operates with a laser. It must be opened by only a qualified technician.


## Tape Player

To prevent deterioration of sound quality, periodically open the door of each deck and clean the magnetic heads, pinch roller, and capstan with a cotton bud dipped in alcohol. Also, demagnetize the head by playing a demagnetizing cassette (available through an audio equipment store).

To protect recordings on one or both sides of a tape, remove the corresponding tab. If you later want to record on the tape, affix a piece of adhesive tape over the hole.



 Quit Slacking - A little bit of slack in your tapes can cause scratches on the tape, or worse yet, the tape could break. If you notice some slack in the tape, use a pencil to tighten it up before you insert it.

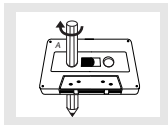

## Handling CDs

- Do not touch the signal surfaces. Hold CDs by the edges, or by one edge and the hole. Do not affix labels or adhesive tapes to the label surfaces. Do not scratch or damage the label. CDs rotate at high speeds inside the player. Do not use damaged (cracked or warped) CDs

## Cleaning CDs

- Dirty CDs can cause poor sound quality. Always keep CDs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a CD becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or antistatic agents on CDs. Also, never clean CDs with benzene, thinner, or other volatile solvents which may cause damage to disc surface

## CD Lens Care

When your CD lens gets dirty it can also cause the system to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the ones accompanying the lens cleaner.

EN

# Important Information

## EN Safety Precautions

- Never open the cabinet under any circumstances. Any repairs or internal adjustments should be made only by a trained technician.
- Never operate this product with the cabinet removed.
- Do not use your System immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
- Keep your unit away from humid areas and abnormally hot places.
- Do not touch the player with wet hands. If any liquid enters the player cabinet, take the player to a trained technician for inspection.
- This compact disc player uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.
- Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs.
- Do not touch the pick-up lens which is located inside the disc compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time. If the lens becomes dirty, clean it with a soft brush, or use an air blower brush designed for camera lenses.
- The apparatus shall not be exposed to dripping and splashing.

## Important Battery Information

- Remove the batteries to avoid leakage if you do not use your remote control for more than one month.
- Discard leaky batteries immediately as leaking batteries may cause skin burns or other personal injuries. Dispose of batteries in the proper manner, according to provincial and local regulations.
- Any battery may leak electrolyte under the following circumstances:
  - if mixed with a different battery type,
  - if inserted incorrectly,
  - if all batteries are not replaced at the same time,
  - if disposed of in fire, or
  - if an attempt is made to charge a battery not intended to be recharged.

## Headset Safety

- Do not play your headset at high volume. Hearing experts warn against extended high-volume play.
  - If you experience ringing in your ears, reduce volume or discontinue use.
  - You should use with extreme caution or temporarily discontinue use in potentially hazardous situations.
- Even if your headset is an open-air designed to let you to hear outside sounds, do not turn up the volume so high that you are unable to hear what is around you.

## Don't Infringe

This product should only be used for the purposes for which it is sold, that is, entertainment, violating no copyright law. Any attempts to use this product for which it is not intended is unlawful and therefore not condoned by Thomson multimedia.

## Technical Specification

Power supply: 120V~60Hz  
 Dimensions ( H x W x D inches):  
 Unit size - 9.7 x 7.1 x 11.6  
 Main Speaker - 9.7 x 6.1 x 5.1  
 Tape deck: Response curve: 125Hz-8kHz (-5dB)  
 CD player: Response curve (+/- 2dB): 60Hz to 15 kHz  
 Rating Plate: Look for it at the back of the set.

# Limited Warranty (U.S.)

EN

**What your warranty covers:**

- Defects in materials or workmanship.

**For how long after your purchase:**

- One year from date of purchase for labor and parts
- Warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

**What we will do:**

- Pay any Authorized RCA Audio Service Center the labor charges to repair your unit.
- Pay any Authorized RCA Audio Service Center for the new or, at our option, refurbished replacement parts required to repair your unit.

**How you get service:**

- Take your unit to any Authorized RCA Audio Service Center. To identify your nearest Authorized RCA Audio Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence of purchase date or first rental.
- Pick up your unit when repairs are completed.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

**What your warranty does not cover:**

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your unit.
- Damage from misuse or neglect.
- Cleaning of audio heads.
- Batteries.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A unit purchased or serviced outside the U.S.A.
- Acts of nature, such as but not limited to lightning damage.

**Product Registration:**

- Please complete and mail the Product Registration Card packed with your product. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.



# Limited Warranty (U.S.)

## **EN** Limitation of Warranty:

- **THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.**
- **REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.**

### **How State Law relates to warranty:**

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

### **If you purchased your unit outside the United States:**

- This warranty does not apply. Contact your dealer for warranty information.

**Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.**

# Limited Warranty (Canada)

EN

**What your warranty covers:**

- Defects in materials or workmanship.

**For how long after your purchase:**

- One year from date of purchase for labor and parts
- The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

**What we will do:**

- Pay any Authorized RCA Audio Service Center the labor charges to repair your unit.
- Pay any Authorized RCA Audio Service Center for the new or, at our option, refurbished replacement parts required to repair your unit.

**How you get service:**

- Take your unit to any Authorized RCA Audio Service Center. To identify your nearest Authorized RCA Audio Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence of purchase date or first rental.
- Pick up your unit when repairs are completed.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

**What your warranty does not cover:**

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your unit.
- Damage from misuse or neglect.
- Cleaning of audio heads.
- Batteries.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A unit purchased or serviced outside Canada.
- Acts of nature, such as but not limited to lightning damage.

**Product Registration:**

- Please complete and mail the Product Registration Card packed with your product. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

# Limited Warranty (Canada)

## EN Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA LTD., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA LTD. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE PROVINCIAL LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

### How Provincial Laws relates to warranty:

- This warranty gives you specific legal rights which are in addition to statutory warranties that may vary from Province to Province.

### If you purchased your unit outside Canada:

- This warranty does not apply. Contact your dealer for warranty information.

**Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>