



6-Piece Home Theater Speaker Package

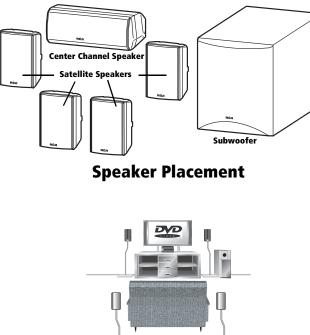

- Place the center speaker directly above or below
- Place the center speaker directly above of below the TV so that the sound of the center channel is localized at the TV.
- If possible, place the surround speakers slightly above ear level.
- Try to place all the speakers at an equal distance from the listening position.

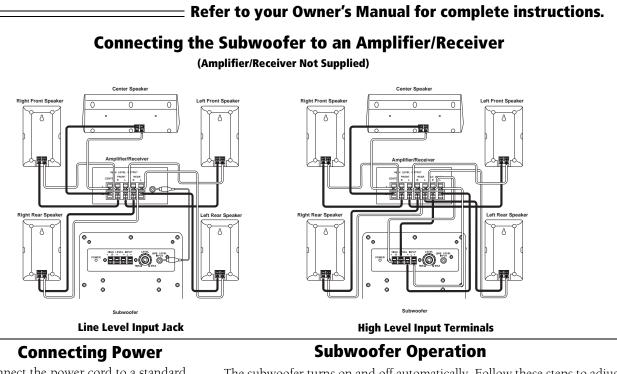

Connect the power cord to a standard 120V/60 Hz AC outlet. Route the subwoofer's power cord so it is not likely to be walked on or pinched by items placed upon or against it, especially at plugs, convenience receptacles, and the point where it exits from the subwoofer.

The subwoofer turns on and off automatically. Follow these steps to adjust the volume.

- 1. Rotate **LEVEL** clockwise to **MIN** then turn on your audio system.
- 2. Play a DVD/CD, record, cassette, radio, or TV and adjust the audio system to a comfortable level.
- 3. Rotate **LEVEL** clockwise until you achieve the desired balance of bass between the subwoofer and the main speakers. After you adjust LEVEL, use the amplifier/receiver's volume control to control the speaker's volume.

© 2003 RadioShack Corporation. All Rights Reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation. RadioShack Corporation Fort Worth, Texas 76102

02A03 Printed in China Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com