RЕЛ

manual de usuario

 \overline{O} \overline{O} \overline{O} \overline{O} \overline{O}

EN/E

It is important to read this user manual prior to using your new product for the first time. Es importante leer este manual antes de usar por vez primera su equipo.

Service information This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this user manual

For your records In the event that service should be required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number Model No.: Date of Purchase: Place of Purchase:



WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

SEE MARKING ON BOTTOM OF PRODUCT

Clock

Serial No.:

Auto clock set You do not have to set the clock time as a built-in automatic time set system is equipped in this clock powered by 3V (2 AA batteries, included and installed). All you have to do is to plug this clock for power and current time will be shown automatically after setting the time zone and daylight saving time (read below). However, the batteries can also be exhausted and we recommend that you replace the batteries

۲ every year.

> Setting time zone Slide the time zone selector at the bottom of the unit to Eastern, Central, Mountain or Pacific time zone (refer to the maps on the riaht)

Daylight saving time Press and hold DAYLIGHT AVING TIME button on the bottom of the unit to turn on/ off in areas observing/ not observing such time change. The icon O shows on the display when daylight saving time is active.

iPod

Listening to iPod

again to resume.

or forward.

2. Press $\langle \langle \rangle \rangle$ to skip to the

1. During playback, press iPod to

pause the playback and press

previous or next file. Press and

hold << / >> to search backward

3. Press SHUFFLE to play the files

in random order in the iPod

Random playback indication

shows on the iPod when the

again to cancel the function.

repeat playback mode (repeat

playback indication shows on

1. Connect your auxiliary source

(e.g. mp3 player) to the AUX

unit with an audio cable (not

input jack on the top of the

2. Press AUX to turn on the unit

or to switch to listen to AUX

from other modes. The AUX

indicator on the front will turn

function is activated. Press

4. Press REPEAT to select a

1 or repeat all). Repeat

Auxiliary source

supplied)

on.

user **manual**

(2) this device must accept any interference received, including interference that may cause RP5510i undesired operation. This equipment has been tested RP5512i and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. Made for These limits are designed to ◎ iPod provide reasonable protection

against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

FCC information

This device complies with Part

15 of the FCC Rules. Operation

is subject to the following two

cause harmful interference, and

conditions: (1) This device may not

Before you begin

Plugging in for power Insert the connector of the AC/DC adpater to the power jack at the bottom of the unit. Input: 100-240 V ~ 50/60 Hz 0.7 A External AC/DC adaptor input power supply: 100-240 V ~ 50/60 Hz

Power is fed to the unit even when it is not functioning. To cut the correctly orientated in a vertical or power supply off, the power cable must be unplugged.

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

Technical information

Electrical consumption

The AC/DC Adaptor supplied with

this product is intended to be

External AC/DC adaptor

Output: 10 V --- 1.4 A

floor mount position

Product: Clock Radio

Model: RP5510i, RP5512i

Brand: RCA

can be powered with 2 "AA" batteries (included). The power failure protection circuit will not operate unless battery is installed. When normal household power is interrupted, or AC line cord is unplugged, the batteries will power the clock radio to keep track of time and alarm settings programmed into memory. When the battery backup functions, the digital display will not light, however, the function of alarm still occurs during the power interruption if remaining battery power is adequate. Normal operation will resume after AC

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an

the equipment.

NY 11788

Mexico, D.F.

AME0712174Y4

experienced radio/TV technician for help.

Follow all instructions Do not use this apparatus near Changes or modifications not water. expressly approved by the party

- Clean only with dry cloth Do not block any ventilation responsible for compliance could openings. Install in accordance with void the user's authority to operate
 - he manufacturer's instructions. Do not install near any heat sources

ndling and use.

Read these instructions

Keep these instructions Heed all warnings.

not apply to your particular product; however, as with any electronic product


precautions should be observed during

such as radiators, heat registers, stoves, or other apparatus (including Maufacturer/Responsible Party Audiovox Electronics Corp. amplifiers) that produce heat. Do not defeat the safety purpose 150 Marcus Blvd., Hauppauge, of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the


۲

IMPORTADOR PARA MEXICO: Audiovox Mexico, S. de R.L. de C.V. Eiercito Nacional 436 Piso 3 Col. Chapultepec Morales C.P. 11570

> Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles. and the point where they exit from the apparatus.

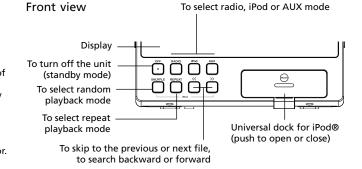

Top view Press SET at the center to select adjusting the clock time, wake time 1 or wake time 2. Rotate the knob to adjust the clock time, wake time 1 or wake time 2.

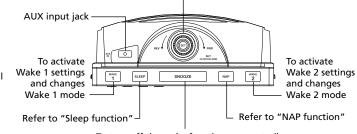

To turn off the wake function momentarily, to turn off the sleep funtion

When tuning in FM stations, you

may notice that the station you

are tuning can be well-tuned on

two or three nearby points on the

dial. Always tune carefully at the

loudest and clearest point.

A built-in ferrite rod antenna

Rotating the unit slightly may

improve reception of distant AM

antenna for AM reception.

eliminates the need for an outside

AM Antenna

When the wake

function activates, the

icon will flash until the

wake function is turned off. The

icon will then stop flashing and

corresponding wake

keep lighting up.

stations.

Radio

- Listening to the radio 1. Press RADIO on the front of the unit to turn on the radio
- 2. Slide **BAND** to select the radio band. The selected radio band shows on the display.
- 3. Rotate TUNING to select frequency. The selected frequency shows on the
- display. 4. Press **OFF** to turn off the radio.

Built-in AFC The Built-in Automatic Frequency

Control (AFC) works only on FM. It helps reducing drift on FM reception and keeping the radio locked in on the FM station to which it is tuned.

Display brightness

Press BRIGHTNESS to dim the display and press again to restore to the original brightness level.

When the display is dimmed, the

blue indicator on the universal

off.

dock for iPod will also be turned

PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS Some of the following information may Use only with the cart. Important Battery Precautions

Connect power cord only to AC power source as marked on the

product. Care should be taken so that objects do not fall into the product. Do not attempt to disassemble the cabinet. This product does not contain customer serviceable

components. • IF YOUR PRODUCT OPERATES ON BATTERIES, adhere to the following precautions: A. Any battery may leak electrolyte if mixed with a different batter type, if inserted incorrectly, or if all batteries are not replaced at the

same time B. Any battery may leak electrolyte or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged. C. Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to

your state/provincial and local regulations. D. Do not expose batteries to excessive heat (for example, by leaving them in sunlight or close to fire).

of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product

and operational details should any discrepancies arise in other languages

Any battery may present a risk of fire, explosion, or chemical burn

if abused. Do not try to charge a

battery that is not intended to be

recharged, do not incinerate, and

do not puncture. Non-rechargeable batteries, such as

alkaline batteries, may leak if left in your product for a long period of

time. Remove the batteries from the

product if you are not going to use it for a month or more.

If your product uses more than one

battery, do not mix types and make

Mixing types or inserting incorrectly may cause them to leak.

cause skin burns or other persona

environment by recycling or disposing of batteries according to

federal, state, and local regulations


The descriptions and characteristics in

this owner's manual are for the purpose

sure they are inserted correctly.


Discard any leaky or deformed battery immediately. They may

injury. Please help to protect the

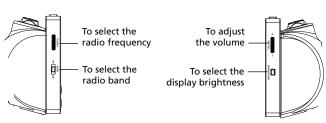

Bottom view

Side views

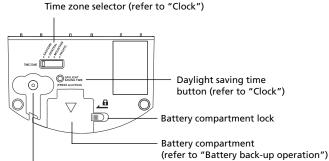

Power jack for AC/DC adapter (10 V --- 1.4 A)

iPod

iPods Adapters Connecting your iPod 1. Push the universal dock for iPod mini 4GB / 6GB iPod on the front of the unit to open it. iPod 20GB & U2 Special Edition 2. Eight adapters are supplied. Check the table on the right and use the appropriate iPod 40GB (4th Generation) adapter for your iPod. 3. Place the adapter and then your iPod on the universal iPod photo & colorU2 iPod dock for iPod. iPod with color display 20GB / 30GB 4. Press iPod on the front of the unit to select the iPod mode. 5. Playback from the iPod starts iPod photo iPod photo with color display 40GB / 60GB automatically. iPod nano 2GB / 4GB Made for: • iPod with video (30GB, 60GB, 80GB) 5th generation iPod with video iPod photo (20GB U2 Special 30GB Edition, 30GB U2 Special Edition, 40GB, 60GB) 4th iPod with video generation iPod (20GB, 20GB U2 Special Edition, 40GB) 4th generation

* For the latest iPod models, iPod nano (2GB, 4GB, 8G) 1st,

with your iPod.

3

5

9

10

WARNING: Avoid playing with US time zones these buttons when setting clock or wake time

Setting clock In case the memory holding batteries are accidentally removed, set the clock manually as below:

1. Press SET on the top of the unit until the clock setting icon \odot flashes on the display. 2. Rotate the knob on the top

of the unit to set the clock time. The time decrements or increments follows by a faster rate when you rotate and hold the knob. The clock setting icon ⊗ flashes when you are setting the time. AM or PM icon also shows beside the

3. To save and exit the clock setting, wait for about 5 seconds or press SET until the clock setting 💬 WA 1 or WAKE 2 icon is off. The clock time is now set.

the iPod when the function is

activated. Press REPEAT until

no repeat playback indication

shows on the iPod to cancel

You may charge the battery

of your iPod through the

• Adjust the auxiliary player to

mid-range volume and adjust

the repeat playback.

Note:

Pacific Central

Canadian time zones

untain Central Eastern







Install battery as follow: out and off the cabinet. 2. Insert 2 AA batteries (included). Battery back-up operation This clock radio is equipped with a memory holding system that

replace the batteries every year

Power failure indicator When external DC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless batteries are installed). After external DC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time and alarm settings.

power is restored so you will not have to reset the time or the alarm 1. Remove battery compartment door (located at the bottom of

the radio) by applying thumb pressure to the tab on battery door and then lift the door

3. Replace the compartment door.

Note: we recommend that you

for replacement of the obsolete outlet. Only use attachments/accessories specified by the manufacturer.

not operate normally, or has been dropped. other. A grounding type plug has two blades and a third grounding ADDITIONAL SAFETY INFORMATION Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into shall be placed on the apparatus Always leave sufficient space around the product for ventilation. Do vour outlet, consult an electrician not place product in or on a bed. rug, in a bookcase or cabinet that may prevent air flow through vent

openings. Do not place lighted candles, cigarettes, cigars, etc. on the

stand, tripod, bracket,

the manufacturer, or sold with the apparatus.

When a cart is used, use caution

when moving the cart/apparatus

combination to avoid injury from

lightning storms or when unused

service personnel. Servicing is required when the apparatus has

been damaged in any way, such as power-supply cord or plug is

damaged, liquid has been spilled

or objects have fallen into the apparatus, the apparatus has been

exposed to rain or moisture, does

tip-over. Unplug this apparatus during

Refer all servicing to qualified

for long periods of time.

or table specified by

General controls Front view

Wake function

Set the wake time This unit allows 2 wake times to be set.

- 1. Press SET on the top of the unit until the icon WAKE1 or WAKE2 flashes on the display 2. Rotate the knob on the top of the unit to set the wake time. The time decrements or
- universal dock for Pod while the unit is turned off (standby mode) or in the iPod mode. the knob. Charging control should be operated on the iPod. If no iPod is connected in the iPod mode, the unit will exit the iPod mode and turn off automatically

icon WAKE1 or WAKE2 flashes and the respective assigned wake time shows on the display.

the master volume on the unit. Select the wake source Do not turn the volume of the You may be woken up by the auxiliary player too high as this alarm, radio, or music from iPod. may affect the sound quality. 1. Set a wake time (refer to the For other playback operations, above instructions) control them on your auxiliary

NAP function

For catnaps up to 2 hours without

settings, the NAP function wakes

disturbing the regular alarm

- 2. Press WAKE 1 or WAKE
 - the front of the unit. 1 😓 – Wake time 1 by alarm 1 🗖 – Wake time 1 by radio - Wake time 1 by iPod
 - 2 😓 Wake time 2 by alarm 2 \square – Wake time 2 by radio 2 \square – Wake time 2 by iPod

Waking to Alarm (🐂)

- Note: The unit equips with GRAD-U-**WAKE** feature, the alarm tone volume will increase gradually to its maximum in about 30 to 45 seconds.
- If you set the wake function with low volume level before going to bed, we advise using Waking to Alarm mode to wake you up since the volume will automatically increase.
- When the AC power is disconnected, all wake mode will be reverted to alarm tone

Press OFF to stop the NAP

alarm, OR press and hold

cancel the NAP function.

NAP until "OFF" is selected to

IMPORTADOR PARA MEXICO:

Audiovox Mexico, S. de R.L. de

Ejercito Nacional 436 Piso 3

Audiovox Electronics Corp

Audiovox Electronics Corp.

150 Marcus Blvd, Hauppauge,

Col. Chapultepec Morales C.P.

C.V.

11570

Mexico, D.F.

NY11788.

AME0712174Y4

EXPORTADOR:

Waking to RADIO (3. Select a desired wake up radio

- channel (refer to "Listening to the radio"). If no wake up channel is set, your last listening radio station will be selected. 4. Adjust the volume to your desired level.
- 5. Press **OFF** to turn off the unit.

Waking to iPod (🗟)

3. Adjust the volume to your desired level. The last played file on the iPod will be played when the wake function activates. 4. Press OFF to turn off the unit.

Note: If there is no iPod connected, the alarm tone will sound instead even if Waking to iPod mode is selected.

Warranty information 12 Month Limited Warranty Applies to RCA Audio/Video Products

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmans within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

- To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown
- This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service. to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems
- This Warranty does not apply to any

J.X

SmartSnooze™

This operation allows extra sleep time after the wake function is on. The alarm will be off by pressing SNOOZE, SLEEP or NAP until the snooze period is over. Snooze function can be used repeatedly

up to 2 hours. After this, the wake function will turn off until the next day. Set the "quiet" period as follow: While pressing SNOOZE, rotate the knob on the top of the unit to

set the "quiet" period from 1 to

30 minutes (default: 9 minutes).

Release **SNOOZE**, then the

"quiet" period is set.

Turn off the wake function

- Silence the wake function momentarily Press SNOOZE. The alarm will sound again when the snooze period is over. (refer to "SmartSnoozeTM"). OR
- Stop the wake function: Press OFF. The alarm will be on again the following day at the same time.

OR

• Disable the wake function permanently: Press WAKE 1 or WAKE 2 repeatedly until no corresponding wake indicator (e.g. 🝢 📑 🗟) shows on the display.

Sleep function

In the sleep mode, the radio, iPod or AUX mode turns off automatically. To set the sleep time, simply:

- 1. Press SLEEP repeatedly to cycle among the sleep time available (90min, 60min, 30min, 15min and OFF. 90min is the default setting).
- If necessary, press << / >> to further set the sleep time. Each press of the button will decrease or increase one minute. For example, to set 35 min, press SLEEP to select 30min and then press >> 5times. • The icon 💶 flashes while
- selecting. 2. When the desired sleep time is selected, release **SLEEP** and wait for about 5 seconds, the sleep time is now set. The radio (default) turns on and the icon 🗷 lights on the display.
- If the iPod is selected in your last sleep function setting, the iPod will start to play, instead of the radio. The radio will

be played whenever the iPod mode is selected but without the corresponding device connected OR If an auxiliary player (e.g. mp3

player

- to select listening to it. 3. Select a radio station as usual, OR
- >> to select a file on the iPod. Playback will be in repeat all files mode automatically. OR Start playback on your
- Press SLEEP once to check the
- **SLEEP** repeatedly to select another sleep time. · If you decide to turn off the unit sooner, press SNOOZE, **OFF** or press **SLEEP** repeatedly
- to select "OFF". • When the sleep mode is
- will be the same as the one you have set before.
- player) is connected, press AUX
- Press **iPod** and then press << /
- auxiliary player.
- remaining sleep time. Press
- activated again, the sleep time

- you up after a short period of time. Simply: 1. Press NAP repeatedly to cycle among the NAP time available (10min, 20min, 30min, 60min, 90min, 120min and OFF. 20min
- is the default setting). If necessary, press < further set the NAP time. Each press of the button will decrease or increase one minute. For example, to set 35min, press NAP to select 30 min and then press \gg 5 times.
- The icon NAP flashes while selecting. 2. When the desired NAP time is selected, release NAP and wait for about 5 seconds, the NAP time is now set. The current time shows and the icon NAP lights on the display.
 - 3. Press NAP once to show briefly the NAP time left. Only alarm tone can be
 - selected in the NAP mode

150 Marcus Blvd, Hauppauge, NY 11788 ©2009 Audiovox Electronics Corp. Trademark(s) ® Registered Marque(s) ® Deposée(s) Marca(s) ® Registrada(s) www.rcaaudiovideo.com Printed in China

product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER

FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states do not allow limitations

on how long an implied warranty lasts or the exclusion or limitation of incidental or consequentia

damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state

How to make a warranty claim:

 If your product is capable of storing content (such as an mp3 player, digital voice recorder, etc), it is ecommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any personal content which you would not want exposed to others. IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE. Product will be returned with factory default settings, and without any pre-loaded content which may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content. Consumer will be responsible to restore any personal preference settings. Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided

with the product. However DO NOT

even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to: Audiovox Electronics Corp. Attn: Service Department. 150 Marcus Blvd

Hauppauge N.Y. 11788 1-877-833-3491

- Insure your shipment for loss or damage. Audiovox accepts no liability in case of damage or loss en route to Audiovox.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty. A new or refurbished unit will be
- shipped to you freight prepaid.

What we will do:

Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

For Canada Customers, please ship

Audiovox Return Centre c/o Genco 6685 Kennedy Road, Unit#3, Door 16, Mississuaga, Ontario L5T 3A5

return any removable batteries,



2nd & 3rd generations

iPod mini (4GB, 6GB) 1st 8

2 to select a wake mode Corresponding icon lights on

1 🖥

increments follows by a faster rate when you rotate and hold

3. To save and exit the wake time setting, wait for about 5 seconds or press SET until the clock setting ⊙, WAKE 1 or WAKE 2 icon is off. The wake 1 or wake 2 time is now set. • To check the wake time after setting, press SET until the

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com