user **manual** guide de l'utilisateur

> RP5605 RP5605R



FN/F

LIVI It is important to read this user manual prior to using your new product for the first time Nous vous recommandons de lire ce manuel d'instructions avant d'utiliser votre nouveau produit pour la première fois.

WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Ecology

Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles

For your records In the event that service should be required, you may need the mode number and the serial number. In the space below, record the date and place of purchase and the serial Model No. Date of Purchase Place of Purchase:

Service information This product should be serviced only by those specially trained in appropriate servicing techniques For instructions on how to obtain service, refer to the warranty included in this user manual.

Serial No.:

Technical information Product: CD/Clock Radio Brand: RCA Model: RP5605, RP5605R Power Supply: 120V ~ 60Hz Power Consumption: 13 Watts

stops CD playback

WAKE TIME – activates wake time

setting mode; checks current wake

WAKE MODE - activates wake

SNOOZE - turns off the wake

If disc is paused for

the CD player will

resume to stop mode

If disc is stopped in the CD

operations, the unit will turn

mode for more than 30 minutes without further

sleep function

function and changes wake mode

function temporarily; cancels the



SEE MARKING ON BOTTOM / BACK OF PR WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION

Some of the following information may not apply to your particular product; however, as with any electronic product, precaution should be observed during handling and use

- · Read these instructions
- Keep these instructions. Heed all warnings
- Do not use this apparatus near water.
- Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's
- instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete
- outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer. Use only

with the cart, stand tripod, bracket

or table Portable Cart Warning specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination

to avoid injury from tip-over. Unplug this apparatus during

IMPORTANT SAFETY INSTRUCTIONS
PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE lightning storms or when unused

for long periods of time. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate

normally, or has been dropped.

ADDITIONAL SAFETY INFORMATION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent
- Do not place lighted candles. cigarettes, cigars, etc. on the product.
- Connect power cord only to AC power source as marked on the

product Care should be taken so that objects do not fall into the

- product. Do not attempt to disassemble the cabinet. This product does
- not contain customer serviceable components. The marking information is located at the bottom of
- apparatus. To be completely disconnect the power input, the main plug of apparatus shall be disconnected from the mains.
- Main plug is a disconnect device The main plug should not be obstructed OR should be easily
- accessed during intended use The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths,
- curtains etc. No naked flame sources such as lighted candled should be placed
- on the apparatus. Attention should be drawn to the environmental aspects of
- battery disposal.
 The use of apparatus in moderate climates.

Important battery This equipment is a Class precautions II or double insulated electrical appliance. It has been designed in

such a way that it does

connection to electrical

The AC power plug

blade is wider than

the other) and only

fits into AC power

outlets one way.

If the plug will

is polarized (one

not require a safety

Plugging in for power AC OUTLET POWER SUPPLY:

not go into the outlet completely,

turn the plug over and try to insert

it the other way. If it still does not fit, contact a qualified electrician to

change the outlet, or use a different

Do not attempt to bypass this

120 V~60 Hz

safety feature.

Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged do not incinerate

- and do not puncture Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove
- the batteries from the product if you are not going to use it for a month or more.

 If your product uses more than one battery, do not mix types and make sure they are inserted
- correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
 Please help to protect the
- environment by recycling or disposing of batteries according to federal, state, and local

FCC Information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into ar outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician

Changes or modifications not expressly approved by Audiovox could void the user's authority to operate the equipment

Before you begin

Battery back-up operation The power failure protection circ will not operate unless battery is

No worry battery backup When the battery backup function the digital display will not light, however, the wake function still occurs during the power interruption if remaining battery power is

Normal operation will resume after AC power is restored so you will not have to reset the time or wake.

Install battery as follow:

- Remove battery compartment door (located at the bottom of the radio) by applying thumb pressure to the tab on battery door and then lift the door out and off the cabinet.
- 2. Connect a 9-volt battery (not supplied) to the connector plug

3. When finished, wait for about 5

exit clock setting mode

seconds or press CLOCK SET to

Power failure indicator When AC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless battery is installed). After AC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time and alarm settings.

Alkaline (NEDA 1604A/ IEC 6LR61) battery is commended. Carbon zinc battery may be used but memory holding time will be substantially reduced. Memory holding time for a fresh alkaline battery is approximately 8 hours (if radio or alarm are not operated) which should take care of short, nuisance-type AC power failures. To preserve battery life, the unit should remain plugged into an AC outlet. As the battery gets older, its voltage drops and n may be lost. Be sure to replace the battery periodically. Battery should be removed if the unit will be stored for more than one month. Leaky battery can badly damage the clock radio.

General controls

Top view

 \bigoplus

 


RADIO ON - turns on the radio selects the radio from other modes


OFF - turns off the unit; turns off the wake function and sleep mode

I◄ / ▶ I – sets clock or wake time; skips to previous or next CD track during CD playback

Right view




Left view

 

TUNING – selects radio frequency

BAND AM/FM - selects radio band

 + VOLUME - - adjusts volume




Clock

Setting clock 1. Press CLOCK SET once. The current clock time flashes on the display



 2. Press I or ▶ to set the clock time. The time decrements or increments will follow by a faster rate when you press and hold the buttons. AM or PM indicator also lights beside the time on the



Radio

Switching on Press RADIO ON to turn on the

Switching band Slide the BAND/AM•FM switch on the right of the unit to select AM or FM band.



Tuning radio Rotate the **TUNING** dial on the right of the unit to select radio frequency



Antennas AM Antenna - A built-in ferrite rod antenna eliminates the need for an outside antenna for AM reception. Rotating the unit slightly may improve reception of distant AM stations

as your FM antenna. The power cord picks up moderate to strong stations and eliminates the need for an external antenna in most strong signal areas. Be sure the power cord is stretched out to its full length. Do not coil or bunch the cord togethe Changing position of the power cord may improve reception.

 
FM Antenna – The power cord acts

Built-In AFC - The Built In Automatic Frequency Control (AFC) works only on FM. It helps reducing drift on FM reception and keeping the radio locked in on the FM station to which it is tuned.

When tuning in FM stations, you may notice that the station you are tuning can be well-tuned on two or three nearby points on the dial Always tune carefully at the loudest and clearest point.

CD player

Listening to CD 1. Lift open the CD compartment



- 2. Insert a disc and close the door. Press ►II to select CD mode and start CD playback.
- Press ►II to pause playback and press again to resume. 4. Adjust volume to your desired
- 5. Press I◀ or ▶ I to skip backward or forward a track. Press and hold to search through a track.
- Press to stop playback. 7. Press RADIO ON to listen to the radio or **OFF** to turn off the unit

 
Wake function Setting wake time

1. Press WAKE TIME once. The current wake time flashes on the









also lights beside the time on the display. When finished, wait for about 5 seconds or press WAKE TIME to exit wake time setting mode. The Wake to Alarm mode (read

below) will be automatically activated whenever the wake time has been set.

or liabilities. ANY IMPLIED

WARRANTIES, INCLUDING

ANY IMPLIED WARRANTY

SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN

OF MERCHANTABILITY.

briefly on the display.

- selected wake source:

Selecting wake source

radio or CD:

CD compartment.

2. Set a wake time (refer to

1. If your desired wake source is

FM station (refer to "Radio").

3. Press WAKE MODE repeatedly

to select a wake source. The indicator lights against the wake

source icons on the right of the

display to indicate the currently

Wake to CD - insert a CD in the

- 🖣 wake by alarm
- □ wake by CD

Once the wake source is selected, the wake function will be activated at the set wake time.

Checking wake time Press **WAKE TIME** to show the current wake time which flashes

Turning off the wake function Silence the wake function

momentarily: With SmartSnooze™, press SNOOZE, I◀ , ➡I , ■ or ►II to turn off the wake function



- The wake function will activate again when the snooze period (9 minutes) is over.
- The snooze period is fixed and cannot be changed.

Press OFF. The wake function will

activate again on the following day



Cancel the wake function completely:

Stop the wake function:

Press **WAKE MODE** repeatedly until no indicator lights against the wake source icons. The set wake time wil not be erased and can be used the next time when you switch on wake function again.



Sleep function

You can set the duration (up to 90 min) before the radio or CD player turns off automatically

- 1. Press **SLEEP** repeatedly to select a duration (90, 80, 70, 60, 50, 40, 30, 20, 10min or OFF) before the radio or CD player turns off automatically.
- The default sleep time is 60 minutes.By default, the radio will be
- switched on once **SLEEP** is pressed. You may change to listen to the CD player by pressing ►II if a disc is loaded To check the remaining duration
- before the unit turns off, press **SLEEP** once. 3 To cancel the sleep function press SNOOZE or OFF

If you set Sleep function before going to bed, we

advise using Wake to Alarm mode.

Warranty information

Warranty information 12 Month Limited Warranty Applies to RCA Audio/Video

- AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without
- charge for parts and repair labor To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown This Warranty does not extend
- to the elimination of externally generated static or noise, to correction of antenna problems oss/interruptions of broadcast or internet service, to costs
- or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems. This Warranty does not

incurred for installation, removal

- apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE
- This Warranty is in lieu of all other express warranties
- PRICE PAID BY PURCHASER FOR THE PRODUCT.
- WARRANTY ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow

exclusion or limitation of

incidental or consequential

damage so the above limitations

you. This Warranty gives you specific legal rights and you may

or exclusions may not apply to

limitations on how long an

implied warranty lasts or the

also have other rights which vary from state to state.

 If your product is capable of storing content (such as an mp3 player, digital voice recorder. make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any personal content which you would not want exposed to others. IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON THE

RETURNED DEVICE. Product will

be returned with factory default

settings, and without any pre-

data and content. Consumer

loaded content which may have

be responsible to restore any personal preference settings Properly pack your unit. Include

How to make a warranty claim: any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials Include evidence of purchase

> print your name and address and a description of the defect. Send via standard UPS or its equivalent Audiovox Electronics Corp. Attn: Service Department. 150 Marcus Blvd. Hauppauge N.Y. 11788 1-877-833-3491

date such as the bill of sale. Also

- Insure your shipment for loss or damage. Audiovox accepts no liability in case of damage or loss en route to Audiovox. Pay any charges billed to you by
- been installed in the originally the Exchange Center for service purchased products. Consumer will be responsible for reloading not covered by the warranty.

· A new or refurbished unit will be shipped to you freight prepaid.

What we will do: Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period

For Canada Customers, please

Audiovox Return Centre c/o Genco 6685 Kennedy Road,

Unit#3, Door 16, Mississuaga, Ontario L5T 3A5

Illustrations contained within this publication are for representation only and subject to change

The descriptions and characteristics given in this document are given as general indication and not as a guarantee. In order to provide the highest quality product possible. we reserve the right to make any improvement or modification without prior notice.

Visit http://store.audiovox.com to find the best



111 Congressional Blvd., Suite 350 Carmel, IN 46032 Trademark(s) ® Registered

© 2010 Audiovox Accessories Corporation



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com