User manual

WARNING: THE APPARATUS SHALL NOT BE

XPOSED TO DRIPPING OR SPLASHING AND

HAT NO OBJECTS FILLED WITH LIQUIDS, SUCH

S VASES SHALL BE PLACED ON APPARATUS

VARNING: TO REDUCE THE RISK OF FIRE

OR FLECTRIC SHOCK. DO NOT EXPOSE TH

CAUTION: USE OF CONTROLS OR ADJUSTMENTS

R PERFORMANCE OF PROCEDURES OTHE

MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF

THIS CLASS & DIGITAL APPARATUS

CLASS 1 LASER

PRODUCT

COMPLIES WITH CANADIAN ICES-003

NOTE: This equipment has been tested and

found to comply with the limits for a Class B digital

device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable

protection against harmful interference in a

residential installation. This equipment generates.

and, if not installed and used in accordance with

the instructions, may cause harmful interference

to radio communications. However, there is no

particular installation. If this equipment does

cause harmful interference to radio or television

reception, which can be determined by turning

the equipment off and on, the user is encouraged

to try to correct the interference by one or more

Reorient or relocate the receiving antenna.

Increase the separation between the

Connect the equipment into an outlet on a

circuit different from that to which the receiver

Consult the dealer or an experienced radio/

Warning: Changes or modifications to this unit

not expressly approved by the party responsible

for compliance could void the user's authority to

This unit has earned the ENERGY

of the following measures

equipment and receiver.

TV technician for help.

operate the equipment.

STAR

rantee that interference will not occur in a

uses and can radiate radio frequency energy

 
POWER OUTLET. THEN FULLY INSERT.

THAN THOSE SPECIFIED MAY RESULT I

APPLIANCE TO RAIN OR MOISTURE.

HAZARDOUS RADIATION EXPOSURE

DRC288SU





It is important to read this instruction prior to using your new product for the first time

SAFETY PRECAUTIONS

This product

laser device

contains a low powe

FCC Statements

Caution Marking and rating plate was located at rear enclosure of the apparatus.

RЕЛ



PERSONNEL. The lightning flash with an arrowhead



symbol, within the equilateral triangle, is intended to alert the user to the presence of CAUTION: DANGER OF EXPLOSION IF BATTERY uninsulated "dangerous voltage" within the IS INCORRECTLY REPLACED. REPLACE ONLY roduct's enclosure that may be of sufficient WITH THE SAME OR EQUIVALENT TYPE. magnitude to cause an electric shock. CAUTION: TO REDUCE THE RISK OF FIRE The exclamation point within the equilateral DO NOT PLACE ANY HEATING OR COOKING triangle is intended to alert the user to APPARATUS BENEATH THIS UNIT.

the presence of important operating and maintenance (servicing) instructions in this CAUTION: TO PREVENT ELECTRIC SHOCK

CAUTION NVISIBLE LASER BADIATION WHEN OPEN AND INTERLOCKS DEFEATED AVOID EXPOSURE TO BEAM.



 
On Placement

۲

- Do not use the unit in places that are extremely hot, cold, dusty, or humid. The ventilation should not be impeded by
- covering the ventilation openings with items such as newspaper, table-cloths, curtains, On Safety

- When connecting or disconnecting the AC power cord, grip the plug and not the cord itself. Pulling the cord may damage it and create a hazard
- When you are not going to use the unit for a long period of time, disconnect the AC power
- No naked flame sources such as lighted candles should be placed on the AC power cord and the unit.
- Leave a minimum of 10cm around the apparatus for ventilation
- Attention should be drawn to the environmental aspects of battery disposal.
- Use of apparatus in moderate climates. On Condensation
- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit. When there is condensation inside the unit, the unit may not function normally. Let the unit stand for 1 to 2 hours before turning the power on, or gradually heat the room and let the unit dry before use.

Rating Plate Location



Should any trouble occur, disconnect the AC power cord and refer servicing to a gualified technician. Main plug is used as the disconnect device, it shall remain readily operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected

energy star

- 1

Notes on Copyright

WARNING

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, or rent copyrighted material without permission.

from the mains socket outlet completely

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation Reverse engineering and disassembly are prohibited

IMPORTANT SAFETY INSTRUCTIONS

Read these instructions. Keep these instructions

- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water
- Clean only with a dry cloth. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your AC power outlet. consult an electrician for replacement of the obsolete outlet.
- Protect the AC power cord from being 10. walked on or pinched particularly at plugs. convenience receptacles, and the point where they exit from the apparatus.

DISC FORMATS





Icons Used on DVDs

Title, Chapter and Tracks

usually one song on an Audio CD.

sections of titles.

Sample Icons

2 1. English 2. French

LB

Audio CDs [8cm/12cm disc]

Region Management Information

This unit is designed and manufactured to respond to the Region Management Information that is encoded on DVDs. If the region number printed on the DVD does not correspond to the region number of this unit, it cannot play that disc.

The region number of this unit is 1.

Disc Function or Operation that is Not Available

-Screen aspect ratio

Multiple camera angles

Region code indicator

DVDs are divided into "titles" and "chapters".

 
If the disc has more than one movie on it, each

movie would be a separate "title". "Chapters" are

When the \bigotimes appears on the screen, it indicates that the function or operation attempted is not available at that time. This occurs because the DVD manufacturer determines the specific functions of DVDs. Certain functions may not be available on some DVDs. Be sure to read the documentation provided with the DVD

Notes on Unauthorized Discs You may not be able to play some DVDs on (2)) ^{1. English} – Language selections for audio this unit, particularly if they were purchase rom outside your geographic area or made -Language selections for subtitles or business purposes.

> Note: When playing back a CD-G (Graphics) or CD EXTRA disc, the audio portion will be played, but the graphic images will not be shown.





Note

Numbers identify each title, chapter, and track on a disc. Most discs have these numbers recorded on them, but some do not.

SOUND SYSTEM

Dolby Digital

Dolby Digital is a technology developed by Dolby Laboratories. Soundtracks encoded in Dolby Digital can reproduce from one to 5.1 discrete channels of excellent quality audio. The unit automatically recognizes the Dolby Digital bitstream and provides a downmix suitable for

multi-channel soundtracks available on many DVDs.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.	DIGITAL
ACCESSORIES	
Please check and identify the supplied accessories.	

To order accessories, visit web site http://www.RCAav.com Remote Control 2xAAA batteries. .. x 1 AV cable ..x 1

- 2 -

11. Only use attachments/accessories specified

by the manufacturer.12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from



Portable Cart Warning

- 13. Unplug this apparatus during lightning storms or when unused for long periods of Refer all servicing to gualified service personnel. Servicing is required when the apparatus has been damaged in any
- way, such as the AC power cord or plug is damaged, liquid has spilled or objects have allen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

CD-R CD-RW Compatible







- malfunctions. Cleaning the Unit
 - Be sure to turn the unit off and disconnect the AC power cord before maintaining the unit Wipe the unit with a dry soft cloth. If the surfaces are extremely dirty, wipe clean with a cloth that has been dipped in a weak soap-and-water solution and wrung out thoroughly, then wipe with a dry cloth.

A defective or soiled disc inserted into the unit can cause sound to drop out

during playback. Handle the disc by holding its inner and outer edges. • Do NOT touch the surface of the unlabeled side of the disc.

NEVER use solvents such as benzine or alcohol to clean the disc.

Do NOT expose the disc to direct sunlight or excessive heat.

Never use alcohol, benzine, thinner, cleaning fluid or other chemicals. Do NOT use compressed air to remove dust. Important Note

Clean the disc before playback. Wipe the disc from the center outward with a cleaning cloth.

Do NOT use irregular shaped discs (example: heart shaped, octagonal, etc.). They may cause

Before transporting the unit, remove the disc from the disc compartment.

TROUBLESHOOTING GUIDE

SYMPTOM CAUSE (AND REMEDY) Ensure the AC power cord is connected. No power The unit is not turned on Remove any obstacles between the remote and the unit The remote control Use the remote near the unit. does not function. Point the remote at the remote sensor on the unit Replace the batteries in the remote with new one Make sure that you select ON mode. No sound or only a The system is in pause mode. Press the PLAY button to return to very low-level sound is heard. normal play mode. The unit is in fast-forward or fast-reverse mode. Press the PLAY button to return to normal play mode. Make sure the AUDIO output is correct. Make sure the audio cable is connected securely · The region number of the disc doesn't match the region number of this No picture or abnormal color unit. · The TV is not set to receive DVD signal output The video/HDMI cable is not connected securely. The TV is not turned on. Clean the disc. Check connection between HDMI TV and the unit. No output on your Replace the HDMI cable with a better one. Bad HDMI cable can cause HDMI TV , data lost Press HDMI key on remote handset several times to toggle among different HD OUTPUT Check the connections. Severe hum or noise The plugs and jacks are dirty. Wipe them with a cloth slightly moistened is heard. with alcohol. Clean the disc There is no disc inside. ("No Disc" appears on the screen). The disc does not Insert the disc correctly with the playback side facing down play Clean the disc The unit and disc region number are incompatible. Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again. Ensure that the video file has been converted to DivX format using the Video file won't play DivX Plus Player on your PC or MAC. on device Not all video files are encoded to allow for plavback on DivX Certified® products. Some video files may have been encoded with errors. · Reset the unit, press the STANDBY/ON button to turn off the unit, wait for The DVD door a few seconds, then restart the unit. cannot open - 3 -

REMOTE CONTROL

WARNING:

CALITION

MAINTENANCE

equivalent type.

explode or leak.

Using the Remote Control

not work properly.

Battery Replacement

meters).

batteries.

corrosion

Cleaning the Disc

SENSOR located on the unit.

When using this unit in very bright light the

infrared REMOTE CONTROL SENSOR may

The recommended effective distance

for remote operation is about 16 feet (5

When the batteries become weak, the operating

distance of the remote control will be greatly

reduced and you will need to replace the

· If the remote control is not going to be used

for a long time, remove the batteries to

avoid damage caused by battery leakage

When discarding batteries, environmental

problems must be considered and local

rules or laws governing the disposal of these

Do not mix old and new batteries. Do not mix

rechargeable (Ni-Cd, Ni-MH, etc) batteries

Do NOT stick paper or tape on the surface

ALKALINE, standard (CARBON-ZINC), or

batteries must be strictly followed

To Change Remote Batteries Point the remote control at the REMOTE Open the battery door





Do not dispose of the battery in fire or it may

Batteries shall not be exposed to excessive


heat such as sunshine, fire or the like

Danger of explosion if battery is incorrectly


replaced. Replace only with the same or



CONTROL REFERENCE GUIDE

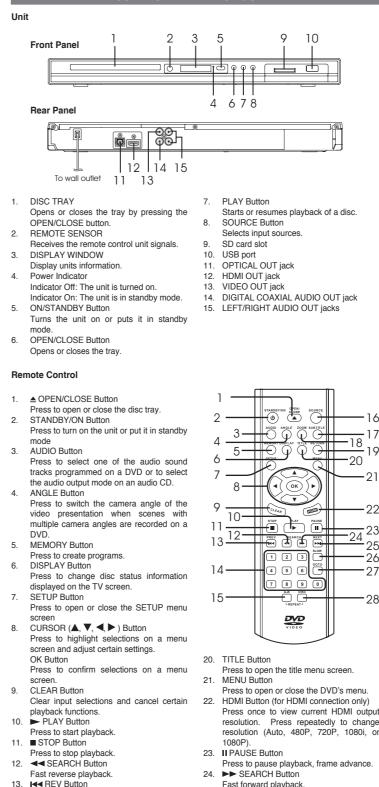

- Press to move backwards through titles, chapters or tracks on a disc
- 14. Number (0-9) Buttons A-B REPEAT Buttor 15.
- Press to perform point-to-point repeat playback on a DVD or CD.
- SOURCE Button 16 Selects input sources.
- 17. SUBTITLE Button
- Press to select one of the subtitle languages programmed on a DVD. 18. ZOOM Button
- Zoom in an image.
- 19. RETURN Button Press to return to normal operation after using SETUP or go to DISC MENU if available

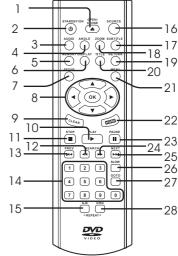

- Press to open or close the DVD's menu HDMI Button (for HDMI connection only)
- resolution Press repeatedly to change resolution (Auto, 480P, 720P, 1080i, or
- 25 ►► NEXT Button
- Press to move forward through titles chapters or tracks on a disc.
- 26. SLOW Button Press to perform slow forward playback of DVDs.
- GOTO Button 27.
- Press to skip directly to a specific location on a DVD. DISC REPEAT Button 28
- Press to repeat chapter or title of a DVD. Press to repeat single track or whole CD.

SETUP AND CONNECTIONS ΤV

CONNECTING TO A TV The unit can be connected to your TV in several different ways, depending on the design of your TV.

Note: Use only one of the below listed connection method for connecting to your TV.

 
A. RCA AUDIO/VIDEO JACKS Use the Audio/Video cable (included)

Connect the VIDEO OUT and left/right AUDIO OUT jacks on the unit to the VIDEO IN and left/right AUDIO IN jacks on your TV.

B. CONNECTING TO A DISPLAY (Using a

For TVs that support it, HDMI can provide the best quality audio and video output (depending on media source), and so is the preferred connection type. The HDMI cable incorporates both audio and video signals, so you will have just one cable running from the unit to your TV. Using the HDMI cable (not included), connect the HDMI OUT jack on your unit to the HDMI IN jack on your TV or HDMI-compatible display.





720p (progressive) 10801 (interlace)


1080p (progressive

- Note · Refer to your owner's manual to the connected TV as well.
- When you connect the DVD player to your TV, be sure to turn off the power and unplug both units from the wall outlet before making anv connections

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks o HDMI licensing LLC.


CONNECTING TO OPTIONAL EQUIPMENT (AMPLIFIER)

A ANALOGUE CONNECTION Using an audio/video cable, connect the left/right AUDIO OUT jack on your unit to the AUDIO IN jack on your other source.

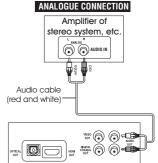

B DIGITAL CONNECTION

Using a coaxial digital audio cable (not included), connect the DIGITAL COAXIAL OUT jack or your unit to the DIGITAL AUDIO IN jack on your other source

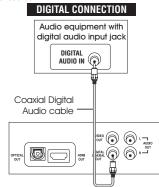

- When you connect the unit to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections. If the external equipment is television and this audio system is close to it, you may experience the
- interference if the tuner function is selected while the television is working
- Refer to the instruction manual of the connected equipment as well.

USING USB PORT

You can connect a USB flash driveS (not included) to the USB port on the unit to play DivX[®] movies as well as picture files.

Plug the USB flash drive into the USB port on the unit. Press SOURCE button to select USB mode

For operation of file playback on the USB flash drive, please refer to the section "PLAYING Div $X^{(B)}$ VIDEO OB PICTUBE FILES"

- It is recommended USB flash drive is plugged when the unit is in STANDBY mode. It does not support USB harddisk mass storage device, multi-card reader and other USB computer peripheral.
- It only supports USB flash drive (FAT32/16 max. capacity 32G bytes, video bitrate is 7Mbps). Make sure your USB flash drive or SD card is FAT16/FAT32 file system. All other file system will not be supported

USING SD CARD SLOT

You can connect a Secure Digital (SD) card (not included) to the memory card slot on the unit to play DivX movies as well as picture files.

Plug the SD card fully into the memory card slot on the unit until it clicks.

Press SOURCE button to change to memory card mode. It reads the information of the SD card and playing the picture and/or sound files For operation of playing files on the SD card, please refer to the section "PLAYING DivX[®] VIDEO OR

PICTURE FILES"

- It is recommended the SD card is plugged when the unit is in STANDBY mode.
- · If the SD card is oriented incorrectly, it will not go fully into the slot. Do not apply force when inserting the SD card.
- To remove the SD card, push the CD card into the slot and then slowly remove your finger, the lock is released and the SD card is pushed out.

$\bigcirc \bigcirc \bigcirc \bigcirc$ Ш. €₽ AV cable

PLAYING A DISC

This user manual explains the basic instructions or operating this unit. Some DVDs are produced in a manner that allows specific or imited operation during playback. Therefore, his unit may not respond to all operating ommands. THIS IS NOT A DEFECT. Please

refer to the instructions accompanying the specific DVD in question for more infor about the options available on that DVD may appear on the screen during operation It means that the desired operation is n permitted by the unit or disc.

Playing a Disc

- Press the STANDBY / ON button to turn on the unit. (See CUSTOMIZING THE FUNCTION SETTINGS before proceeding to step 2).
- Press the OPEN/CLOSE button to open the disc tray. Place a disc onto the disc tray with the label side up.
- Press the ▲ OPEN/CLOSE button to close the disc tray. It takes a short while for your unit to load the disc. After loading, for most DVDs, the unit will automatically take you main menu or start
- 5. If the unit does not automatically start playing the DVD, press the PLAY button.

Pausing Playback (Still Mode)

Press the **II PAUSE** button on the remote. To resume normal playback, press the **PLAY** button. Each time you press the **II PAUSE** button, the picture advances one frame.

Stopping Playback

- Press the STOP button at the location where you want to interrupt playback. To resume playback at the position where the disc was stopped, press the **PLAY** button.
- If you press the STOP button twice, the unit's memory will be cleared and pressing the PLAY button will reset the disc to the beginning.

Zooming into an image

- While a disc is playing, press the **ZOOM** button to enlarge the image in several levels.
 While an image is zoomed, you can use the ▲, ▼, ◀ or ► CURSOR button to shift the view and display the part you want.
- To return to normal view, press the ZOOM button repeatedly until the O : Off is displayed.
- When you reach the edge of the image, the display will not shift anymore in that direction.

Skipping (Forward / Reverse)

- Press the REV button to go back to current or previous chapters/tracks.
- Press the **INEXT** button to advance chapters/tracks.
- · For audio CDs, use the number buttons on the remote control to jump immediately to the desired track number.

Fast Forward / Fast Reverse

- 1. Press the SEARCH I or SEARCH I button when a disc is playing. Each time you press the SEARCH ► or SEARCH ◄ button, the playback speed changes. 2. Press the PLAY button when you reach the desired point to resume normal playback
- The unit mutes sound and subtitles during reverse and forward scan of DVDs
- · The fast playback speed may differ depending on the disc

Slow-motion Play

()

- 1. Press the SLOW button on the remote in play mode.
- · Each time the SLOW button is pressed, the speed of slow-motion playback changes Press the ► PLAY button to return to normal playback speed.

Audio Selection

- On some DVDs, the sound is recorded in two or more formats. Follow the directions below to select While a disc is playing, press the AUDIO button to show the current audio format number.
- 2. Press the AUDIO button repeatedly to select the desired audio format.
- If only one audio format is recorded on the DVD, the number does not change Some DVDs allow you to change audio selections only via the disc menu. If this is the case, press
- the MENU button and choose the appropriate language on the disc menu. You can select different audio channels on an Audio CD by pressing the AUDIO button repeatedly.

Subtitle Selection

- 1. While a DVD is playing, press the SUBTITLE button to display the current language setting. 2. Press the SUBTITLE button repeatedly to select the desired subtitle language. You can turn
- subtitles off by pressing the SUBTITLE button repeatedly until the "Off" is displayed.

- Some DVDs are set to display subtitles automatically, and you cannot turn them off even if you set the subtitle function to off.
- · During some scenes, the subtitles may not appear immediately after you select your desired scene. · The number of subtitle languages recorded differs depending on the disc. If only one language is
- recorded, the language does not change. This function can only be used for discs on which subtitles have been recorded in multiple
- languages · Some DVDs allow you to change subtitles only via the disc menu. If this is the case, press the
- MENU button and choose the appropriate subtitle on the disc menu.

Angle Selection

DRC288SU IB ENG.indd 2

Some DVDs contain scenes which have been shot from a number of different angles. For these discs the same scene can be viewed from each of these different angles.

- 1. While you are playing a DVD with different angles recorded, press the **ANGLE** button to view the number of current angles available.
- Press the ANGLE button repeatedly to change the scene to the next recorded angle. After approx. two seconds, playback will continue from the new angle you selected
- · If no button is pressed within 10 seconds, playback continues without changing the current angle.
- This function can only be used for discs on which scenes shot from multiple angles have been recorded

- 6 -

If only one angle is recorded, (X) is displayed

Display Function

While the disc is playing, press the **DISPLAY** button on the remote control repeatedly to display

Elapsed Time: Elapsed time from the beginning of the chapter/title which is currently playing. naining Time: Remaining time of the chapter/title which is currently playing.

	Title	Chapter	Elapsed time of the current chapter
ODVD TT	1/10	CH 1/16	🕒 00:00:07
Auc	lio language	S	ubtitles Camera angle
🗭 1/3 ENG	D III	6CH	1/2 ENG P⊡P 1/1
	Title	Chapter	Remaining time of the current chapter
ODVD TT	1/10	CH 1/16	C-00:12:10
	Title	Chapter	Elapsed time of the current title
ODVD TT	1/10	CH 1/16	🕒 00:10:02
ODVD TT	Title	Chapter CH 1/16	Remaining time of the current title

LOCATING A DESIRED SECTION

Locating a specific chapter / track / title / time

If you know the chapter / track / title / time number you want to play, you can locate a specific chapter track / title / time by directly selecting a chapter / track / title / time number.

- Press the GOTO button to search your desired chapter / track / title / time 2. Press ◀ or ▶ button to highlight a chapter / track / title / time and press the corresponding number button(s) for the chapter / track / title / time you want.
- 3. Press the OK button to confirm. The unit will start playback about 3 seconds later.
- Some discs may not respond to this process.
- Some scenes may not be located as precisely as you specified.
- · This method for accessing specific locations is available only within the current title of the DVD

• DVD TT 01/10 CH 001/016 ⊕ 00:13:07

• DVD TT 01/10 CH 001/016 . 00:13:07

• DVD TT 01/10 CH 001/016 🕒 00:13:07

●CDDA TRK 1/10 ◀》 🖄 🕓 00:00:07

PROGRAMMABLE MEMORY

<u>тс</u>тс тс тс

Chapter number

Track numbe

 1
 -- 9
 (--)
 13
 (--)

 2
 [--]
 6
 (--)
 10
 [--]
 14
 [--]

 3
 [--]
 7
 [--]
 11
 [--]
 15
 [--]

 4
 [--]
 8
 [--]
 12
 [--]
 16
 [--]

e a Audio CD

Clea

► Clea

Playing Titles/Chapters in a Favorite Order

- You can combine your favorite titles/chapters and play them e.g. DVD 1. Press the MEMORY button and a program screen
- appears.
- Select the items in the order you want by pressing the buttons. Each time you press the Cursor buttons $(\Psi, \blacktriangle, \P, \Psi)$, the space is highlighted. Highlight where you want to enter, then press the corresponding number
- Press the Cursor buttons $(\mathbf{V}, \mathbf{A}, \mathbf{A}, \mathbf{V})$ to move the highlighted bar to \mathbf{V} , then press the \mathbf{V} PLAY or OK button. The DVD player starts memory playback.
- To resume normal playback from memory playback) Press the MEMORY button in stop mode
- Press the Cursor buttons $(\nabla, \blacktriangle, \checkmark, \blacktriangleright)$ to move the highlighted bar to "Clear", then press the OK button. All
- the input programs will be cleared. c) Press the PLAY button to resume normal playback

- If the title or chapter numbers you entered is not permitted by the DVD, after you press the OK button, it will restore to [- -]. You should re-enter correct
- Some discs may not permit memory playback operation.
- If you select repeat during memory playback, the DVD player repeats the current memory playback.
- If you press the MEMORY button while the display appears on the TV screen, the display disappears.
- · The programmed selections will be cleared when you open the disc tray or turn off the DVD plave

- 7 -

PLAYING DivX[®] VIDEO OR PICTURE FILES

This unit can play DivX® and picture files stored on USB flash drives, SD cards, CD-R/CD-RW, DVD+R/-R or DVD+RW/-RW discs

To play video files on this product you must first convert them to DivX format using the DivX Plus Player on your PC or MAC. This application can be downloaded at www.divx.com. Please do so, and then install on your PC or MAC.

and press the **PLAY** button to resume playback, • You also can use the GOTO button or use the numbered buttons to enter a photo number and

ABOUT DIVX VIDEO: DivX[®] is a digital video format created by DivX,Inc. This is an official DivX

Certified device that plays DivX video. Visit www.divx.com for more information and for software tools

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play

DivX Video-on-Demand (VOD) content. To generate the registration code, go to the DivX VOD section

in the device setup menu. Go to vod divx com with this code to complete the registration process and

REPEAT PLAYBACK

You can play the same chapter repeatedly.
 While the disc is playing, press the REPEAT DISC button until the Repeat Chapter indicator displays on the screen. The current chapter is played repeatedly.

2. While the disc is playing, press the REPEAT DISC button until the Repeat Title indicator displays

While the disc is playing, press the REPEAT DISC button until the Repeat Off indicator displays

1. While the disc is playing, press the REPEAT DISC button until the Repeat single indicator displays

2. While the disc is playing, press the REPEAT DISC button until the Repeat all indicator displays

While the disc is playing, press the REPEAT A-B button at the beginning of the section (Repeat A- is

While the disc is playing, press the REPEAT A-B button until the Repeat A-B off indicator displays on

A-B repeat can only be used within the same title. If the start and end of the section to be repeated

The A-B repeat function does not operate in scenes where different camera angles are recorded

- 8 -

Download from Www.Somanuals.com, All Manuals Search And Download.

3. Press the REPEAT DISC button until the Repeat Off indicator displays on the screen.

displayed) you want to play repeatedly. 2. Press the REPEAT A-B button again at the end of the section (Repeat A-B is displayed)

You can play a specific title or chapter repeatedly. (Title repeat, chapter repeat, A-B repeat)

During picture playback, you can press ANGLE button repeatedly to rotate the picture.

Playing DivX[®] Video/ Picture Files

If playing DivX video or picture files from a USB drive or SD card see note below

- Press SOURCE key to select DISC mode after turning on the unit
- 2. Open the disc door
- 3. Place a DivX® / picture file disc onto the tray with label side
- 4 Close the disc door
- 5. A selection menu will appear on the screen.
- 6. Press ◀ or ▶ button to select the picture 🖭 or video 📰 icon, and then press OK.

If picture mode is selected, use below to nevigate the menu: A / ♥ : selects a file
 ♥ / ▶ : page up or down
 RETURN : returns to previous menu

ENTER : plays your selected file

quickly select any image

to convert your files into DivX video.

learn more about DivX VOD

Repeating a chapter

Repeating a title

on the screen

You can play the same title repeatedly.

To resume normal playback

Repeating a single track

Repeating a whole disc

To resume normal playback

Repeating a specific section

To resume normal playback

the screen.

Note

You can play a specific section repeatedly.

You can play the same track repeatedly

on the screen. The current title is played repeatedly

You can play a single track and whole disc repeatedly.

on the screen. The current track is played repeatedly

on the screen. The whole disc is played repeated

3. The unit will immediately begin replaying your selection

Some discs may not permit A-B repeat operation.

are in different titles. A-B repeat is cancelled

You can specify a segment only within the current title or track.

 For playing files on USB flash drive or SD card, you should plug in the USB flash drive or SD card, we should be used in the USB flash drive or SD card when the unit is in STANDBY mode. Press SOURCE button, select USB or Card mode, then follow step 6 above. You can press the **III PAUSE** button to interrupt playback,

DivX Certifed® to play DivX® video, including premium content

CUSTOMIZING THE FUNCTION SETTINGS

A < ■ > ♫ [■]

I ANGUAGE SETUP

- Press the SETUP button in stop mode.
- Press ▼ button to select Player Menu, Subtitle, Audio
- and Disc Menu 3. Press \blacktriangleright button, then use \blacktriangle / \checkmark button to select your preferred language. Press the OK button to confirm.
- 5. Press the SETUP button to exit the menu.

æ

PGUPION

RETURN

ENTER

2

ENTER

- Some DVDs may be set to display subtitles in a different language other than the ones you selected. A prior subtitle language may be programmed on the
- Some DVDs allow you to change subtitle selections using the disc menu only. If this is the case, press the MENU button and choose the appropriate subtitle language from the selection on the disc
- · Some DVDs may not be played in the language you selected. A prior language may be programmed on the disc.
- Some DVDs may not include your pre-selected language. In this case, the DVD player automatically displays disc menus consistent with the disc's initial language setting.

VIDEO SETUP

- Press the SETUP button in stop mode. Press ▶ button to select Video.
- Press ▲ / ▼ button the setting item: Aspect Ratio, HDMI Res. or JPEG Interval.
- 4. Press ▶ button, then use ▲ / ▼ button to select the setting choice on the right. Press the OK button to confirm
- 6. Press the SETUP button to exit the menu.

Aspect Ratio

Depending on the format of the DVD disc, you can choose the picture format (aspect ratio) best suited the format of your TV screen

When wide-screen video is played in this mode on a conventional scree black bands appear at the top and bottom of the screen.

4:3 PS

· When wide-screen video is played, this mode clips the right and left sides of the image so that it can be viewed on a conventional screen. Some wide-screen DVDs that do not permit Pan Scan mode playback are automatically played in letterbox mode (black bands that appear at the top and bottom of the screen)

This is the correct mode for playing wide-screen videos on the unit or other external wide-screens

Note

- The displayable picture size is preset on the DVD. Therefore, the playback picture of some DVDs may not conform to the picture size you select. When you play DVDs recorded in the 4:3 picture size only, the playback
- picture always appears in the 4:3 picture size regardless of the Aspect Ratio setting. Select 16:9 to conform to the LCD screen on the unit. Always be sure that
- your Aspect Ratio conforms to the actual TV in use if you connect the unit to a TV.

HDMI Res. (Resolution)

You can set the HDMI Res. (Resolution) to be Auto, 480p, 720p, 1080i or 1080p, according to the connected TV

- Select the HDMI resolution according to the performance of the connected TV.
- If the Video out is not set to HDMI, you cannot select the HDMI Res

JPEG Interval

To set the JPEG Interval for slide show playback. Select Off to disable the slide show feature.

- 9 -

Plavs back one file at a time.

- 5 seconds Plays back images in the form of a slide show at 5 seconds interval.
- 10 seconds Plays back images in the form of a slide show at 10 seconds interval. 15 seconds Plays back images in the form of a slide show at 15 seconds interval

AUDIO SETUP . Press the SETUP button in stop mode.

- Press button to select Audio.
- 3. Press \blacktriangle / ∇ button the setting item: Digital Out or
- Night Mode 4. Press ▶ button, then use ▲ / ▼ button to select the setting choice on the right.
- 5. Press the OK button. Press the SETUP button to exit the menu.

Digital Out

lects the output sound format corresponding to your system connection.

PCM(STEREO):

Select when connected to a Multi-channel digital stereo amplifier.

RAW (DVD FORMAT)

Disc audio raw data will be output

If you connected to a TV using HDMI, and are using the TV's speakers for audio playback, make sure to select "PCM (STEREO)

Night Mode

Night mode is equivalent to Dvnamic Range Compression. If turned on, "Night Mode" will limit the volume on loud passages of movies (such as action sequences) while still allowing you to hear quiet passages (such as dialog).

Note: Night mode is Dynamic Range Control (DRC) option for analog audio output.

SYSTEM SETUP

- Press the SETUP button in stop mode.
 Press ▶ button to select System.
- 3. Press ▲ / ▼ button the setting item: Default. View
- DivX(R) VOD or Screen Saver. 4. Press ▶ button, then use ▲ / ▼ button to select the

Default

Note: It will take 3-5 seconds to reset the DVD player to the factory default.

View DivX(R) VOD

DivX[®] Registration

DivX[®] registration code allows you to rent and purchase movies using the DivX[®] VOD service from the internet. This menu setting will display the registration code of your unit as follows:



Go to the website http://vod.divx.com to activate your DivX registration code.

This website will also give you information on how to purchase and download movies, and how to enable video content to be played on your product. You will have the options of transferring content to a USB flash drive, SD card or disc (CD-R/RW, DVD+R/-R or DVD+RW/-RW) for playback on your product

Note

- This registration code is for DivX[®] Video-On-Demand only. Do not apply this code for other applications or websites.
- If you have already registered this product, selecting the View DivX(R) VOD setting will allow you to deregister (deactivate) the product for DivX playback - we recommend you DO NOT deregister

Screen Saver

To turn on or off the screen saver (screen protection to prevent image burn).

Note: When you leave the unit in DVD stop mode for approxiamtely 5 minutes, the screen saver of the unit automatically appears if you set the Screen Saver to On mode. To turn off the screen saver press the PLAY button

Specifications and external appearance are subject to change without notice. Note: See section 3 (on other side of this sheet) for Troubleshooting Guide.

 
Need more help?

Please visit online help at WWW.RCAav.com

AVC Multimedia Markham, Ontario L3R 1E3

© 2010 AVC Multimedia http://www.RCAav.com Printed in China 811-288S91W011





 
















 $A \square \square$

View DivX(R) VOD Screen Saver

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com