




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for RCA DRC616N. You'll find the answers to all your questions on the RCA DRC616N in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual RCA DRC616N
User guide RCA DRC616N
Operating instructions RCA DRC616N
Instructions for use RCA DRC616N
Instruction manual RCA DRC616N

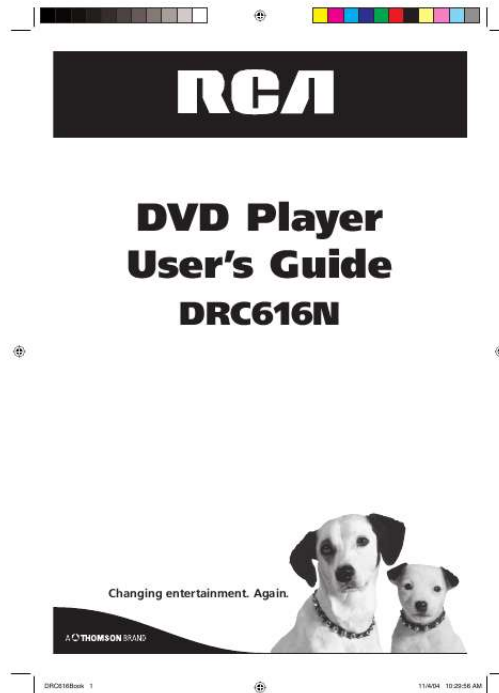

[Your user manual
RCA DRC616N](#)

Manual abstract:

4 Connecting your DVD Player to Other Components 5 Buttons, Jacks, and Controls 6 The Remote Control 8 Using the MODE Button .9 Using Different Menus .10 Playing mp3, WMA, and/or JPEG Files 17 Music Menu 18 Photo Menu 18 Movie Menu .18 Chapter 3: Menu System The DVD Player Menu System 19 The LANGUAGE Menu 19 The DISPLAY Menu 20 TV Aspect .20 Display Mode .21 The AUDIO Menu .21 Dolby Digital and DTS 21 Sample Freq 22 Digital Output .22 The LOCK (Parental Control) Menu 23 Rating .23 Password .23 Country Code . 24 Others Menu 24 PBC (Playback Control) 26 Auto Play. 24 B.L.E. (Black Level Expansion . 25 Load Default 25 Screen Saver .25 Lastplay 25 Chapter 2: Playing Discs Compatible Discs 11 Regional Coding 11 Turn on the DVD Player 11 How to Load and Play a Disc 11 Playback Options 12 SHIFT Button 12 Picture Scan .12 Freeze Frame and Frame Advance .12 Slow Motion .12 Skip Forward/Backward 12 Using the On-Screen Info Displays . 13 Title/Track/PBC Icon .14 Chapter Icon .14 Time Display 14 Audio Language Icon .14 Subtitles Icon .15 Camera Angle Icon .15 Sound Icon .15 Other Playback Features. 16 Repeat 16 A-B Repeat 16 Random Playback .16 Program Playback (Video CD) .16 Creating a Bookmark . 16 Clearing a Bookmark 17 Zoom (Program) .17 Chapter 4: Additional Information Troubleshooting 26 Country Codes 28 Language Codes 30 Maintenance of Cabinet .32 Handling Cautions 32 Recommendations and Information Concerning Discs 33 Limited Warranty .35 Accessory Information .37 This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home use only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. 1 DRC616Book 1 11/4/04 10:30:00 AM Chapter 1 What's in the Box Connections and Setup Thank you for purchasing the DVD Player. Unpack the box completely and tear off any protection films. Portable DVD Player DVD Battery Power Adapter and Charger Car Adapter Carrying Bag (not shown) Audio/Video Cable S-Video Cable DVD Player User's Manual Changing Entertainment. Again. DRC616N Remote Control with 2 AAA Batteries User's Guide Important: Graphics in this User's Guide are for representation only. Your unit and its operation may differ slightly. 2 Graphics are for representation only. Your unit may differ slightly. DRC616Book 2 11/4/04 10:30:01 AM Connections and Setup Attaching the Battery The battery has 3 locating pegs which must be inserted into the 3 holes beneath the player. 1. Lay the battery down flat as shown in the illustration. 2. Place the player on top of the battery so that the battery's locating pegs fit into the fixing holes (on the underside of the player. 3. Slide the player backwards on the battery until it clicks into place. Note: Contact the applicable local governmental office and your current waste removal provider for assistance in determining the appropriate disposal method in your area for old batteries. Locating Pegs) Removing the Battery Remove the battery by pushing in on the tabbed arrow on the bottom of the battery and then sliding the player forward until it disengages from the locating pegs. Initial Setup of the Remote Control Install two AAA batteries into the remote control battery compartment located on the back of the remote. In order to avoid any risk of explosion, observe polarities indicated inside the battery compartment. Replace only with the type of batteries specified above. Do not throw them into fire, do not recharge them. If you are not using the remote control unit for an extended period (several weeks), take the battery out. 3 Graphics are for representation only. Your unit may differ slightly. DRC616Book 3 11/4/04 10:30:03 AM Connections and Setup The Player's Power Supply You can power your player either from the battery or power adapter..



[Your user manual](#)
[RCA DRC616N](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>