
RGЛ

user manual manual de usuario

DRC628

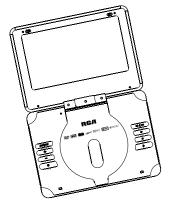

FN/F

-•

It is important to read this instruction prior to using your new product for the first time Es importante leer este manual antes de usar por vez primera su euipo.

External connections

This player can output sound and picture to external devices. To do so, slide the Function Switch on the left side of the player to the DVD position. Always switch off the player before connecting any devices.

Connect the black connector of the AV cable to the AV OUT jack of the player.

Connect the yellow (for video), red and white (for audio) connectors to the AV

white (for audio) connectors to the AV input jacks of the external device. For better sound output quality, connect a coaxial digital output cable (provided) to

the DIGITAL AUDIO OUT jack of the player and connect to the external device.

This player can also be used as a display for other devices, such as DVD player, game console etc. To do so, slide the Function Switch on the left side of the unit to the AV IN position. Alway switch off the player before connecting any

Connect the black connector of the AV cable to the AV IN jack of the player.


Connect the yellow (for video), red and white (for audio) connectors to the AV output jacks of the external device.

Power and connections

Connecting power adapter

- Connect the AC/DC or car power adapter to the power jack of the player. \odot Connect the other side of the
- power adapter with the wall plug or car power plug. Turn on the power. Disconnect the adapter if the set is not used for a period of time.

Using the battery Follow the illustrations below to install or remove the battery on the back of the player. Secure the battery with the lock and unlock slide

 

Charging the battery When the battery is low, the power/low battery indicator is red (instead of green). Connect the power adapter to the power jack of the player.

- Turn off the power to start charging.
- The battery charging indicator is red when charging and will turn green when the battery is fully charged.
 The battery cannot be charged while the player is being used.


NOTE: The RBRC seal on the rechargeable battery used in your Thomson Inc product indicates that we are participating in a program to collect and recycle rechargeable batteries. For more information, go to the RBRC web site at <u>www.rbrc.org</u>, or call 1-800-822-8837, or contact a local recycling center.

More information



The regional code for your player is 1 (The U.S., U.S. Territories and Canada). Only DVD discs that have regional codes of 1 or ALL (for all regions) can be played by your player.

Car mounting You can easily mou illustration below:

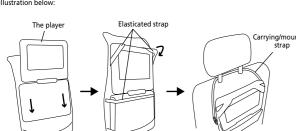

DVD copy protection This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited consumer uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

is prohibited the player on the back of a car seat with the help of the carrying case. See



Safety information

FCC information

FCC information This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product. This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception. If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and

radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:
Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
Move the unit away from the equipment that is receiving interference.
Plug the unit into a different wall outlet so that the unit away from the receiving interference are on different branch circuits. If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television.

experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. covernment Printing Office, Washington. DC 20402. Please specify stock number 004-000 00345-4 when ordering copies. This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

Player setup

Player setup

- Press SETUP and the player's setup menu will show on the screen.
 Select a menu (General setup, Audio setup and Preference page) icon using ketup.
 Select one of the available options under verbinder under the scale options under
- select one of the available options under each icon using ▲ ▼ keys.
 Press ► key to access the submenus and use ▲ ▼ keys to select an option.
 Press ENTER to confirm your selections.
 Return to a previous menu using ◀ key.
 To exit from the player menu, press SETUP



General Setup

CLOSED CA PASSWORD

- General Setup
 To setup:
 TV display to select the screen format.
 OSD language to select the player mennu language.
 Closed captions to turn closed captions function on or off.
 Password to set the password for parental control. Use the numeric keys on the remote control for a 4-digit password setup.

Audio Setup

- 10 setup: 1) Digital audio to select the digital audio tput format
- Dolby digital settings to set the dynamic range compression

Preference Page

To setup: 1) Audio – to select the audio language. Subtitle - to select the subtitle language.
 Disc menu - to select the disc menu language.

More information

More on TVGuardian The license provides you with a 5 digit activa code. Input the activation code in this setup menu with the numeric keys on the remote control. Press ENTER to confirm. When activation is successful, a message "TVG ACTIVATED..." shows at the bottom of the menu. After you have activated TVG, more settings can be defined.

TVG Mode: Select among Off, Tolerant, Moderate and Strict with increasing filtering standards.

Word Subset Filtering: In addition to the main TVG mode listed above, you can turn certain word subsets on or off:

Damn and hell - filters out variations of "Damn" and "Hell". Religious - filters out references to deity. To watch religious programs, turn this word subset off. Sexual - filters sexually explicit languages.

CC Mode: CC Off - captions are never displayed. ON Mute (default) - captions are displayed when offensive language is being filtered. CC Continous - captions are displayed

nually

CC Channel: To use the TVG captioning features while watching a DVD movie, your television must be capable of displaying closed captions. Make sure that your TV CC is set to CCI or CI (closed caption to chorach). Cod bet the CC observation nnel), and that the CC channel on you ayer is set to CC2 (default setting).

Refer to www.tvguardian.com for details

Precautions

General precautions

any battery other than the orginal ones provided by Thomson.

Precautions when watching

g

(

Main unit

=

DVD playback

12 disc locations can be stored as long as the disc remains in the player and the player remains powered on. Press **MARK** (remote control) to show or hide the bookmark menu.

Press ▲ ▼ ◀ ► to select a free bookmark

1

Press DISPLAY (remote control) repeatedly during playback to show various playback information on the screen. They include current title and chapter and playback time.

Audio and subtitle settings

Press AUDIO (for audio) or SUBTITLE (for subtitle) on the remote control repeatedly for

Tips: For VCD playback, press **AUDIO** for audio channel selection: mono left, mono right, mix mono or stereo. Press **MENU/PBC** repeatedly to select PBC mode (if available on the disc) on or

Angle setting

U.S. Limited Warranty

What your warranty covers: Defects in materials or workmanship

Defects in materials or workmanship.
 For how long after your purchase:
 90 days from date of purchase - unit exchange, which includes parts and labor.
 91 days to 1 year from date of purchase unit exchange, which includes parts only; you pay the labor.

What we will do:
Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.
How to make a warranty claim:
Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.

original carton and packing materials. Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Thomson Inc., Product Exchange Center, 11721 B Alameda Avenue, Socorro, Texas 79927 Insure your shipment for of loss or damage.

Insure your shipment for of loss or damage Thomson accepts no liability in case of damage or loss en route to Thomson. Pay any charges billed to you by the Exchange Center for service not covered by the warranty. A new or refurbished unit will be shipped to use for the tamage of the tamage of the tamage of the shipped to the tamage of tamage of the tamage of t

A new or returbished unit will be snipped to you freight prepaid.
 What your warranty does not cover:

 Customer instruction. (Your Owner's Manual provides information regarding operating Instructions and user controls. For additional information, ask your dealer.)
 Installation and set-up service adjustments.
 Batteries.
 Damage from misuse or neglect.

Playback information

Bookmark

When using your Portable D' not sit or stand too close to

volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone are in place.

The descriptions and characteristics in thi

he descriptions and characteristics in this wher's manual are for the purpose of general oference only and not as a guarantee. In order

reference only and not as a guarantee. In order to provide you with the highest quality product we may make changes or modifications without prior notice. The English version serves as the

final reference on all product and operationa details should any discrepancies arise in othe

During playback, press **REPEAT** (remote contro repeatedly to select repeating a chapter, a title (DVD discs), all items on the disc or cancelling the repeat playback function.

During playback, press A-B (remote control) once at the start and press A-B again at the end of a desired repeat section. The section will repeat continuously until you press A-B to resume normal playback.

During playback, press **ZOOM** (remote control) repeatedly to select a zoom in or out option to enlarge or reduce the image size. Press **A V 4 b** to view other parts of the enlarged image.

Press TIME (remote control) to show the search menu on the screen. For DVD, you can direct access to a title, chapter, title time, chapter time on the disc by pressing A > t os scroll to the current title, chapter, title time or chapter time and then press ENTER. Press the desired values with the numeric input keys on the remote control to access directly to the desired title, chapter or time.

You may also press **TIME** during DVD playback to view the current audio, subtitle, angle, repe and time display settings by pressing ▲ ▼ . If necessary, press **ENTER** to change the current

At anytime during playback, press **MENU/PBC** (remote control) to access DVD's menu. Press **TITLE** to access DVD's title menu (if available).

It is impossible to read the disc Make sure the disc is inserted with the printed side up. Make sure the disc is not warped, damaged,

deformed, stained or scratched. Check that the disc format is supported by

the player. Check that the disc's regional code matches that of the player. This player's regional

Remote control is not working
Battery may be empty.
Make sure you are pointing to the remote sensor on the player while using.

You have forgotten your rating password • Enter 9688 in the password menu to clear the memory. Keep this master password of of the reach of children. Refer to "Player

ord out

Accessing disc menu

Repeat playback

A-B repeat

Zoom

Searching

chapter or time.

code is 1.

Setup" for details.

Download from Www.Somanuals.com All Manuals Search And Download

lave a Blast-Just Not in your

Make sure you turn down the

For your safety

English

Main plug is used as the disconnect device, it shall remain readily operable and should not be obstructed during intended used. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket

This power unit is intended to be correctly oriented in a vertical or floor mount





4) Parental - to select the parental leve

Parental feature disables playback of certain DVDs based on their ratings from 1 (most restrictive) to 8 (least restrictive). DVDs that are rated above the level you set will not

are rated above the level you set will not play until the correct password is entered. If a password has been set, you cannot change the rating without entering the correct password. Refer to "General Setup > Password" to setup the password. 5) Default – to restore menus to default

TVG Setup TVGuardian (TVG) is the Foul Language Filtering

technology to remove offensive language from the programs you watch. You need to purchase a license to activate this feature. For more information, refer to More Information - More

n TVGuardiar

Display setup

Specifications

Model: DRC628 TV System: NTSC

adapter bundled)

Press FUNCTION (remote control) and then pr ▲ ▼ to select among BRIGHT (for brightness), CONTRAST (for contrast) and COLOR (for color saturation). Adjust the values by pressing ◀ ►

To restore settings to the default values, press ▲ ▼ to select RESET and then press ENTER.

Supported disc formats: DVD, SVCD, VCD, CD, HDCD, CD-R, CD-RW, DVD+/-R, DVD+/-RW

Supported file formats: MPEG, MP3, WMA, JPEG

- General precautions Water and Moisture Do not use this product near water for example, near a bathutb, wash bowk, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like. Do not spill liquids on your Portable DVD or its components as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. To clean your Portable DVD use soft slightly damp cloth. Always allow all the components to dry completely before using again. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. Heat The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Do not expose the player to direct sunlight. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous votage or other hazards. Refer all servicing to qualified service personel. ACDC power adapter cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. Power Sources This product should be
 - product. Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. Do not use

DVD playback

Quick start

- QUICK Start 1. Press OPEN DOOR to open the disc compartment door. Place a disc in the tray with the printed side up. Push back the compartment door. The player will automatically try to read and play the disc. If a menu appears, one of its options can be selected to start playing the disc. Select it using A ✓ ▲ keys and then press ENTER.
- ENTER. To stop playback, press .The player stores the point where playback was interrupted. If you press ►II again, playback resumes from this point. To stop playback completely or to start from the beginning, press ■ twice.
- Accelerated playback During playback, press ◄/ ▷ one or more times to vary the speed and direction of the accelerated playback. Press ►II to resume the normal playback.
- Still image
- During playback, press ►II once to freeze frame. Frame advance
- Press STEP (remote control) to activate STEP mode. Each press of STEP will advance forward image by image. Press HI to resume the normal playback.
- Slow motion During playback, press **SLOW** (remote control) one or more times to vary the speed and direction of the slow motion playback. Press ►II to resume normal playback.

Changing chapter/track During playback, press **H** be to go to the previous or next chapter/track.

Troubleshooting tips

The unit is not working. Turn off the power, and then turn it on

- again. Make sure power cord or battery is
- properly connected and battery is not
- empty. The unit cannot operate when the car adaptor power supply voltage is above 16V.

There is no sound or picture. • Check the connection to the mains socket

- or battery. Make sure the power switch is on. Make sure the power outlet is operational. Make sure the power cord is not damaged. Make sure the volume is not set too low.

There is no sound or sound quality is poor. Make sure the audio jacks are securely connected. Make sure the audio connector is not demendent.


- DVD regional code: 1 AV input: Composite x 1 AV output: Composite x 1 Power requirement: DC in 12V (power damaged. Make sure the volume is turned up. Make sure you have set the player's audio

ntrol) and then pres

- Power consumption: <10W Operating temperature: 5°C to 35°C (41°F to 95°F)
- Make sure you have set the player's additional settings correctly.
 Make sure you have entered the correct AV input for your TV.
 Make sure the audio is not set to mute. Operating humidity: 5% to 90% (no condensation)
 Size (with battery): 233(W) x 168(D) x 41(H)
- There is no picture or picture quality is Weight (with battery): 2.5kg
 - Make sure that the Function Switch is on
 - Make sure the video jacks are securely

 - Make sure that the sure year and the correct AV input for your TV.
 Make sure the video connector is not damaged.

 - Make sure you have set the player's video
 - settings correctly.Make sure the battery level is not low.

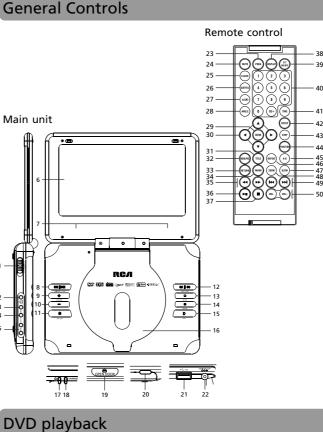

Program playback

Program enables playback of chapters or tracks in desired sequence. Press **PROG** (remote control) to show or hide the program menu. The program will be erased when the disc is unloaded or the player is powered off.

- Press ▲ ▼ ▲ ► to select a free bookmark and then press ENTER to create a bookmark at the point you press ENTER.
 Repeat step 1 to create more bookmarks.
 Press ▲ ▼ ▲ ► to select a created bookmark and then press ► I to start playback of the selected bookmark.
 Press ▲ ▼ ▲ ► to select an unwanted bookmark and then press CLEAR to clear the unwanted bookmark. Highlight an input field by using ▲ ▼ ◀ ► keys. "TT" stands for title and "CH" for

 - chapter. 2. Use the numeric keys to input values. 3. Repeat steps 1 and 2 to program more. Maximum 20 programs can be created. 3. Highlight "PLAY" on the screen and press ENTER to start the program playback. Press INT hose to the previous or next input page

Program:				
1 TT:0	1 CH:12	6 TT:	CH:	
2 TT:	CH:	Z TT:	CH:	
3 TT:	CH:	8 TT:	CH:	
	CH:	9 TT:	CH:	
5 TT:	CH:	10 TT:	CH:	
1	EXIT	PLAY I	PH	

Screen saver & power saving Screen saver will show when the player is in idle for more than 5 minutes. Press any key to de-activate it. If there is no further key activation for another 5 minutes, the LCD screen will shut

down for power saving. Press any key to turn the screen on again. Muting Press MUTE (remote control) to cut the sound output. Press again to restore.

Press ANGLE (remote control) repeatedly to select angle setting (if available on the DVD disc).

- Products which have been modified or
- incorporated into other products.Products purchased or serviced outside the USA.
 Acts of nature, such as but not limited to

- Acts of nature, such as but not limited to lightning damage.
 Product Registration:
 Please complete and mail the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.
 Limitation of Warranty:
 THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPERSOR LIMIC INCLUDING ALI
- EXPRESS OF IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN
- INFORMATION GIVEN BY THOMSON INC., INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARANTY. REPAIR OR REPLACEMENT AS PROVIDED
- NORTHIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTA OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT DROUBLIED BY ADDICADE LAW ANY INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE
- APPLICABLE WARRANTY PERIOD SET FORTH
- APPLICABLE WARKAN'T PERIOD SET FOR ABOVE. How state law relates to this warranty: Some states do not allow the exclusion n limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above nitations or exclusions may not apply to

General Controls

- Function switch (DVD/USB/AV IN)
- Digital audio output jack AV input jack AV output jack Headphone jacks LCD display

- Speakers Skips backward or forward a chapter/track Increases the volume
 Decreases the volume
- 11. Powers on or off the player 12. Searches backward or forward 13. Stops playback 14. Pauses playback 15. Starts playback 16. Disc compartment door 17. Power/low battery indicator 18. Battery charging indicator 19. Opens the disc compartment do 20. Remote control sensor

- USB connector
 Power jack
 Enters the program mode
 Mutes the sound output
- 25. Clears input in menus
- 26. Selects the subtitle setting
- 27. Selects the audio setting 28. Selects the angle setting 29. Confirms selection
- 30. Navigation keys in the menus

- 31. Enters the title menu 32. Enters the disc menu or VCD PBC menu 33. Returns to the main menu
- 4. Accesses the bookmark function
- 35. Searches backward or forward
- 36. Starts or pauses playback 37. Stops playback 38. Selects the display information
- 39. Turns the LCD display on or off 40. Numeric input keys

mp3, wma and jpeg files

Playback information

Playback of other media formats

CAUTION

Accessories

CAUTION
Danger of explosion if battery is incorrectly installed.
Replace only with the same or equivalent type of battery.

- numbers for program playback. During playback, press **TIME** repeatedly and then input values with the numeric keys on

The m3, wm and jpeg files stored on a USB device can be played via the USB connector on the back side of the player. After connecting the USB device, slide the Function Switch on the left side of the player to the USB position. Playbac operations are the same as files on discs as shown above.

no: 52-55-11-

P.O. Box 1976 Indianapolis, IN 46206 - 1976 ©2007 Thomson Inc. Trademark(s) ® Registered Marque(s) ® Deposée(s) Marca(s) ® Registrada(s) www.rcaaudiovideo.com Printed in China / Impreso en China

IMPORTER Comercializadora Thomson de México, S.A. de C.V. Álvaro Obregón No. 151. Piso 13. Col. Roma. Delegación Cuauhtémoc C.P. 06700. México, D.F.

:17 03:51 4/006 FOLDER 1 SONG 1 SONG 2 SONG 3 SONG 4

Your player also supports playback of mp3, wma and jpeg files. During playback of mp3 and wma files and stop mode of jpeg files, the following screen appears:

File directory Picture preview

- Use ▲ ▼ ◀ ► keys to navigate to different
- files or directories. Press ENTER to play the file highlighted. When viewing JPEG files, press ▲ ▼ ◀ ▶ keys will rotate or filp picture respectively When listening to mp3 or wma files, pres TIME and then input values with the uncertain the or the state control to
- numeric keys on the remote control to access directly to a specific file or time of a file.

- Program playback (mp3 and WMA files)

 Use ▲ ▼ ◀ ► keys to select the file you want to add to the program list and then press MARK (remote control). Repeat this step to program more.
 Press PROG (remote control) to display the program list and press ⊨I to start the program nalwhack

- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.
 If you purchased your product outside the USA:

RFC: CTM-980723-KS5 EXPORTER

The entire program list will be deleted when **OPEN/CLOSE** is pressed.

- To delete a file from the list, press **PROG**, use ▲ ▼ < ▶ keys to select the file from the program list and press **MARK** to delete it

- This warranty does not apply. Contact your dealer for warranty information.

Audio CD

45. Enters A-B repeat mode

Enters the search menu
 Enters the player's setup meuu
 Enters the step advance mode
 Adjusts the screen's brightness, contrast and color caturation

43. Eliters Arb repeat indue 46. Selects a repeat mode 47. Enters the slow playback mode 48. Enters the zoom mode 49. Skips backward or forward a chapter/track 50. Adjusts volume

Using the remote control


Remove the plastic tab from the battery compartment before first use.
To replace the battery, slide the release lock to the right and pull out the battery tray. (One button type, CR2025 battery required)
When using the remote control, make sure you are pointing to the remote sensor located at the front of the player.

Check that all the following accessories come

Check that all the following accessor with your player in the package: 1. Remote control x 1 2. AV cable x 1 3. Coaxial digital output cable x 1 4. Lithium ion polymer battery x 1 5. Car power adapter x 1 6. Car power adapter x 1 7. Carrying case x 1 8. Carrying/mounting strap x 1


CR2025

 
Your player also supports playback of audio CD. Playback starts automatically after an audio CD is loaded. Bookmark and program playback are available for audio CD, refer to "Bookmark"



the remote control to access directly to a track or specific time of the track or disc.

  Playback via USB connector





Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com