DVD+RW/+R

External USB 2.0 DVD ReWritable Drive

USER'S GUIDE

Download from Www.Somanuals.com. All Manuals Search And Download.

Dear Customer:

Congratulations on the purchase of your DVD+RW/+R ReWritable drive. We all want to express our sincere gratitude for your decision to purchase our product. We would like to reaffirm our commitment to you by providing a product that is easy to install and use.

You can be assured that your new product is made from the latest state-ofthe-art components. It also has been through the most rigorous testing and quality assurance procedures in the industry.

With an emphasis on products that revolutionize the way people interact with new technologies; we continue to introduce integrated solutions that enable users to take full advantage of their multimedia experience.

We hope you enjoy using your new product, and we look forward to earning your business in the coming years.

Thank you.

CLASS 1 LASER PRODUCT APPAREIL A LASER DE CLASSE 1 LASER KLASSE 1 LUOKAN 1 LASERLAITE PRODUIT LASER CATEGORIE 1

DANGER	INVISIBLE LASER RADIATION WHEN OPEN AVOID DIRECT EXPOSURE TO BEAM
VORSICHT	INSICHTBARE LASERSTRAHLUNG WENN ABDECKUNG GEÖFFNET NICHT DEM STRAHL AUSSETSEN
ATTENTION	RADIATION DU FAISCEAU LASER INVISIBLE EN CAS

Copyright Statement

It is a criminal offense, under applicable copyright laws, to make unauthorized copies of copyright-protected material, including computer programs, films, broadcasts and sound recordings. This equipment should not be used for such purposes.

Notice:	I/OMAGIC Corporation makes no warranty of any kind with regards to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular product. I/OMAGIC Corporation shall not be liable for errors contained herein or for incidental consequential damages in connection with the furnishing performance or use of this material.
	Every effort has been made to ensure that the information in this manual is accurate. I/OMAGIC Corporation is not responsible for printing or clerical errors.
	Mention of third party products is for information purposes only and constitutes neither an endorsement nor a recommendation. I/OMAGIC Corporation assumes no responsibility with regards to the performance of these products.
	This document contains proprietary information, which is protected by copyright (see below). The information contained in this document is subject to change without notice.
Trademarks:	Microsoft is a registered trademark of Microsoft Corporation. Windows, Windows XP/2000/Me/98/95/NT and their logos are trademarks of Microsoft Corporation. IBM is a registered trademark of International Business Machines Corporation. All other trademarks and product names used within this manual are the property of their respective companies and are hereby acknowledged.
Copyright:	© 2002 I/OMAGIC Corp. all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form, by any means, without prior written consent of I/OMAGIC.
Warranty:	I/OMAGIC Corporation warrants that the products it sells will be free from defects in materials and workmanship. Consult the warranty card for complete warranty information.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

FCC Warning Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can emit radio frequency energy and, if not installed or used in accordance with the instructions, may cause interference to radio communications. However, television reception interference can be determined by turning the equipment off and on. The user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For Europe



"The drive is in conformity with the EMC directive and low-voltage directive."

- 4 -

Table Of Contents

Introduction	6
Package Contents	7
System Requirements	7
Specifications	8
Features	9
About DVD+RW/+R	.10
Installation	.12
Step 1. Driver Installation	.12
Windows XP/2000/Me	. 12
Windows 98 SE	. 12
Step 2. External Drive Installation	.14
Nero Express	.16
Nero Express Installation	.16
Software Description	.18
Nero Express Interface	.18
Create a Data CD	.19
Create an Audio CD	.23
Copying a CD	.27
Burn DVD+RW/+R Media	.30
Nero Express Extras	.31
Nero Audio Extraction	.31
Nero Sound Editor	.32
Nero Cover Designer	.32
Nero Classic Interface	.33
PowerDVD	.34
System Requirements	.34
Features	.35
Before You Begin	.36
PowerDVD Interface	.37
Region Code Settings	.39
Playing DVDs	.39
Navigating During Playback	.40
Express Menu	.40
Disc Wizard	.41
Disc Wizard Installation	.41
Burning Your Movie to DVD	.44
Frequently Asked Questions	.49
DVD+RW/+R	.49
NERO EXPRESS	.51
PowerDVD	.54
	.56
Limited warranty	.57

- 5 -

Introduction



Take a giant leap ahead of the competition with the new DVD+RW/+R ReWritable drive. With today's increased demand for processing large amounts of information, your new DVD+RW/+R drive provides the perfect balance between compatibility and increased storage solutions. This exciting product combines traditional CD burning with the ability to burn and playback DVD formats on DVD+RW/+R media. DVD+RW/+R is a ReWritable disc with the ability to store more than 2 hours of DVD video or up to 4.7GB of computer data. What's more, DVD+RW/+R discs are compatible with most DVD players and computer DVD-ROM drives.

DVD+RW/+R offer advantages that include:

- 1. As the successor to CD-R/RW, it's as easy and comfortable to use as your existing PC peripherals.
- 2. Excellent compatibility with existing DVD-ROM drives and DVD-Video players.
- 3. Shortened formatting time (only a little over a minute). High-speed writing time of 2.4x, which is equivalent to 22x on CD drives.

Your new DVD+RW/+R device incorporates the USB 2.0 (Universal Serial Bus 2.0) high-speed protocol. USB 2.0 provides a higher transfer rate of 480 Mbits/second, which means faster and more efficient solution for all your data transfer needs. The external drive can automatically sense between standard USB and high-speed USB 2.0, so compatibility is not an issue. Your product comes complete with software for burning CDs and DVDs as well as playing DVD movies. **Important: USB 2.0 is required to burn DVD+RW/+R media at increased speeds.**

- 6 -

Package Contents

- DVD+RW/+R External USB 2.0 ReWritable Drive
- One Piece DVD Media
- DVD Authoring Software
- CD Mastering Software
- DVD Playback Software
- User's Manual
- Easy Start Guide
- Warranty Card
- USB Interface Cable
- Power Cable

System Requirements

Hardware:

- IBM PC/AT Compatible
- 64MB RAM (128MB recommended)
- 32MB free disc space

For DVD Writing:

- Pentium II 400MHz processor or faster (Pentium III 800MHz processor or faster recommended)
- Windows XP/2000/Me/98 SE
- Minimum 128MB (Over 256MB recommended)
- Over 750MB free disc space (Over 5GB recommended)

For CD Writing:

- IBM Compatible PC (Pentium 166MHz or higher)
- Windows XP/2000/ME/98 SE
- 64MB RAM (128MB recommended)
- 32MB free disc space

For DVD Playback:

- Pentium II 350MHz processor or faster
- Windows XP/2000/ME/98 SE
- Minimum 64MB

- 7 -

Specifications

Interface	USB 2.0
Supported write media	DVD+RW/+R, CD-R, CD-RW, High Speed CD-RW
Write speed	 (DVD+RW/+R) 2.4x (CD-R) 2x, 4x, 8x, 12x (CD-RW) 2x, 4x, 10x
Reading speed	 (DVD-ROM/DVD+RW/+R) Max. 8x (CD-ROM/CD-R/CD-RW) Max. 32x
Average access time	 (DVD) 140 msec. (8x) (CD) 120 msec. (32x)
Data transfer speed (at I / F)	Max. 480Mbits/second
Power Requirement	DC +5V/+12V
Power Consumption	16W
Buffer memory	2MB
Writing mode	 (DVD+RW/+R) Random Access Write, Sequential Write (CD-R/RW) Disc-at-Once, Session-at- Once, Track-at-Once, Multi-Session, Packet Writing
Writing format	 (DVD+RW/+R) DVD-ROM, DVD-Video, Random Access Write (CD-R/RW) CD-DA, CD-ROM, CD-ROM XA, CD Extra, CD-I, Mixed-Mode CD, Video CD, Photo CD, CD TEXT, Bootable CD
Installation	Horizontal
Weight	Less than 2.6 lb

Features







USB 2.0 Features:

- High Speed External USB 2.0
- Burn Audio CDs or Make Copies of Your Favorite CD
- Easy Installation
- Plug And Play Compatible
- Hot Swappable Connection
- Stackable Casing
- Built In Cooling Fan
- Supports Microsoft Windows XP/2000/Me/98 SE

DVD+RW/+R Features:

- Large capacity of 4.7GB.
- Excellent compatibility; data can be read on existing DVD-players and DVD-ROM drives.
- Fast write speed of 2.4x, equivalent to 22x on CD drives.
- High-speed formatting using the Background Formatting function.
- Write speeds of 12x for CD-R write, 10x for CD-RW rewrite, and 32x read.
- Equipped with Buffer Underrun Error Protection for CD-R/RW write.
- Bundled CD Mastering and Playback Software for higher performance and increased value.

Note:

In order to reach USB 2.0 speeds, you must provide a USB 2.0 controller card or your computer's motherboard must support USB 2.0. This device will automatically determine the speed of your USB port and adjust between USB 1.1 and USB 2.0 speeds. **A USB 2.0 controller card is NOT provided with this product.**

- 9 -

About DVD+RW/+R

Your new DVD ReWritable drive supports the DVD+RW/+R format which offers many unique advantages over the competition. DVD+RW/+R has been designed from the start to be compatible with DVD drives and DVD Video players both physically as well as logically. What this means is that DVD+RW/+R discs recorded on a DVD+RW/+R recorder can be played on virtually all DVD players, and data DVD's can be played on all DVD-ROM drives.

With industry wide support from major manufacturers from the DVD+RW Alliance, you're assured that your DVD format will be virtually compatible everywhere in the world. What this means is that your DVD+RW/+R disc that you wrote, will be playable on your friend's DVD player. Sharing home movies and files couldn't be easier. Some distinct advantages that DVD+RW/+R format provides include:



Lossless Linking

DVD+RW/+R Lossless Linking technology is built within the basic specification of the system. This means that you can stop the writing process at any given point, and then resume the writing of data, or it can replace individual sectors on the disc at any given location. This distinctive Lossless Linking technology keeps the gap between data within 1 micron when adding/editing data. This results in the writing of sectors on the disc that remain fully compatible with existing DVD-ROM drives and even the more critical DVD-Video players in case you

are creating a DVD-Video disc. Lossless Linking allows for high performance drag-'n-drop applications like packet writing.

Defect Management

DVD+RW/+R incorporates a Defect Management System by default which was designed to be 100% invisible to existing drives and players, so that the discs can be read as if they were normal DVD-ROM or DVD-Video discs.

- 10 -

Furthermore, DVD+RW/+R allows address information (stored in land prepits) to be read during the recording process, which allows it to locate at what position of the disc the writing process is taking place. When the writing process is interrupted due to a shock of the drive, it returns to the previous writing location so that the writing can be continued.

Higher Write Speeds

DVD+RW/+R drives will write DVD+RW/+R discs at 2.4x DVD speed. This results in a transfer rate of about 25Mbit/sec, which is comparable to a CD drive writing at about 22x CD speed. A full DVD-Video disc can this way be completed within 25 minutes!

Background Formatting

Background formatting allows the drive to format only a portion of disc at first, which is necessary for initial writing, and then automatically resumes formatting for the remaining portion in the disc when writing/reading is not processed. Formatting is suspended anytime writing or reading starts. This reduces formatting time and discs partially formatted can be ejected from the drive and still be completely playable.

Feature	DVD+RW/+R	DVD-R/RW
Accurate Lossless Linking	Yes	No
Defect management (compatible with current readers)	Yes	No
Addressing during recording	Yes	No
CLV writing	Yes	Yes
Optional CAV writing	Yes	No
Write speed ReWritable discs	2.4x DVD	1x DVD
Edit DVD video recording on PC using same disc	Yes	No
Background formatting	Yes	No
Mount Rainier support	Yes	No

Comparison table

Recorded media may not be readable on approximately 30% of existing DVD-ROM drives and DVD-Video players. For detailed information regarding the DVD+RW/+R format, please refer to the DVD+RW Alliance webpage at http://www.dvdrw.com.

Installation

Installing the DVD+RW/+R External USb 2.0 drive is a 2-step process, which involves installing the USB 2.0 drivers (Windows 98 users only) and connecting the external drive.

Step 1. Driver Installation

Windows XP/2000/Me

Proceed To Step 2

Windows XP/2000/Me users **DO NOT** need to install USB storage drivers. Windows will automatically provide a default USB device driver for this device. Your new drive will be listed under "**My Computer**" as a new "**Compact Disc**" device. **Proceed directly to Step 2**.

Windows 98 SE

1

Windows 98 users must run the following procedure before connecting the USB drive.

- Insert your DVD+RW/+R "**Driver**" CD-ROM into your CD drive.
- 2 Double click on "**My Computer**" and open your CD-ROM drive. Browse to the "**Win98SE**" directory and run "**TPPINST.EXE**".



- 12 -



4 Select "**Complete**" and click "**Next**" to continue. After the install program finishes, proceed to Step 2 to connect your USB 2.0 device.



- 13 -

Step 2. External Drive Installation

The next step is to hook up the DVD+RW/+R External USB 2.0 drive to your computer. Windows 98 users must run the "External DVD+RW/+R Driver Installation" from the previous section before proceeding below.

1	Power ON your PC.
2	Plug the power cable into your power outlet, and then into the back of your DVD+RW/+R External USB 2.0 drive.

3 Connect the USB cable to the USB 2.0 port on your new controller card. **(USB 2.0 controller card is NOT included with this device)**



- 14 -

4 Connect the USB cable to the back of your DVD+RW/+R External USB 2.0 drive.



5 Power ON the drive using the power switch located on the back.



- 6 Windows should detect a new USB device.
- 7 Your new DVD+RW/+R External USB 2.0 drive will be listed as a "Compact Disc" under "My Computer"

- 15 -

Nero Express



The bundled Mastering Software gives you a complete solution for making CDs right from your desktop. Nero Express provides a simple to use wizard interface that allows you to copy files from your computer to a recordable compact disc. You can also created Audio CDs that can be played in your home or car CD player. You

can even burn to DVD+RW/+R media for extended storage capacity:

- Burn Data CD, Audio CD, or DVD discs.
- Archive data.
- Back up a hard drive.
- Make CD boot discs.
- Create DOS/MAC hybrid discs (great for cross platform software developers)
- Create UDF or UDF/ISO file system discs.
- Mixed Mode CDs and many other features.

Nero Express Installation

Follow the installation instructions carefully. If you encounter a problem, refer to the troubleshooting section on this manual.



 Insert your Nero Express Installation disc into your CD-ROM drive, and double click on "Setup.exe" to begin the installation. Select "Next" to begin the installation process

- 16 -

Licence agreetient. Please read the folio	wing loanse	agricented care	nay.		é
nd-User Agreeners					
Ahead End User Los Software Producto: N Joenco: Ahead Saft	ense Agreer leio Il Burrin Ivale AG (14	est o RDM and/or N /reaf 1	en Express ("Soft)	vare 1	-
The terms of your los depend on whichter patries or (2) Ahead MPEG Layer 8 audio Thomson Pluttimedia	nie ageen joupuiche ar an Afreat compression	ent for the Anea red, the Suitwar Lieselle In Redmology fice	d Software devicable e from: (1) an Ahe moed by Fraunhole	et above ed OEM (IIS and	
UCENSE TERM	S AND CON	DI TIONS APPLI	CABLE TO SOFTV	ARE PURCHASE	FROM DEM
(# Lacoupt	d term of t	he preceding Lis	ans Agreement		
C i do rat a	accept the la	encol the prece	drig Liberate Agree	rvat	
			(Beck	Next5	Caroli
Nere Express In	estallation	Wizard			
		-			-
Dustament retermation Please ander	5				1 C 100 C
Construction of the second					
		-			<u> </u>
Ucerin	ore	Eastoner			
Usern	ore	Tuekow			
Ucero Ecerps	one ny tané	Ecology (
Utern Eterpo	one ng-tane	[Dustoner [Coopsey]			
Uterin Eterpa	one ng-tane	[Eustoner [Ecoport]			
Usern Doeps Instal	oline ng stane lac	[Latoner [Cospan]			
Utern Corps Install (C.VPn	ione ny care to gyen Filesh	Elatorer Ecoporty		Derge	
Utern Corps Install (C.VPn	one vyroere la ogun Filad	Ecolorier Ecolorier afrect		Darge	1
Usern Forga Install C.Vh	oline naj nama la oguna Filezh	Elektorer Ecopored afreed		Derge	1

 Scroll down and read the "License Agreement". Select "I Accept All Terms.." and click "Next" after you have read the agreement to continue with the installation.

 Enter your "Name, and Company" information into the appropriate boxes. If you choose to install to a different location, you may do so by clicking on the "Change" button. Click "Next" to continue.



 After the installation program is finished copying files to your computer, Click "Reboot" to restart your computer. You may also click on "Finish" if you wish to reboot at a later time.

Note: It is recommended that you restart your computer before using Nero Express.

- 17 -

Software Description

Nero Express is a professional package that gives you many features not found in other recording software packages. In the following paragraphs, you'll be introduced to the Nero Express interface as well as step by step instructions on how to record CD-R / CD-RW and even DVD+RW/+R media.

The software has extensive on-line help on all of its features and other general information. If you are looking for information, click on "**Help**" within the Nero Express program and you will find a wide variety of topics, including how to guides.

Nero Express Interface

This is the screen that you'll get when you first start Nero Express.



From here, you'll be able to do the following:

- Burn Data and Bootable CDs
- Burn Audio CDs including MP3 and Audio Mixed Mode CD's
- Burn VCD and SVCD
- Copy CDs
- Created Disc Images
- Burn DVD Movies

- 18 -

Create a Data CD

Follow the steps below to burn a Data CD. We will leave all the options with their default settings. For detailed information, refer to the Reference Chapter in the manual. The manual is on the Nero CD in the form of an Acrobat document.



Start Nero Express. From the drop down menu, please select the "**CD-R/RW**" media format. We will use a standard CD-R media for this example.





Select "**Data > Data Disc**" from the menu window to begin burning a data CD.



3 Now click on the "Add" button at the right to add the files you wish you to burn.



4 Select the files or folders you wish to burn by browsing to their location. Click "**Add**" to add those files to your list. You can add additional files or folders by repeating the process until you are satisfied with your selection. Click "**Next**" to continue.

Location: 🔛 My Doc	ments	📉 🗮 🖬 🛗 📑
Desktoo My Computer My Documents Folder decais: My Documents File Folder Nodified: 5/6/200 9/02/09	 Name Adabs MP3 My Abums My DVDs My Music My Pictures My Videos My Pictures 	Fice Fi Fi Fi Fi Fi Fi Fi Fi
	You can use this claig to select files/fou requested by Nero Express	ders

- 20 -

5 Check your "Final Burn Settings" and make sure you have the correct drive selected. Also check your burn speeds and the number of copies you wish to burn. Click "Burn" to begin burning.

Mere Express		98
Final Burn Settings Dick 'Burn'to start the recording p	eo cuerc	
Current Recorder	🚔 G RICOH DVD+RWINP5120	×
Disc Name:	My Disc	
Trice ICO, Texts		
Has (12) Tool)		
Wing Speed	12×(1.800 K8/4)	
Willing Speed Number of copies	12x(1.800 KB/s) @	
Willing Speed Number of copies	12x(1.800 KB/s) 또 1 (순) 같 Allow Hes to be adde diater (multicession disc)	

6 Nero Express should begin burning your selected files. If you wish to abort the burn process, click the "**Stop**" button.

33% Writing to d	isc			
lunning Process Socie Mat			R	C
1257:04 PM	RICEH DVD+RW MP5120			
	JustLink activated			
1257:11 PM	Stat of caching flag			
1257.11 PM	Caching files completed			
1257.11 PM	Stat of bumpiocess at 3947	7424x(2010436651 KB/s)		
Willing to dec				
		1 0.094		
Burn Process Status:	Used read buffer		TotalTime	0.00.14
1		33%		_
Writing at 12×(1.80 Recorder Buffer Level	0 KB/s) / Stake			
RICOH DVD	+FW/ MP5120	Tsack	10%	۰
	100	1122		

- 21 -

Nero should now begin caching files and burning your CD. When successful, will see the message "burn process completed successfully at...". Click the "OK" button to continue.



*NOTE: Successful burn rates are determined by your writer's burn speed as well as your media's certified burn rating.

If you wish to save or print a log file of your burn process, click the "**Print**" or "**Save**" button, otherwise, click "**Next**" to continue.

8



Congratulations! You have successfully burned a Data CD. You will now have the option of burning the same project again, burning a new project, creating a cover for your project or exiting Nero Express.

- 22 -

Create an Audio CD

Follow the steps below to burn an Audio CD. We will leave all the options with their default settings. For detailed information, refer to the Reference Chapter in the manual. The manual is on the Nero CD in the form of an Acrobat document.



Start Nero Express. From the drop down menu, please select the "**CD-R/RW**" media format. We will use a standard CD-R media for this example.





Select "**Music > Audio CD**" from the menu window to begin burning an Audio CD.



3 Now click on the "Add" button at the right to add the audio tracks you wish to burn.



4 Select the audio tracks you wish to burn by browsing to their location. Click "Add" to add those files to your list. You can add additional files or folders by repeating the process until you are satisfied with your selection. Click "Next" to continue.

Location; [My Documen	ts 🖌	- 🗈 🖆 🖬
Daskloo My Canool My Docum Folder det My Docu File Folder Nodiled	si enk: monta 5/6/2002 9:02:09 AM	Name Adobe HP3 HV Abums HV Abums HV Abums HV DVDs HV Abums HV DVDs HV Pictures HV Videos Finnacle Express New Workbookxib You can use this dialog to select files/folders requested by Nero Express	Sice F F F F F TOI KB M
Filetypes:	Al file: [1]	Add N	Finished

- 24 -

5 Check your "Final Burn Settings" and make sure you have the correct drive selected. Also check your burn speeds and the number of copies you wish to burn. Click "Burn" to begin burning.

93C#12	6
ତ RICOH DVD+RWINF5120	×
12c(1.000.00.rs) 1 2 Allow the to be addednew inslineation dit() Worky data are data after barring	
	Sec CREEC G. FICOH DVD+FRV/NP5120 1. (c) 1. (c) 1

6 Nero Express should begin burning your selected files. If you wish to abort the burn process, click the "**Stop**" button.

33% Writing to d	lisc			
urning Process losos mat				C
1257.04 PM	RICOH DVD+RW MP5120			
	Junif, ink activated			
1257:11 PM	Stat of caching files			
125711 PM	Caching files completed			
1257.11 PM	Stat of bumpiocess at 384	77424x(2010436651 KB/k)		
Willing to dec				
1		1.0.094		
8 um Process Status:	Used read buffer		TotalTime	0.00.14
F		33%		_
Writing at 12x(1.80 Recorder Buffer Level	0 KB/s) //State			
FICOH DVD	+F/W MP5120	Track	10%	•
	1. 1000	17-		

- 25 -

Nero should now begin caching files and burning your CD. When successful, will see the message "burn process completed successfully at...". Click the "OK" button to continue.



*NOTE: Successful burn rates are determined by your writer's burn speed as well as your media's certified burn rating.

8 If you wish to save or print a log file of your burn process, click the "Print" or "Save" button, otherwise, click "Next" to continue.



9 Congratulations! You have successfully burned an Audio CD. You will now have the option of burning the same project again, burning a new project, creating a cover for your project or exiting Nero Express.

- 26 -

Copying a CD

Follow the steps below to copy a CD. We will leave all the options with their default settings. For detailed information, please refer to the Reference Chapter in the manual. The manual is on the Nero CD in the form of an Acrobat document.



Which recorder would you like to use?







Note: Music CD's cannot be played on a standard CD-RW media. You must use CD-R media instead.

- 27 -

3 Insert your source CD into your source drive and click "**Burn**" to begin copying. If you have more then one CD-ROM drive, make sure you set your source drive accordingly.

or select source and destination	n dirvis.	
Source drive	5: FICOH DVD+FW NF5120	×
		14
Caute Ityou	 Brack Dispersive Resizes Come docs cannot be copied. They may be copy pro see uncore your doc can be copied, please run a trialin's 	lected or contain enore. the simulation mode.
Overtification drive	Compared to a service the copied. They may be copy pro- Come deco cannot be copied. They may be copy pro- and maximizing and is can be copyed, please run a trail rul- on Maximizing and select Simulation(tected or contain enois the simulation mode.
Declaration dive	Control of the second sec	Rected or contain entries the simulation mode.

4 If you are using a single drive for as both a source and writer, Nero will ask to replace your source media with a blank media after it is done caching.



- 28 -

5 Nero Express should begin burning your selected files. If you wish to abort the burn process, click the "**Stop**" button.

			sc	33% Writing to di
12				Burning Process
2				Please wat
~			RICEH DVD+RW MPS120	1257.04 PM
			JudiLink activated	
			Stat of caching filer	4 1257:11 PM
			Caching files completed	1257:11 PM
		77424x(2010436651 KB/s)	Stat of bumpiocess at 38477	1257:11 PM
				Willing to doc
		100%		1
0:00:14	TotalTime		Used read buffer	Burn Process Status:
		3.3%		-
) KB/z) /Stabe	Writing at 12x(1,800 Recorder Bulles Level /
•	10%	Ttack	FW MP5120	RICOH DVD+
		1000		
	11%	Tuack	NB/a) /Slata RW MFST20 eo	Writing at 12x(1).800 Recorder Buffes Level / RICEH DVD+

6 Nero should now begin caching files and burn your CD. When successful, will see the message "burn process completed successfully at...". Click the "OK" button to continue.



*NOTE: Successful burn rates are determined by your writer's burn speed as well as your media's certified burn rating.

If you wish to save or print a log file of your burn process, click the "**Print**" or "**Save**" button, otherwise, click "**Next**" to continue.



8 Congratulations! You have successfully copied a CD. You will now have the option of burning the same project again, burning a new project, creating a cover for your project or exiting Nero Express.

Burn DVD+RW/+R Media

Nero Express is capable of burning DVD+RW/+R media as well as standard media formats. To access these features, select your media format from the drop down menu on the main Nero Express interface. Follow the directions for burning a Data CD from the previous section.



- 30 -

Nero Express Extras

Nero Express also comes with additional features built in such as a Cover Designer, Sound Editor, MP3 Ripper as well as Nero's classic interface. These features can be accessed from the "**More**" button found on the Nero Express interface.



Nero Audio Extraction

Nero Express is able to extract and encode audio tracks into wav/mp3/aiv formats. To use these features, select "**Save tracks to HD**" from the main Nero Express interface.

ave	Tracks (F	SCOH DVD-RW	(P5120)				X
frack	ks:						
N	Start .	Longth	Mode	Tillo	Artisk	Ert	
10	1002.00	091618 (94 MBI	dado			. Egn	
20	1918.19	08.0978 (83 MB)	Aido			np)	_
3	17.28.14	04:28:42 (45 MB)	Audio			npd	
4	21/54.56	08/09 EI (R3 MB)	A ado			fan	
5	30.01.19	07:28 55 (76 MB)	Andro			np)	
B :-	17:33:25	07.55.58 (61 MB)	Audio			rip3	
7.	45.29.04	10:05 18 (102 MB)	Asdo			600	
Β.	9534.22	05.45.61 (59 MB)	Aado			npi	- 6-1
5	\$1.20.06	04:15/36 (44 MD)	Aido			npđ	~
		Total	1 Tu	108,0916.19(98 ME)		Salact (d	
ALK	to playest cor	wold .					
Pos	tion	and a second second			Vakate	Concert de la	
		Tasck II T	THE CID DE		Duput way	Digital	×
() at p	ut Be forest	2	ap 9	90 (* mp3)		w Sating	
Pat			C VD I	counents and Settings Vide	instatio/Decktop/	hack NoO1 mp2	
Elle	ane creato	nnehet	Man	es .			×
Din		1		Dee	60	Gpices	20

Note: Audio Extraction is not supported by USB drives. You may use the Audio Extraction feature of Nero Express from your internal CD-ROM drives.

- 31 -

Nero Sound Editor

While in "**Burn Audio CD**" mode, you can edit audio files by selecting an audio track and clicking on the "**Properties**" button. From here you can add audio filters, insert breaks, manipulate audio as well as many other features.

adio Track Infi					2
Track Properties	Indenez, Linex, Spik	Film			
Orellerenne					
a state of the	Provide States of the	State of the state of	-indiana and	the second second	1000
delana	ما ها ا مان المحمد الم	متعامد	kaulan man	and a stand of	and the second second
00.00.00	11:00:00	02:01.00	03.00.00	0400.00	05:08:08.27%
	Sector of the			1000	
Linger	وأجازة طائب أوأد أأت	فالالأسط أحديدهما	in the second second	and the difference	and a second second
Pationi					
1509.27 (End	l. Ne	ninder.	4M	PLap	Zamin
		Edk.			Zoon-Cut
	1	Celex		(Fullfiew
				OE Card	4 Auto

Nero Cover Designer

Nero Cover Designer lets you create custom CD covers for your Data and Audio CDs. Cover Designer works fluently with Nero Express to help you create stunning custom covers.



Nero Classic Interface

Nero Express can quickly revert to the classic Nero Burning-ROM look at the touch of a button. For those who prefer the original look of Nero Burning-ROM, simply click on the "**Nero**" button on the bottom of the Nero Express interface.



PowerDVD



PowerDVD is a high-quality, pure-software DVD (Digital Versatile Disc) player that brings highquality movies and karaoke into your multimedia PC. Using PowerDVD, you can playback high resolution DVD titles or MPEG-2 files with superb MPEG-2 video and Dolby AC-3 audio quality. Moreover, PowerDVD offers a complete set of navigation commands, which fully support not only basic operations such as play, fast forward, fast backward, stop and pause, but also those advanced features such as multi-angle viewing, multi-language and multi-subtitle selection, and even parental

control. With PowerDVD and it's high-quality audio/video performance on Pentium II processor-based PCs, no more hardware DVD decoder boards are required, saving users significant hardware costs. With these great advantages, PowerDVD is acknowledged as most suitable for home entertainment. From now on, you can easily enjoy DVD titles in highresolution display directly from their multimedia PC.

PowerDVD also takes into consideration that some sophisticated display chips are now equipped with certain hardware component for accelerating Motion Compensation, an important MPEG decoding operation, or better with IDCT, still another hardware-accelerating component. And, as we know, PowerDVD will automatically detect the existence of such display chip to utilize the embedded MPEG acceleration engine.

System Requirements

Please make sure your system meets the following minimal requirements before installation:

- Windows XP, Windows 2000, ME, 98, 98SE, operating systems
- Intel Pentium II 350MHz or above
- DVD-ROM, DVD-R/RW, DVD-RAM, or DVD+RW/+R drive with 1394, ATAPI, SCSI or Card Bus interface
- PCI sound card, USB audio box or motherboard built-in audio device
- 64MB RAM
- Hard disc requirement of at least 40MB
- Display card supporting DirectDraw overlay

- 34 -

Features

High Definition Video Playback

- Supports full resolution video playback at 720x480 for NTSC and 720x576 for PAL
- Correct aspect ratio and deinterlaced video frame capturing
- Displays a vast array of viewing screens (Refer to "Pan&Scan, Letterbox, and Widescreen" for more information):
- Supports DVD (MPEG-2), DVD VR, VCD (MPEG-1), SVCD, cDVD, cdDVD, miniDVD formats and DVD files on hard disc drive (HDD) playback
- Enriched playback smoothness and removal of jitter/jerkiness

Flawless Performing Audio Features

- Certified Dolby Digital and DTS multi-channel decoders
- Dolby Pro Logic II technology decodes 2-channel sources such as Audio CDs, MP3s, VCDs or SVCDs into a multi channels surround sound environment
- Supports SPDIF or Toslink pass-thru for Dolby Digital (AC-3) and Digital Theater System (DTS) for enhanced audio fidelity
- Supports MPEG-2 audio and LPCM (Linear Pulse Code Modulation) decoding
- Supports 2-channel virtual surround effects including TruSurroundXT, Dolby Headphone, Dolby Surround, and DirectSound3D/A3D
- Supports Microsoft DirectShow standard interface for DVD Video or game play
- Supports 2-channel output with down mix algorithms (e.g. Dolby Surround)
- Supports multi-channel output for mainstream sound cards
- Supports karaoke and MP3 playback

Complete Navigational Support

- Titles and chapters navigation through numerous and blazing fast methods
- Navigation slider allows a direct and instantaneous link to any scene
- Fast forward speeds of 1/2X, 1X, 2X, 3X, 4X, 8X, 16X, 32X
- Rewinding speeds of 1/2X, 1X, 2X, 3X, 4X, 8X, 16X, 32X
- Enhanced navigation speed/conformance (kernel loading speed/accurate random access)
- Step frame feature incorporating both forward and backward directions

- 35 -

Before You Begin

Some users may find the video/audio playback quality not as smooth as expected.

Please go through the following steps to enable the DMA mode of your IDE DVD-ROM drive.

First refer to your system manual to determine whether there is an Intel chipset in your computer. For systems that use non-Intel chipsets, it is recommended that you install the bus-master driver that can be found with your motherboard support CD-ROM or disc.

It is noted that, with platforms based on non-Intel chipsets, the following steps to enable the DMA mode may cause PowerDVD to work improperly on your system.

Windows XP/2000/Me/98

- First, double click on "My Computer" on Windows 95/98 desktop to access the DMA setting through the following path: My Computer / Control Panel / System / Device Manager / CDROM (DVD drive) / Settings.
- On the Settings tab, you can see the DMA option on the Options window. Please check this option to enable DMA. (Windows XP/2000 users, DMA mode is located under IDE/ATAPI controllers)
- 3. Reboot your system to enable the DMA mode of your DVD-ROM drive. You should be able to see that the video playback quality is improved.

- 36 -

PowerDVD Interface

PowerDVD presents you with a User Interface design as simple and friendly as your home VCR. Along with it's detailed yet clear design of the status display panel, it is very easy for users to comprehend and use each button.



	Button/Icon	Description
Α	Current Media Type	Displays the current media type
В	Navigational Slider	Visually displays elapsed time. Click along slider to jump to other locations
с	Display Area	Displays current settings such as audio coding, audio mode, language, and subtitles
D	Volume Level	Displays volume level
Е	Volume Controls	Increase, mute or decrease volume
F	Minimize	Minimizes user interface to taskbar
G	Power Off	Exits PowerDVD
Н	Help	Accesses online help
Ι	About	Displays information about PowerDVD
J	i-Power	i-Power takes you to the Internet directly
Κ	Capture Frame	Captures video content as bitmap image files
L	Go Up	Goes up to previous section when navigating DVD title menu selections
Μ	Audio Stream	Switches among available audio streams
Ν	Subtitles	Switches among available subtitles during playback
0	Menu	Accesses all available menus
Ρ	Full Screen	Switches to full screen and back to windows mode
Q	Configuration	Configuration settings are all located here
R	Eject	Ejects discs from CD/DVD-ROM drive
S	Select Source	Selects media source for playback
Т	Control Wheel	Refer to Control Wheel
U	Skin Toggle	Toggles between maximized and minimized skin
V	Menu/Number Pad	Activates/inactivates Menu/Number Pad

- 37 -



	Button/Icon Description	
А	Karaoke	Switches among karaoke modes
В	Angle	Switches among available angles if any
С	Repeat	Repeats titles, chapters, songs, etc.
D	Bookmarks	Adds bookmarks for specific DVD scenes
Е	Go to Bookmarks	Directly goes to bookmarked scenes



	Button/Icon	Description
А	Shuttle Reverse	Shuttles reverse at incremental speeds indicated by green point
В	Pause	Pauses playback
С	Step Backward	Goes to previous frame
D	Previous	Returns to previous chapter
Е	Stop	Stops playback
F	Shuttle Forward	Shuttles forward at incremental speeds indicated by green point
G	Step Forward	Goes to next frame
Н	Play	Plays media
Ι	Next	Jumps to next chapter

- 38 -

Region Code Settings

Most of the DVD titles in today's markets are governed by a regional code that divides the world into six separate regions. This ensures maximization of revenues for motion picture studios' theatrical and home releases, which times and dates vary from region to region.

- 1. Upon inserting your DVD, note the dialog box.
- Click "OK" after the region has been set, this dialog box will no longer prompt you unless an encoded DVD title from another region is inserted.

Caution: PowerDVD will only allow you to set the regional settings five times until the regional code is fixed. Subsequently, playback of DVD titles will be specific to one region. Some DVD titles may not be region-specific.

Playing DVDs

Now you are ready to play DVD Video titles:

- 1. Insert your DVD disc. Click "**Play**". Be sure that the source is correct. If not, click "**Select Source**" and choose the right drive.
- 2. A warning message or copyright information will appear depending on the DVD title. Usually, this content cannot be skipped over.
- 3. After the promotional content, you will be presented with the main menu. With your mouse, select "**Play**" by clicking once.
- 4. To use the "**Menu Pad**", click the outer right arrow button to the farthest right of the user interface and a pad will appear (located to the right of the Control Wheel).
- 5. Click the directional arrows. Click the center button after you are finished to "**Enter**".
- 6. The DVD will begin playing.
- 7. To "Stop" or "Pause", click the appropriate icons accordingly.

Tips: If you click "**Stop**" or "**Exit**" during playback, and even play other files or DVDs immediately afterwards, the next time you click "**Play**" for that specific DVD title, users may resume from the last scene depending on their DVD Auto-Resume setting found in the general configuration. This Auto-Resume feature remembers exactly where you left off and allows users great leeway when playing multiple discs at a time or if prematurely exiting PowerDVD.

- 39 -

Navigating During Playback

If you would like to skip over certain chapters or return to more exciting scenes, PowerDVD provides quick methods of navigation.

Shuttling Forward and Reverse

Instead of navigating by jumping from title to title or chapter to chapter, you may navigate the old fashion way by shuttling forward and rewinding. Thanks to DVD technology, these navigational speeds are unparalleled in speeds as compared to VHS.

- 1. Click along the outside perimeter for shuttling at various speeds during playback. The green mark will indicate the speed.
- Designated points on the left side disclose reverse speeds of 1/2X, 1X, 2X, 3X, 4X, 8X, 16X, and 32X. The center point is pause, while the right side discloses forward speeds of 1/2X, 1X (play), 2X, 3X, 4X, 8X, 16X, 32X.

Displaying Subtitles

Subtitles are supplied for practically all DVD titles. The language of the subtitles depends on the DVD region of your title. The subtitles function is only available during playback.

1. During playback, click the subtitle icon to switch among available subtitles.

Express Menu

Express Menu has been a feature PowerDVD users found both convenient and expedient for a rich repertoire of control actions. To access the Express Menu, all you have to do is simply click on the right button of the mouse while it's cursor is anywhere on the video window, And immediately, you will see the Express Menu.

Via this Express Menu, you can easily perform a rich set of control actions such as play, stop, pause, jump to previous or next chapter, or go to any chapter, plus other fantastic control features such as fast-forward playing, video window zooming and sizing. Thus while enjoying your DVD; you no longer have to click on the video window to invoke the standard PowerDVD user interface for those control operations.

You will find most of the information you need to use PowerDVD within its help menu. Select help topics from the Help menu to get started. Additional information can be found at: http://www.cyberlink-usa.com

- 40 -

Disc Wizard



The Disc Wizard guides you effortlessly in producing your movies on discs. With the Disc Wizard you will be able to take your movie masterpieces, give them menus and chapters (like a DVD title), and then burn them onto CD or DVD. The Disc Wizard is an easy to use solution for making CD or DVD movie titles that you can easily share with your friends and family. You can even embed a software DVD player into your movies.

Disc Wizard Installation

Follow the installation instructions carefully step by step. If you encounter a problem, refer to the troubleshooting section on this manual.



 Insert your Disc Wizard Installation disc into your CD-ROM drive, and double click on "Setup.exe" to begin the installation. Select "Next" to begin the installation process

- 41 -

License Agreement". Click "Yes" when you have read the agreement to continue with the installation.

Disc Wizard Setup	
Customer Information Please enter jourinformation.	
Type your name below. You near also type the name of your campa- CD-key. The product CD-key is provided with your shipment.	ry and the product
Use Name	
Customer	
Company Name:	
Соврану	
D łay:	
and the second	
(Sad)	Lancel
lisc Wizard Setup	
Choose Destination Location	
Select folder where Setup will install files	6
Setup we noted Doc Workd in the following kides	
To install to bio folder, click New, To install to a different folder, click smoller folder.	Bravece and select
Destination Folder	
Destination Folder CriProgram Fliet/DyberLink/Disc: Waved	DITAL
Destination Folder CriPtogues Filer/Djoet.nit/Dirce Witcend	Brokse

 Enter your "Name, Company, and CD Key" information into the appropriate boxes and click "Next" to continue.

Note: Your CD key should be located on the CD Sleeve of the Disc Wizard installation package.

 Select the "Destination Folder" where you would like to install Disc Wizard, and click "Next" to continue.



- 43 -

Burning Your Movie to DVD

After you have completed your movie and have produced it into a file, you are ready to author and burn it on a disc for mass distribution. Cyberlink's Disc Wizard makes authoring and burning an effortless and fun process, which can also be saved for later use.

*Note: If you require more information about each feature, the Disc Wizard provides an "information" icon located at the bottom of the screen.







 Start Cyberlink Disc Wizard from the Start Menu, or by clicking on the "Disc Wizard". Click the "Next" button to continue.

- Select "Create a new movie" or if you already have a movie image from a previous project, select the "Load existing movie" button. Press "Next" to continue.
- Select the movie format you wish to burn. For this example, please select "DVD" and press "Next" to continue.

- 44 -



- Browse to your media source files on the left side of the screen and add to the right menu by using the arrow buttons. You can add or delete files accordingly. Click "Next" when you are done selecting files.
- The Disc Wizard will ask if you wish to add photos as a slideshow. For this example, we will be creating a DVD movie only, so select "No, I do not want.." and click "Next" to continue.
- You can adjust the main view order of scenes or movies in this window if you have more then 1 media source. After you have set your menu order, click "Next" to continue.
- If you wish to add chapters to your DVD movie, do so by click "Yes, I wish to add chapters".

- 45 -



- Move the slide bar to the point you wish to insert a chapter index, and click the "Add Chapter" button on the far left. Continue adding chapters until you are finished and click "Next" to continue.
- You will be asked if you wish to create menus for your DVD.
 Select the "with menus" option if you wish to add menus and click "Next" to continue.
- From here, you can select a background you wish to use for your menu screen. Choose a theme from the pull down menu and select a background. Click "Next" to continue.
- 11. You can modify your menu options from the different options on the side toolbar. You can also change the appearance of your titles and chapters. After you have set your desired options, click "**Next**" to continue.

- 46 -



- 12. Before you begin burning your DVD movie, you can preview all the options you have set in the previous screens. This will give you an indication of how your movie will look. When you are done previewing, click "**Next**" to continue.
- 13. From here, you have the option of burning the DVD as a pure DVD movie, or with PowerDVD fully integrated with the disc.

Note: Select "**include PowerDVD**" if you intend to play this disc on a computer system that does not have DVD player software installed.

- 14. Now we are ready to burn. Double check your settings and make sure your DVD+RW/+R burner is selected. You can also erase your DVD+RW media prior to burning by clicking on the "erase media" button. Click "burn It" to begin burning.
- 15. A progress bar will appear to indicate elapsed time and gauge your burn process.

- 47 -



- 16. Congratulations! You have successfully burned a DVD movie. Click "Finish" to continue.
- 17. Click "**Yes**" if you wish to save your project.

Additional information can be found at: http://www.cyberlink-usa.com

Frequently Asked Questions

DVD+RW/+R

Q: How is DVD+RW/+R different from DVD-RAM and DVD-RW?

A: DVD+RW/+R, DVD-RAM and DVD-RW are all ReWritable DVD formats, however, only DVD+RW/+R is designed to be compatible with existing DVD-ROM drives and DVD-Video players. This means that a DVD+RW/+R disc recorded in a DVD+RW/+R video recorder can be played in virtually all DVD-Video players or DVD-ROM equipped PCs, and that any DVD+RW/+R disc recorded with data on a PC DVD+RW/+R drive can be read by most DVD-ROM drives.

The physical disc format of DVD-RW differs from DVD-Video in such a way that even in compatible mode it can be read by less existing players.

DVD-RAM uses a totally different kind of physical recording method, which is absolutely incompatible with DVD (hence, it can hardly be called 'DVD'). No existing player will be able to read DVD-RAM discs, even if you use the newer version without the cartridge housing.

Q: How are DVD+RW/+R related to CD-R/RW?

A: DVD+RW/+R will be used both in data storage (PC) and video (consumer electronics) applications. In the future, PC CD-R/RW drives will be replaced by PC DVD+RW/+R drives, since these can do anything a CD-R/RW drive can, only faster and with a much higher capacity. Moreover, most PC DVD+RW/+R drives will also be able to write to and read from CD-R and CD-RW media. However in relation to audio recorders, CD-Recordable Digital Audio will remain on the market for many years to come. Also there is currently no support for DVD+RW/+R audio-only applications to date.

Q: What is the DVD+RW Alliance?

A: The DVD+RW Alliance is a group of companies that co-developed and promotes the DVD+RW standard: Philips, Hewlett-Packard, Sony, Yamaha, Ricoh and Mitsubishi/Verbatim. It has been joined by Thomson/RCA in late

- 49 -

2000, and Dell in 2001. In addition to these, a couple of dozen other companies work together in the DVD+RW Alliance to share knowledge on the creation of DVD+RW/+R products. Their official website can be reached at <u>http://www.dvdrw.com</u>.

Q: How many times can a DVD+RW disc be overwritten?

A: A DVD+RW disc is very similar to a CD-RW disc in terms of the number of times that it can be re-written to. Tests have proven a re-recording capability of over 1,000 times.

Q: Business Card CD-R and 80 mm mini disc support?

A: Writing, rewriting, erasing and audio extraction are NOT supported by this DVD+RW/+R drive.

Q: How come I get sounds from my speakers, but not from the headphone jack on the front panel?

A: If you have the "**Digital Audio Enabled**" option turned on, you will not hear any sounds from the headphone jack. The headphone jack outputs in analogue. It will work fine if you disable this option under Windows. Currently, only Windows 2000 and XP support this feature.

Nero Express

The following is a list of error messages you may encounter, along with descriptions and suggestions for resolving them. See also the online help for a listing of additional error messages.

Q: Buffer underrun at sector....

A: CD writing is a real-time process, which must run constantly at the selected recording speed, without interruptions. The CD recorder's buffer is constantly filled with a reserve of data waiting to be written so that small slowdowns or interruptions in the flow of data from the computer do not interrupt writing.

This message indicates that for some reason, the flow of data from hard disc to CD recorder was interrupted long enough for the CD recorder's buffer to be emptied, and writing was halted. If this occurs during an actual write operation rather than a test, your CD may be damaged.

To avoid buffer underruns, make sure that no screen savers or other Terminate and Stay Resident (TSR) utilities are active (they can momentarily interrupt operations) and that your working hard disc cannot be accessed via a network.

Also, the CD recorder's position in the IDE bus or the cable length between the computer and CD recorder may cause data slow-downs. Try connecting the CD recorder as the master on the IDE bus and, if possible, use a shorter IDE cable between the CD recorder and the host adapter.

Q: The current CD already contains a closed audio session. If you continue you may have problems reading the last audio session on some CD audio players. Continue anyway?

A: Under the Red Book standard for Audio CDs, all audio tracks must be written in a single session. If you add audio tracks in more than one session, playback results will be unpredictable. Most CD-ROM drives will play back all audio tracks on a CD even if they are recorded in several sessions. Most home and car CD players can only play the tracks in the first session.

- 51 -

Q: The current CD already contains tracks and/or sessions that are incompatible with the requested operation.

A: This error appears if you are trying to add data in a different format to a CD that contains data, such as trying to add a CD-ROM XA session to a CD that contains a CD-ROM session. A CD containing both formats is unreadable, so you are not allowed to record the different session type.

Q: The current CD contains a session that is not closed. Close the session before writing further data to the disc.

A: CD-ROM drives can only read back one data track per session, so avoid recording another data track in an open session.

Q: The currently selected source CD-ROM drive or CD recorder cannot read audio in digital format.

A: Reading audio tracks in digital format is not the same as playing the music. Few CD-ROM drives can read audio tracks in digital format.

Q: The destination CD is smaller than the source.

A: There is not enough room on the recordable CD to copy the source CD. Try recording to a blank CD. Use 74-minute media instead of 60-minute media. Some CDs cannot be copied due to the TOC overhead in CD recorders and also due to the calibration zone overhead. See PCA in Glossary.

Q: Error reading the Table of Contents (TOC) or Program Memory Area (PMA) from the CD.

A: Do not try and write to this CD. It has serious problems, and may have been damaged during a previous write. If this is a CD-RW media, erase it and try again.

- 52 -

Download from Www.Somanuals.com. All Manuals Search And Download.

PowerDVD

Q: What are the differences between hardware and software DVD solutions?

A: The main difference between hardware and software DVD decoders is CPU utilization. Software DVD will utilize a much larger portion of the CPU. A software decoder has the great advantage of not taking up a PCI slot in the PC and has equivalent performance to hardware.

Q: Can scratches affect a DVD disc?

A: Most scratches will cause minor channel data errors that are easily corrected. Major scratches may cause uncorrectable errors that will cause an I/O error on a computer or show up as a momentary glitch in DVD-Video picture. DVD data density is physically four times that of CD-ROM, so it's true that a scratch will affect more data. But DVD error correction is superior to CD-ROM error correction. It's also important to realize that MPEG-2 and Dolby Digital compression are partly based on removal or reduction of imperceptible information, so decompression doesn't expand the data as much as might be assumed.

Q: I've inserted a DVD disc in the DVD-ROM drive with DVD player running and it did not start playing. Why?

A: In the drivers for most DVD-ROM drives, there is an option that is commonly turned on by default called "**Auto-Insert Notification**", which lets the operating system know when a DVD or CD disc is inserted into the DVD-ROM drive. The purpose of the feature is to begin running software or to begin playback of a disc when it is first inserted into the drive, without the need for running an application. If this option is turned off, our DVD player application is not notified that you inserted a DVD disc. To turn this option on, use the following procedure:

- Select "Control Panel" from the "Settings" list in the "Start" menu.
- Double-click on the "System" icon, and then select the "Device Manager" tab.
- Locate the "CD-Rom" listing and single-click on the entry for your DVD-ROM drive.
- Click on the "Properties" button, and then the "Settings" tab.

- 54 -

- Locate the checkbox labeled "Auto Insert Notification" and click on the checkbox to select it.
- Click "**Ok**" to save the change. At this point, you may need to restart Windows 95/98 for the change to become active.

Q: How to install the pure-software version or the hardwareaccelerated version of PowerDVD?

A: PowerDVD will automatically detect the type of video graphic card, and will install either its pure-software version or hardware-accelerated version according to what it has detected. If your video graphic card doesn't support an acceleration function, PowerDVD will perform in pure software mode. If your video graphic card does have a chip with an acceleration function, there will be a "Use Hardware Accelerator" option for your choice on the "DVD Playback Setup" dialog box (invoked by pressing the "Config button\DVD playback setup").

Note that this "Use Hardware Accelerator" option, if available, can only be enabled only when PowerDVD is currently in Stop mode.

Q: My computer system has already been equipped with an MPEG-2 hardware decompression card. Can I still use PowerDVD?

A: PowerDVD is a high-quality, pure-software DVD (Digital Versatile Disc) player program. If an MPEG-2 decompression card is already on your system, it will negatively influence PowerDVD performance with results such as unable to playback or even causing system crash. Our recommended solution is to remove your MPEG-2 hardware decompression card, or to turn it off through **Control Panel\System\Device Manager**. Please refer to the user manual of your MPEG-2 hardware decompression card or contact your hardware manufacturer for further information.

Q: What is the cause of choppy Video/Audio?

A: The cause of this can be the video card, the processor and or windows applications. A 16MB or higher video card, a faster processor and closing all open programs can enhance the performance. Also make sure you enable the DMA box for the drive from the Device Manager

- 55 -

Disc Wizard

Q: What is a movie file (disc image)?

A: A movie file is a single large file that is a representation of the whole set of data and programs as it will appear on a CD/DVD and refers to both content and logical formats. Disc Wizard allows you to burn this movie disc file for later use by saving it as an image file and thus allowing for multiple copies.

Q: Can I mix a slideshow and video files on the same movie disc?

A: You certainly can. Each slideshow will be akin to one video file and play in a similar fashion. Just remember to set the correct time duration for your images in your slideshow.

Q: What are the writing devices Disc Wizard supports?

A: Disc Wizard supports CD-R, CD-RW, DVD-R, DVD-RW, and DVD+RW/+R, which are all different CD and DVD video recording formats.

Q: How can I play my disc created with Disc Wizard?

A: With a DVD playback software application such as the world-renown PowerDVD or consumer DVD players if it supports your recording format. If you checked **Include PowerDVD runtime on disc**, any computer can play your disc even if it does not have a DVD playback software application (this will hold true for most consumer DVD players produced before 2000 which will be unable to play CD-R and DVD-R discs).

Q: What is the difference between saving as a disc image file and DVD folder?

A: When saving as a disc image, it will be in a proprietary format only the Disc Wizard may read and write to disc (i.e. burn) in the future. When saving as a DVD folder, all files will be in a standard format that any disc writer software application may read and write to disc (i.e. burn) in the future.

- 56 -

Limited Warranty

Hardware Limited Warranty

This product is warranted to be free from failures due to defects in material and workmanship for one year from the date of original purchase as evidenced by a copy of the purchase receipt. During the warranty period, **I/OMagic** at its sole discretion will repair or replace at no charge, the product that, in its opinion, is defective. The original purchaser is responsible for packing the product for shipment and for the charges to ship the failed product.

If the failed product has been modified in any way without the consent of **I/OMagic** or if the failure is the result of misuse, abuse, or misapplication, **I/OMagic** has no obligation to repair or replace the failed product.

Except as expressly provided above, the hardware and accompanying written materials (including the User's Guide) are provided as is without warranty of any kind including the implied warranties of merchantability and fitness for a particular purpose. This specifically does not warrant the operation of the hardware and will not be liable for any direct, indirect, consequential or incidental damages arising out of the use or inability to use such product even if has been advised of the possibility of such damages. Some states do not allow the exclusion or incidental damage, so the above limitation may not apply.

R-DVDRWEU-02

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com