RTD315W



It is important to read this instruction book prior to using your new product for the first time.

Important Safety Instructions


- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on
- product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet
- · Do not place lighted candles, cigarettes, cigars, etc. on the product
- Connect power cord only to AC power source as marked on the product.
- · Care should be taken so that objects do not
- fall into the product. Do not attempt to disassemble the cabinet This product does not contain customer
- serviceable components

Additional safety information If your product operates on batteries, adhere to the following precautions: A.Any battery may leak electrolyte if mixed

- with a different battery type, if inserted incorrectly, or if all batteries are not replaced the apparatus. Always leave sufficient space around the at the same time.

 B. Any battery may leak electrolyte or explode
 - if disposed of in fire or an attempt is made to charge a battery not intended to be recharged.
 C. Discard leaky batteries immediately. Leaking
 - batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to your state/provincial and local regulations.
 - D. Battery shall not be exposed to excessive heat such as sunshine, fire or the like

Connections and Setup

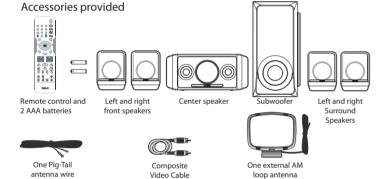

Things to consider before you

connect · Ensure that the mains supply in your house

- complies with that indicated on the identification sticker located on the back of your unit
- Install your unit horizontally, away from any source of hear (fireplace) or appliances creating strong magnetic or electric fields.
- The components of this unit are sensitive to
- heat. The maximum ambient temperature should not exceed 35°C/95°F. Leave enough space around the unit to allow adequate ventilation: 10 cm/4 inches on either
- side and above the top, and 5 cm/2 inches at

Connections and Setup

Better surround placement Location


side of the listening area, not behind it.

If space permits, install surround speakers 2-3

feet above viewers. This helps to minimize localization effects.

Aim surround speakers straight across the

room, not down at viewers, to help create a

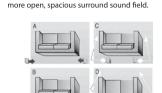

Alternative Surround Placement

Rear wall

the speakers at each other (A), towards the front (B) or towards the sidewalls (C, D). Experiment with placement until sounds seem to surround you, rather than come from

No adjacent walls If possible, place surround speakers to either

tray is empty.

Surround speakers can go on stands facing each other to approximate sidewall mounting (A), or to the sides or rear of the viewing area, aimed upwards; they can go right on the floor, or preferably, a few feet off the floor

The humidity of the room should not exceed 75%. If you have to use the unit outdoors, do not expose it to rain or

splashing water. The apparatus should not

be exposed to dripping or splashing and no objects filled with liquids, such as vases,

condensation disappear on its own before

turning the unit on again.
Before moving the unit, make sure the disc

should be placed on the apparatus.

Moving the unit from a cold place to a warm one can cause condensation on some components inside the unit. Let the




Test tone/Channel balance

Channel balance Your receiver is equipped with a test signal generator for balancing the channels. As the signal "travels" from channel to channel, adjust the level controls until each channel plays at the same loudness level. Level adjustment and surround channel

level expectation

Even though you adjust the surround channel to be as loud as the others on the test signal on actual program material the surround channel is adjust the surround level; program producers use surround for subtle atm and ambience, and only rarely for special

Overview of Controls: Front panel controls

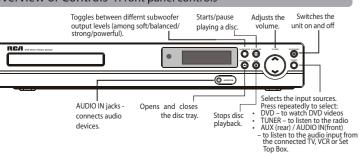

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiates radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does causeharmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interferebce by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



This Home Theater has earned the ENERGY STAR.

DVD player is Region 1.

Ventilation

ventilation. See diagram.

10 cm

of manufacture.

For your safety

polarized (one blade is

The AC power plug is

wider than the other)

and only fits into AC

power outlets one way.

If the plug won't go into

the outlet completely

turn the plug over and

try to insert it the other

safety feature.

easily accessible

Note:

If it still won't fit, contact a qualified

completely remove power from your

electrician to change the outlet, or use a

different one. Do not attempt to bypass this

Removing the power plug is the only way to

product. Make sure the power plug remains

This DVD player is designed and manufactured

to respond to the Region Management Information. If the Region number of a DVD

disc does not correspond to the Region number of this DVD player, this player cannot

play the disc. The Region number for this

ou must adequately ventilate the product.

Make sure there is adequate space around

the unit to provide proper air flow for

This product complies with DHHS Rules 21


CFR Subchapter J. Applicable at the date

Where the mains plug or an appliance coupler is used as a disconnect device, the disconnect device shall remain readily operable.

Connections and Setup

· Other important use and cleaning information at the end of the booklet.

Connecting the antennas

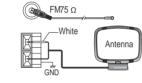


The AM and FM antennas connect to the AM and FM terminals on the system's back panel. They must be hooked up in order to receive clear reception.

AM Loop Antenna

- 1. Uncoil the AM Antenna wire 2. Press down on the Antennas tab to open the terminal.
- 3. Make sure the white wire on the AM loop antenna is inserted into the AM loop terminal and the other wire is inserted

nto the ground loop terminal

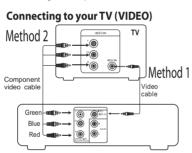

Method 1


- Composite video jack (yellow)

 The basic video jack is color-coded yellow
- Video cable (vellow) is supplied for the connection for good picture quality.
- Connect the video OUT jack on the receiver to the IN jack on your TV so the video content goes from the receiver to the

- Component video jacks (Pr, Pb, Y) The component video jacks are color-coded
- green, blue and red. Additional component video cables (not supplied) are required to provide best picture ality. They are usually color-coded green, blue and red.
- · Connect the component video OUT jacks on the receiver to the component video IN jacks on your TV so the video content goes from the receiver to the screen.
- If your television is a high **S** definition television, use the unit's progressive scan output to get the highest possible video resolution Set the Progressive Scan option in the Video menu to On. If one of the devices is not working, check that all the cables have been inserted properly into the jacks.
- If your component has only one input for audio (mono), connect it to the left (white L/Mono) audio jack on the TV and don't

Connecting to your TV (via HDMI input)

HDMI stands for High Definition Multimedia Interface. HDMI transfers digital audio and uncompressed digital video on a single cable.
Press the HDMI button on the remote control to change output signals as follows: 480p, 720p, 1080i and 1080p

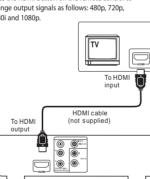

Overview of Controls

2 3 4 5 6 AUDIO IN 7 8 9 0 TITLE (OK) SLOW

ANGLE ZOOM

RСЛ

(19) SUBTITLE

Remote functions in DVD/CD mode

ON•OFF – Switches the unit on and off

DVD - Selects the DVD mode

Selects the TUNER and selects between FM/AM AUDIO IN - Selects the FRONT AUDIO IN mode

AUX - Selects the Auxiliary input (for listening to audio input from

CLEAR - Quits the current setting manually from the TV screen without saving change

INFO - Accesses the Info menu

TITLE - Accesses the title menu of DVD discs

DISC MENU - Accesses the disc menu during playback

OK - Confirms your selection $\Lambda~V$ < > – To navigate through the menus. The left and right arrows

also tune the radio frequency in the tuner mode MUTE - Mutes and restores the sound.

SETUP - Enters Setup menu RETURN - In DVD mode, returns to the

VOL +/- - Adjusts the sound volume

CH +/ » CH -/ » Directly accesses the next or previous chapter (DVD) or track (CD). Selects programmed stations in TUNER mode

REV - Starts reverse accelerated play

PLAY - Starts playing a disc

FWD - Starts forward accelerated play SLOW - Select SLOW motion function

STOP - Stops playback. PAUSE – Freezes frame, accesses frame advance

AUDIO - Accesses the audio function

ANGLE - Accesses the camera angle function for DVD disc ZOOM - Accesses the Zoom function

SUBTITLE - Selects the subtitle languages or tunrs subtitle off (if available) HDMI - Changes video output signals (480p, 720p, 1080i or 1080p)

SUBWOOFER – Selects among subwoofer output levels (soft/balance/strong/powerful) Download from Www.Somanuals.com. All Manuals Search And Download.

FCC Information



SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.

THE LIGHTNING FLASH AND ARROWHEAD

WITHIN THE TRIANGLE IS A WARNING

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USERSERVICEABLE PARTS INSIDE. RÉFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

DVD copy protection

or even impossible. This product

Reverse engineering or disassembly

Using AUDIO IN jacks

mp3 players.

In accordance with the DVD standard, your

DVD player is equipped with a Copy

Protection system, which can be switched on

and off by the DVD disc itself, in order to

make any recording of the relevant DVD disc

onto a videotape of very poor picture quality,

incorporates copyright protection technology

that is protected by method claims of certain

U.S. patents and other intellectual property

rights owned by Macrovision Corporation

and other rights owners. Use of this copyright

by Macrovision Corporation, and is intended

for home use only unless otherwise authorized by Macrovision Corporation

otection technology must be author

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS

RADIATION EXPOSURE. **CAUTION**: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

WARNING: MAINS PLUG IS USED AS DISCONNECT DEVICE AND IT SHOULD REMAIN READILY OPERABLE DURING INTENDED USE. IN ORDER TO DISCONNECT THE MAINS PLUG FROM MAINS COMPLETELY. THE MAINS PLUG SHOULD BE DISCONNECTED FROM THE MAINS SOCKET OUTLET COMPLETELY

Service information

This product should be serviced only by those specially trained in appropriate servicing techniques.

Main plug is used as the disconnect device, it shall remain operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.

Caution

Invisible laser radiation when open. Avoid exposure to beam. Class 1 laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.


is prohibited.

· Refer to the owner's manual of the connected TV as well · When using HDMI cable, do not connect to other analog video outputs.

Connections and Setup


Connecting AUDIO from external sources such as TV (Aux-In) Using AUX jack

Connect the AUX jacks from the unit to the AUDIO OUT jacks on VCR, TV, Set Top Box or

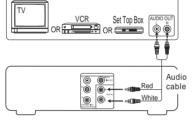

Connecting the speakers

Speaker wires are color-coded to match the terminals. Connect the speaker wire from the back of each speaker to the corresponding color terminal at the back of the unit. Press down the tab to open the terminal and insert the wire. Release the tab to lock wire in the terminal

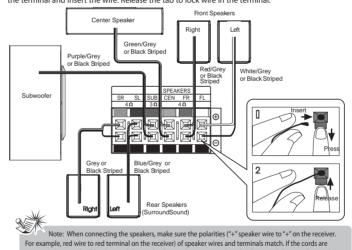

Overview of Controls

wma/jpeg discs. REPEAT – Accesses the repeat function.

 ${\sf EQ\,.\,LEVEL-Toggles\,channels\,for\,different\,channel}$

level settings. Adjusts the value using VOL +/-

SURROUND - Changes the Surround sound setting. In DVD mode, press the button to select between Dolby Digital and Stereo modes (Dolby ProLogic is available if the input is Dolby 2ch). In the AUX IN / AUDIO IN mode (analog input), press the button to select between Dolby ProLogic and STEREO modes. (Refer to details on Dolby Digital and Dolby ProLogic.)

MUTE - Mutes and Restores the sound.

frequencies

CH+/- - Selects programmed stations

Using remote control to navigate

through the on-screen displays (the DVD player's menu Use \wedge V <> on the remote to move through on-screen

right, press >). The arrow buttons are used to highlight an option. Once highlighted, press OK to select the option that is highlighted.


Insert 2 "AAA"("UM-4"/"R03")

AUDIO IN mode. To listen to the audio input from the connected component, press SOURCE on the main unit or AUDIO IN on the remote control to select the

Connect the Ø3.5mm AUDIO IN jacks on the front

panel of the unit to the headphone output of

Suggest using Ø3.5mm AUDIO IN jack for mp3 player and AUX IN jacks for auxillary equippment such as DVD, VCR or PC.

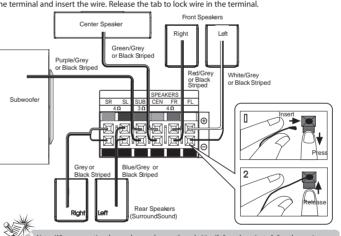

reversed, the sound will be distorted. Do not let the speaker wires touch each other, it will damage the speaker.

RANDOM – Turns on/off random playback on CDDA/

DVD, JPEG

Remote control functions in tuner mode

TUNER - Selects the TUNER and switch between

VOL+/- - Adjusts the sound volume

TUNER +/- - Tunes down and up the radio

MEMORY - Stores a station

AUDIO - Selects between Stereo and Mono mode

through the on-screen menus Use $\wedge V \leq 1$ and OK on the remote control to navigate

the Info Display that appears during playback, or a disc's

menus in the direction of the arrow button (e.g., to move

Playing Discs - Basic Functions

Compatible discs

 DVD, DVD-R,DVD-RW, DVD+R, DVD+RW CD, CD-R, CD-RW

Compatible formats

CD, WMA

Regional coding

Your unit has been designed to process regional management information stored on DVD discs. The regional code for your unit is 1. Discs that have a different regional code

Operating the DVD receiver 1. Turn on your television set.

2. Press ON•OFF on the remote or ON/ STANDBY located on the unit's front panel. Press DVD on the remote control.

Loading disc 1. Press ≜ on the front panel to open the disc

2. Place a disc onto the disc tray with the label side up.

3. Press ≜ again to close the disc tray. Playback witch the unit and the TV set on.

 After loading a disc, playback starts automatically, or the disc menu appears If the disc menu appears, select the Play option to begin playback. 2. Press STOP to stop playback.

While the disc is playing, press REVERSE or FORWARD one or more times to vary the speed and direction of the accelerated play. Press PLAY to resume normal playback.

normal playback. Frame advance 1. Press PAUSE twice. "Step" is displayed.

Accelerated play

2. Each time you press PAUSE button, the picture advances one frame.

While the disc is playing, press PAUSE once

for freeze frame. Press PLAY to resume

3. Press PLAY to resume normal playback

Ø3.5mm to Ø3.5mm audio cables (not included) Press either SOURCE on the main unit or

AUDIO IN on the remote control to select

In surround mode, the center speaker carries most of the dialog as well as music and

It should be set between the left and right 3. Surround (Rear Speakers) The surround speakers' overall sound balance should be as close as possible to the front

speakers. Proper placement is vital to

Courtesy Dolby Laboratories

Front speakers carry primarily music and

establish an evenly distributed sound field

1. Left, Right (Front Speakers)

sound effects.

A subwoofer is designed to reproduce powerful low bass effects (explosions, the rumble of spaceships, etc.). Note: Front, Center speakers ded with this unit are magnetically shielded to protect your TV set. It is not recommended to place the surround speakers and subwoofer near the TV set.

CAUTION This product utilizes a laser. Use of controls or adjustments or perform of procedures other than those

specified herein may result in hazardous radiation exposure. Do not open covers and do not repair yourself. Refer servicing to qualified personnel. To reduce the risk of fire or electric

shock, do not expose this product to rain or moisture. No objects filled with liquids, such as vases, should be placed on the apparatus.

th Canadian ICES-003. Cet appareil numérique de la class B est conforme à la norme du NMB-003

WARNING

reduce the risk of fire or electric shock, do not expose this product to rain or moisture. N objects filled with liquids, such a vases, should be ed on the apparatus

Do not defeat the safety purpose of the polarized or

The wide blade or the third prong is provided for

grounding-type plug. A polarized plug has two blades

with one wider than the other. A grounding type plug has two blades and a third grounding prong.

Important Safety Instructions

CLASS 1 LASER PRODUCT APPAREIL À LASER DE CLASSE

PRODUCTO LASER DE CLASE 1

Please read and save for future reference

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

Important Information

Important battery information

· Do not mix different types of batteries or

observe the polarities indicated inside the

battery compartment. Replace only with

the type of batteries specified. Do not dispose of them in a fire or recharge the

If you are not using the remote control for

a long period of time, remove

Please respect the environment

and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer

whether they are subject to

special recycling and if they will accept them for disposal.

new and old batteries. Do not use rechargeable batteries.
In order to avoid any risk of explosion

- Read these instructions
- Keep these instructionsHeed all warnings. Follow all instructions.
- · Do not use this apparatus near water Do not block any ventilation openings Install in accordance with the
- manufacturer's instructions.

 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that
- · Only use attachments/accesso

Positioning speakers



your safety. If the provided plug does not fit into your outlet, consult an electrician for electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point

where they exit from the apparatus

· Use only with the cart, stand, tripod, bracket,

- or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the

apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped

Connections and Setup

Front speaker placement For best results, follow the speaker placement



Place the left and right speakers to form a 45-degree angle with your favorite viewing

speed of slow-motion playback changes in the following sequence:

3. Press PLAY to resume normal playback.

Changing chapter/track

previous track. 1. While a disc is playing, press ZOOM until

then returns to normal playback. 2. Move from one area to another (pan) using the arrow buttons.

3. To turn ZOOM off, press ZOOM unitil you get to the ZOOM OFF option.


· Disc menu — The appearance and

the type of disc you have inserted. It is separate from the Setup menu. • Info menu — The unit's Info menu appears at the top of the screen while the disc is playing. Press INFO on the remote to

contents of this menu varies according to

position to duplicate the soundtrack mixer's perspective.

The three front speakers should be as close as possible to the same height. This often requires placing the center speaker directly

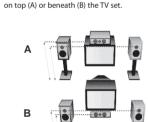

Basic playback operations

Variable slow motion Press SLOW button on the remote in play mode. 2. Each time the SLOW button is pressed, the

SF 1/2→SF 1/3→ SF 1/4→ SF 1/5 PLAY ← SF 1/7 ← SF 1/6


While the disc is playing, press the CH+/-button to go immediately to the next or previous chapter, or to the next or

you reach the zoom size you want. The ZOOM button toggles through 2x, 3x, 4x and then zooms out to 1/2x, 1/3x and 1/4x,

Types of menus

switch the Info menu on or off. TT 1/10 CH 1/16 ② 00:13:07

Setup menu — Press SETUP to access this menu.

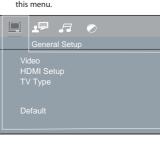

When you press STOP, the unit stores the point where playback was interrupted. If you press PLAY again, playback resumes from this point To stop playback completely or to start again from the beginning, press STOP twice. If the unit is left in STOP mode for more than 5 minutes

user interaction, the unit switches off automatically.

select an icon

The Info Menu Press INFO on the remote while a disc is playing to display the info menu. The first banner shows title, chapter, and time display information.

2. Press INFO again for audio language, subtitles, and camera angle. 3. Press INFO a third time for play mode, bookmark and 4. Use the right/left arrow buttons on the remote to



5. Use the up/down buttons to scroll through the options


))1/3ENG □□5.1CH □1/2 ENG □10FF PLAYMODE BOOKMARK SLEEP

CD Info Display

PLAYMODE BOOKMARK

TT 1/10 CH 1/16 ② 00:13:07

Time display Play mode Sleep time

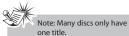


Time display

To access the Time Display, press INFO on the remote. Press the up/down buttons repeatedly to display: DVD: Chapter elapsed time, Chapte remaining time, Title elapsed time and Title

Audio CD: Track elapsed time, track remaining time, disc elapsed time, disc

To directly access a location on the disc which does not correspond to the start of a title or chapter, press INFO once and press OK, highlight the Time Display icon using the arrow buttons, then enter a time with the number buttons (hh:mm:ss) and

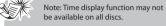

Audio (DVD)

Some discs have several audio tracks used for different languages or different audio formats.

To change the language or audio format during playback:

. Press the INFO button twice. 2. Use the left/right arrow buttons to select the

Audio icon, or press the AUDIO button on the remote control.

This option is only available if the disc offers

dialog languages or audio formats. When

3. Choose a language or an audio format with the

you change the dialog language using the Info menu, it only changes the dialog language of the disc being played. When you eject the disc or switch off the unit, the language will revert to the one you selected in the Language Setup menu.

Subtitles (DVD)

- Subtitles are turned off by default. Turn on Subtitles as follows:
- 1. While the disc is playing, press INFO twice, then select the Subtitles icon using the left/right arrow buttons.
- 2. Select a language using the up/down
- arrow buttons.
 3. To turn subtitles off, select the Off option or press SUBTITLE on the remote

When you change the language of the subtitles using the Info menu, it only applies to the disc currently being played. When you eject the disc and switch off the unit, the subtitles will default to the subtitle language you selected in the Languages menu.

This function may not be available

Camera angle (DVD)

The Info Menu

Some discs offer different camera angles for

specific scenes. . To change the camera angle, press the ANGLE button on the remote or press the

INFO button twice and select the Camera angle icon with the left/right buttons. 2. Choose the angle with the up/down

Play mode (all discs except

- 1. While the disc is playing, press the INFO
- 2. Select the Play Mode icon using the left/
- right arrow buttons. 3. Use the up/down arrow buttons to select
- repeat, title repeat, chapter repeat. Program play mode is only available if a program list has been created (see below). Repeat mode is only available with discs that display elapsed time and remaining time. To repeat a sequence between
- Audio CD play modes: standard, introscan, random, program, repeat A-B, repeat disc, repeat track.
- buttons to choose the Standard option

Creating a Program List for Program Play Mode (Audio CDs and DVD discs)

To use program play mode, you must first

- create a program list. . To create a program list, press the INFO button twice for CD and three times for DVD
- Highlight the Play Mode option and press the up arrow to select the Program option.
- 2. Press OK. The Program screen is displayed. 3. The first spot in the list is highlighted. Use the number buttons on the remote to
- enter a track number. As for DVD discs: T stands for Title while C stands for Chapter.
- As for Audio CDs: T stands for Track.
- 4. Use the arrow buttons to move to the next spot in the list. Enter the next
- 5. Continue entering tracks until you have completed your list.
- 6. Highlight the Play option at the bottom of the screen and press OK or press PLAY to start playback. The program list will play in the order you programmed it.

Creating a program List for program play mode (WMA CDs)

To use program play mode with a WMA disc, you must first create a program list. You can

- orogram up to 16 songs.

 To create a program list, press the INFO button twice. Highlight the Play Mode option and press the down arrow to select the Program option.

 2. Press OK. The Program screen is displayed.
- 3. The F stands for Folder, and the T stands for Track. Highlight the space below the Folder indicator (F) and use the number
- buttons to enter the desired folder number.

 4. Use the arrow buttons to move to the space beneath the Track indicator (T). Use the number buttons to enter the track number
- 5. Repeat steps 3 and 4 until you have completed your list.
- 6. Highlight the Play option at the bottom of the screen and press OK or press PLAY to start playback. The program list will play in the order you programmed it.

There are four options in the main setup menu: General Setup, Language Setup, Audio Setup and Video Setup.

The Setup Menu

up arrow button to rotate the image vertically, the down arrow button to Press SETUP to bring up the main menu. rotate the image horizontally. Use the ZOOM button to magnify the picture. Use Select one of the menu icons across the top of the screen using the left/right arrow buttons. The menu's options are displayed on the left side of the screen. Press the right arrow button to move to the option's choices on the right. Press SETUP if you want to exit setup.

General Setup



Progressive Function provides high quality pictures with less flickering. Progressive Scan if you used the Component Video jacks of the unit to connect a TV or monitor compatible with a progressive scan signal.

Select P-Scan YPbPr and press OK to activate Progressive Scan.

HDMI Setup

This lets you select the resolution of the player's output according to the connected Supported HD JPEG mode: 480p, 720p, 1080i and 1080p.

TV Type Depending on the format of the DVD disc, you can choose the picture format (aspect ratio) best suited to the format of your

4:3 PS: reproduces a 4:3 picture without distortion

- 4:3 LB: gives best reproduction of pictures recorded in this format (i.e. with horizontal bands at the top and bottom of the screen)
- or in 16:9. • 16:9 (widescreen): reproduces 16:9 format films in full on a 16x9 screen

The Setup Menu

Default

This option allows you to return the unit's settings to the original factory settings. Any changes you have made to the unit's settings will be reverted back to the original settings

IMPORTANT!

Once Progressive Scan has been activated, an mage will only be visible on a progressive scan TV or monitor. If you choose this option and you don't have a progressive scan TV or monitor, you may get a picture with incorrect color or no color

Language Setup

With this menu, you can set the language for unit menus, dialog, subtitles and the disc

If you chose "English" during initial set-up, any menus generated by the disc are in English, and so is the language of the dialogs (if this language is available on the disc).



- Select the Language Setup icon in the main menu using the left/right
- 2. Select one of the options using the up/
- 3. Press the right arrow button to move to the
- 4. Use the up/down arrow buttons to highlight the language of your choice and press OK

Select the language of player menus and press

Select the dialog language using up/down arrow buttons and press OK.

To change the Audio language during playback, press INFO twice for DVD and use the left/right arrow buttons to highlight the Audio icon

Press the up/down arrow buttons or AUDIO on the remote control to select audio language


Subtitles

Select the subtitle language using up/down arrow buttons and press OK.

To change the language of the subtitles during playback, press INFO twice for DVD and use the left/right arrow buttons to highlight the Subtitle icon. Press the up/down arrow buttons or the SUBTITLE button on the remote to select a subtitle language.

Disc Menu

select the language using the up/down arrow buttons and press OK. The language you select will only be displayed

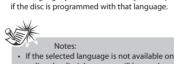

a disc, the disc's language will be used If the language chosen is available, it is automatically selected when you display the subtitles or press SUBTITLE on the remote control. Otherwise, the subtitle language indicated on the disc

Audio Setup

and access specific functions with the Audio

1. Select the Audio Setup icon in the main menu using the left/right arrow buttons.

the option's choices.



Slide Time
The Slide Time option lets you select the amount of time a picture is displayed in a slide show. The choices are 5 seconds, 10 seconds, or

Night Mode You can use this function to control the

different sound levels via dynamic compression.

It improves the quality of the sound track at a

low volume, and quiets the loudest sounds. You can

Basic settings have been preset for the

you may need to delay the signal coming from

some of the speakers. Channel delay

compensates for center or surround speakers

that are closer to the listening position than

1. Highlight a distance option using the up/

This function is used to test the speaker setting. A

short noise comes successively from each speaker

1. Select the Video icon in the main menu

2. Select a menu option using the up/down

using the left/right arrow buttons.

arrow buttons and press OK.

choose between Ouiet, Moderate or Off.

The Info Menu

INFO display.

Sleep

To stop program play, press STOP or select

Standard from the Play Mode option in the

If you want to cancel the list, repeat steps 1

times for DVD. Select Sleep icon with the

the OK button: Off, 30, 60, 90 or 120 minutes.

in AUX/AUDIO IN/TUNER mode.

This option plays the first ten seconds of

each track on a CD.

1. Press the INFO button twice, then select

the Playmode icon with the left/right

2. Press the up/down arrow buttons to select

the INTRO option and press OK to start

Bookmark (DVD and audio CD)

times for DVD. Select the Bookmark icor

A menu is displayed with five bookmarks.

The first bookmark space is highlighted.

Press OK to set the bookmark. The book

3. To start playback from a bookmark, press

available with discs whose elapsed time or remaining time appears in

4. To delete a bookmark, highlight it and

mark is saved and is indicated by the

number 1. You can set up to five

the PLAY button on the remote

Note: This function is only available with the

bookmarks on a disc.

press CLEAR

The Setup Menu

Distance

the front speakers.

the distance

Video Setup

Test Tone

with the left/right buttons, and press OK.

3. Press STOP to stop Introscan, and press

PLAY to resume normal playback

1. Press INFO twice for CD and three

and 2 to select CLEAR and press OK

1. Press INFO twice for CD and three

left/right arrow buttons

Introscan (CD)

IntroScan.

Press the ON•OFF button on the remote

control or the ON/STANDBY button on the front of the unit

- when it is in STOP mode for more than 30 minutes without any user intervention Switch it on again.
 It might be impossible to read the disc.
- Insert the disc with the printed side facing up.
- Check that the disc can actually be played by this device.
- Check that the disc's regional code matches the unit's regional code. This unit's regional code is 1.
- There is no picture.

- on the TV.
- times to toggle among different HD OUTPUT

· Check the connections

poor quality.

Make sure the speakers are connected.

No surround sound.

Setup menu (See Positioning speaker or Audio Setup).

- The unit does not switch on.
- Make sure it is plugged in.

- Clean the disc.
- Check you have switched on the TV set.Check the connections
- · Select the AV input assigned to the unit
- Replace the HDMI cable with a better one Bad HDMI cable can cause data lost.

The picture is of poor quality (with snow

There is no sound or the sound is of

Check the connections

Make sure the MUTE function is not on

that you isolate the unit from the by electrical or electromagnetic surges.

- supply. To completely isolate the equipment, remove the plug from the mains jack as some components remain
- If you notice any burning or smoke disconnect the unit immediately to avoid
- through the disk tray opening or any other opening. You may be electrocuted or exposed to laser radiation.

AUDIO IN/ AUX IN

TV, VCR or Set Top Box can be connected to AUX input jacks at the back of the unit or AUDIO IN at the front panel so that sound from the auxiliary component comes into the unit and out through the speakers.

Connecting auxiliary components

Refer to "Connecting to external audio sources "for details on connecting the

auxiliary components to the unit.

Selecting AUDIO IN/AUX IN mode

Sound output in Aux-In mode

- Stereo modes.

from speakers in either Dolby ProLogic or Stereo mode.

If the auxiliary audio signal is mono, there is no output

Playing WMA files or

Radio

Tips:

When the FM station broadcasts Stereo sound is found, ST is displayed.

When you manually tune into a weak FM station, press AUDIO on remote

control to switch from Stereo to Mono

If there is any interference, change the

electronic devices could be the cause

of interference, so try to position the

antenna's position until ideal sound reception is obtained. TV and other

mode. This will reduce the background noise.

antenna away from th

more efficient search.

A weak signal can affect the

"Automatic preset programming function's efficiency. Adjust the

antenna for better reception and a

WMA is an audio file format which compresses recorded music. The main advantage of the mp3/WMA format is that CD-quality music tracks can be stored on a personal computer in user friendly

Jpeg files are image files. Make sure that they have a resolution of less than

1. Open the disc tray.

compressed files.

2. Place the disc with the printed side facing up and close the disc tray. The folders on the disc will be listed in numerical order on the left side of the screen. When you highlight a folder, then press OK button. The list of songs or pictures in the folder are listed in numerical

order on the right side of the screen.

3. Select a folder using the up/down arrow buttons on the remote, then press the left arrow button to move to the music/picture icons at the bottom of the screen. Use the left/right arrow buttons to select either music or picture mode.

file list on the right side of the screen. Use the up/down arrow buttons to select a file. Press OK or PLAY to start playback

the selected file, then all the files and subfolders contained in the same folder The unit then plays the contents of the folders at the same level as the folder containing the file selected at the start

· ipeg file: the unit starts the slide show with the jpeg file you have selected, ther displays all the jpeg files in the same folder, then all the ipeq files in the subfolders located in the same folder. You can set the amount of time a picture

Additional Information I can't find my file in the WMA/jpeg listing.

• Make sure the filename is valid The remote control does not work or

· Check that batteries are inserted or change them.

· Aim the remote control at the unit. The infrared beam must not be blocked or interrupted.

configured to control the device you are trying to operate with it.

The subtitles do not appear · Check that the DVD disc provides subtitles Refer to the section on how to display

Check that the remote control is

subtitles.

The disc menu language is not the

· The disc menu language has not been set • The language of your choice is not

Precautions

· If your unit has been stored in a cool place for any length of time, during a journey for example, wait for about 2 hours

before using it. The openings located on the top and bottom are for ventilation and must not

be obstructed. · During thunderstorms, we recommend electrical supply so that it is not damaged

 This unit is designed for continuous use Switching off the unit to standby mode does not disconnect it from the mains

connected to the electrical supply.

any risk of electrocution. · Do not attempt to look inside the unit

the explicit permission of the holder of the rights, contravenes current legislation.

Copying or downloading music files for sale or any other business purpose constitutes or could constitute a violation of copyright law.

· If an object or liquid enters inside the unit, unplug it immediately and have it checked by an authorized servicer or service center.

· Using solvents, abrasive or alcohol-based

products risks damaging the unit.

Handling and caring for discs · Handle your discs with care. Hold the disc with your fingers at the edges or through

· Insert the disc with the label facing up (for a single-sided disc).

allotted holder. Use a soft cloth to clean discs if necessary always wiping from the centre to

the edge. Always put discs back in their cases after use and store in a vertical position

Do not close the tray with two discs in it or with a disc not sitting correctly in

Do not play cracked, chipped or warped

discs nor try to repair them with adhesive tape or glue. · Do not move the unit when a disc is

being played. Do not scratch discs or store them in places exposed to direct sunlight, high humidity or high temperatures. Do not use aerosol cleaners, benzene, anti-static liquids or any other solvent for

Your Responsibility

1) You must retain the original sale receipt to provide proof of purchase.

Hours: Monday-Thursday: 9am-7pm, Friday: 9am-5pm,

Saturday: 9am–NOON Eastern time.

3) Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified without authorization of AVC, or to products or parts thereof which have had the serial number removed or changed.

2) These warranties are effective only if the product is purchased and operated in the U.S.A. or

In the event your product requires repair after the limited warranty period has expired. please contact our Customer Support Center at 1-800-506-5746, 1-877-252-6873 or www.1800customersupport.com/RCA

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall AVC

of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of AVC arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date of purchase. This limitation does not apply to implied warranties arising under state law.

an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you. For more information on other products and services, please visit our web site at

... Invoice no. www.1800customersupport.com/RCA

Important: You are responsible for any transportation, shipping or insurance relative to the return of product to our Product Returns Center.

Important: Also keep your "Bill of Sale" as proof of purchase

811-315W91W010

WMA Files and jpeg Files

During the slide show you can use the left/right button to rotate the picture, the

the CH- button to go back to the previous picture or the CH+ button to go to the next one, and the STOP button to interrupt the slide show and display the

5. Press INFO to display the Info menu during

playing, press INFO two times and select

the Play Mode icon using the left/right

music or slide show stops and the disc's

disc to be displayed varies according to the size and number of jpeg files on the

disc. If nothing is displayed after a few minutes, the file sizes may be too large.

Reduce the files' resolution and writ

Before inserting a disc, make sure it is compatible with the unit.

playback.mp3/WMA file: with the disc

arrow buttons. Press the up/down arrow button to select a play mode (Standard, Random, Program, Repeat Folder, Repeat Disc and Repeat Track), and press OK. 6. When the unit has played all the files, the

contents are displayed again.

7. Press STOP to end playback.

Notes: WMA files and jpeg files could not playback simultaneously.
The time taken for the contents of the

another disc.

Additional Information

In order to ensure playback, discs must

Compatible Formats

with DVD or CD

standards. This unit may not play some recordings or files due to differences in recording formats, software used and disc types DVD-Video

Digital video discs - 12 cm, single or

DVDs are high density optical discs on

which high quality picture and audio

double sided, single or dual layer

are recorded by means of digital signals. DVD-R,DVD-RW, DVD+R, DVD+RW Most DVD-R and DVD+R (one recording only), DVD-RW and DVD+RW discs (rewritable), depending Recordings using DVD-R and DVD-RW discs must be made in Video DVD mode. Recordings using DVD+RW discs must

be made in accordance with the specifications

for DVD+RW discs with a 4.7 GB capacity.

Most CD-R (one recording only) and

CD-Rs written during a multisession

(depending on the write software)

recording can be played, provided that the

session has ended before the disc is played

Audio CDs (12 cm).

CD-RW discs (rewritable).

CD-R, CD-RW

However, depending on the condition of the CD-writer, computer and the disc used, you may find that not all discs will play. When playing a CD-R disc, it is normal for the unit to take up to 60 seconds to recognize the disc before starting to play.

If the disc is not recognized after a period of

Do not use its full capacity.CD-Rs should be preferably used instead

of CD-RWs (rewritable CDs) as, in certain

cases. CD-RW playback may be faulty.

120 seconds, remove the disc, and insert it again

Use reliable, good-quality CD write Close all other applications on the computer to ensure reliable CD-R disc recording. CD-R and CD-RW discs containing audio files in mp3 format. For CD-

recommendations for CD-R, along with the

R WMA discs, please follow all the

comments below:

 Your mp3 files should be ISO 9660 or JOLIET format. ISO 9660 format and Joliet WMA files are compatible with Microsoft's DOS and Windows, as well as with Apple Mac. WMA filenames should not exceed 8 characters, and should end with the ".wma" extension. General name format: Title.wma When composing your title, use 10 characters or or less, no spaces, and avoid the use of special

· The total number of files on a disc should be less than 400. Use a decompression transfer rate of at least 128 kB/sec (kilobytes/second) when

characters including $(., /, \setminus, =, +)$.

cording WMA files. Sound quality with WMA files basically depends on the rate of compression/ decompression you choose. Obtaining audio CD quality sound requires an analog/digital sampling rate, that is conversion to WMA format, of at least 128 kB/sec. Choosing higher rates, such as 192kB/sec or more, only rarely produces even better sound quality. Conversely, files with sampling

rates below 128 kB/sec will not play

If the disc was recorded using a single camera angle, this function is not available.

- WMA/jpeg)
- button twice for CD and three times
- DVD play modes: standard, program, A-B
- ption, and then follow the instructions for entering the two points.

points A and B, choose the A-B repeat

4. To stop repeat playback, select the Play Mode icon and use the up/down arrow

Player Menu

2. Select an option using the up/down arrow

buttons. Press the right arrow to move to

Additional Information

jpeg files, including progressive jpeg files, cannot be read by this unit.

on your computer.

CD-R and CD-RW discs containing audio files in WMA

(Windows Media Audio)

format. Please follow all the

endations for CD-R above.

WMA files

endations do not guarantee that the unit will play mp3 ecordings, or as an assurance of sound quality. Certain technologies and methods for WMA file recording on CD-Rs revent optimal playback of these files on your unit (i.e. degraded sound quality and in some cases, inability of the unit to read the file).

Sound Enhancement Systems This receiver is equipped with several built-in sound enhancement systems.

You can use this mode with any stereo program

source (such as VCR/TV) to enjoy multi-channel

The Dolby Digital mode lets you enjoy full

digital surround from software processed in the Dolby Digital format. Dolby Digital provides better sound quality and a more powerful presence than conventional Dolby Surround. This unit is equipped with Dolby Digital 5.1-channel so that you can enjoy enhanced full digital surround sound. Different from Dolby Pro Logic in that only four channels (Front Left, Front Right, Centre and Rear) are used, the new system provides stereo separation of the rear speakers (Rear-Right, Rear-Left). Adding the to the 5 channels the subwoofer channel for bass sounds (counted as 0.1 channel) results in 5.1 channels (or 6 Channels) that bring you the most sophisticated Dolby Digital sound

speakers included with your unit. However, to To change the language of the disc menus, suit the acoustic conditions in your listening room and to make the sound more effective,

down arrow buttons. · Center (CT Distance) Surround (SL/SR Distance) 2. Press the right arrow button to move to the default distance. 3. Press the up/down arrow buttons to adjust

You can adapt your unit to other equipment



 Do not record copyright-protected mp3 files. "Securized" files are encrypted and code protected to prevent illegal copying

CD-R and CD-RW with jpeg files. Certain

IMPORTANT!

The total number of files and folders on the disc should be less than 650. Make sure that files have the ".jpg" extension. Files without the ".jpg" extension will not be able to be read by the unit -- even though the files are shown as jpeg images

Manufactured under license

DOLBY.

source, such as TV and VCR.

from Dolby Laboratories

double-D symbol are

trademarks of Dolby

"Dolby", "Pro Logic", and the

Dolby Prologic The Pro Logic mode uses the built-in circuit to steer the Left, Center, Right and Mono Surround channel audio signals and uses all five speakers to play both stereo and Dolby Pro Logic program

Additional Information **Technical Specifications:**

Amplifier Section: RMS Output Power: Dolby Digital Mode with 10% Total Harmonic Distortion Rear Channels: 32 Watts/channel (1kH, 4Ω) Front and Center Channel: 32 Watts per channel (1kHz, 4Ω) Subwoofer Channel: 40 Watts (100Hz, 3Ω)

mode: 200 Watts Muting Attenuation: 70 dB Frequency Response: 200Hz – 20KHz/3dB, 1KHz ref. Subwoofer Frequency Respons 20Hz – 200Hz/-3dB, 100Hz ref.

Total RMS Output Power, Dolby Digital

the original consumer purchaser and is limited to non-commercial use of the product One Year Parts & Labor Warranty AVC products purchased in the United States are warranted to be free from defects in materials or

AVC MULTIMEDIA("AVC") makes the following limited warranty. This limited warranty extend to

bor to repair a manufacturing defect at its designated Service Center. To obtain warranty the Untied States, you must first call our Customer Support Center at 1-800-506-5746 or 1-877-252-6873, during the hours listed in the box on the right. The determination of The customer is responsible for all transportation charges to the service facility.

3. Tune a station by pressing TUNER+/repeatedly until the desired station is found. Alternatively, you can press and hold the same buttons down for about one second to activate the automatic search function. In this mode the unit will automatically tune frequencies until it

The unit has a built-in tuner that allows for

1. Connect the FM antenna and the AM loop

antenna at the back of the unit. Rotate the AM loop for better reception.

FM radio function. The AM loop antenna

allows for AM radio function.

Manual tuning

2. Press TUNER.

and AM. Storing radio stations

ascending order.

1. Press TUNER to enter the Tuner mode

Manual preset

 Press MEMORY. While the Program Preset number is still flashing, input your desired preset number using the numeric buttons

Additional Information

numeric buttons.

Troubleshooting

The device switches off spontaneously The deivces switches off automatically

AM Tuner Section:

Ouieting: 24dB

IF Rejection: 70dB

Unit: 66 x 430 x 240

Dimensions (H x W x D mm):

Front Speakers: 110 x 81 x 90

Center Speaker: 82 x 185 x 92

onse: 2kHz +/-3dB, 400Hz ref. Usable Sensitivity: 3000uV/m @ S/N 20dB Signal to Noise: 38dB IF Rejection: 35dB

workmanship for a period of one year from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products,

service will be made by AVC Customer Support. PLEASE DO NOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION. New or remanufactured replacements for defective parts or Service Center indicated at the time Customer Support is contacted to make the necessary repairs. Packaging and Shipping Instruction

packing material or an equivalent as designated by AVC

finds a station 4. Repeat step 3 to tune to another

Radio

radio station. 5. Press TUNER to toggle between FM $\,$

its memory. You can enter every single radio station yourself or the unit can store all available radio stations automatically in

The unit can store up to 30 radio stations in

Automatic preset programming 2. Press and hold TUNER for two seconds to

start automatic preset programming.

3. Radio frequencies will be browsed and radio stations stored automatically. When all the available radio stations are stored or all 30 memory locations are full, the auto preset programming function

1. Tune to a radio station (see "Manual

tuning" for details).

then press MEMORY to store it. Retrieving preset stations 1. Press TUNER to enter the Tuner mode

Press CH +/- to search up or down for the preset stations or directly press the

Press HDMI key on remote handset several

Check the speaker configuration in the

FM Tuner Section: Frequency Response: 15kHz +/-3dB, 1kHz ref.

Signal to Noise: 62dB(stereo) / 65dB(mono)

Limited Warranty (U.S.)

at AVC'ssole discretion During a period of one year from the effective warranty date. AVC will provide when needed

Rear Speakers: 110 x 81 x 90 Signal to Noise Ratio: 70 dB (Dolby Digital) Subwoofer: 310 x 155 x 291

products will be used for repairs by AVC at its designated Service Center for one year from the effective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the When you send the product to the AVC service facility you must use the original carton box and

the holder.

cleaning discs. When cleaning, wipe gently with a soft damp (water only) cloth from the centre to the edge, avoiding circular motions, which could cause scratches and interference during playback

be liable for consequential or incidental damages. No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of the change of the chan

www.1800customersupport.com/RCA

Date purchased FOR SERVICE AND REPAIR, PLEASE VISIT Specifications and external appearance are subject to change without notice.

printed in China

Press either SOURCE on the main unit or AUX / AUDIO IN on the remote control to select AUX IN or AUDIO IN mode

You may change the surround setting by pressing SURROUND to select between Dolby ProLogic and

WMA Files and jpeg Files

displaying jpeg files

2 megapixels.

4. Press the up arrow button to move to the · WMA file: the unit begins playing

remains on the screen in the General Setup menu.

• This unit is for domestic use only and must

protected by copyright legislation, without

not be used for industrial purposes

Total or partial copying of recordings

Use a soft, dry, clean cloth, Regularly dust. the vents at the back or sides.

· Place the disc properly into the tray in the

Do not write on a disc.

Limited Warranty

Out of Warranty

This warranty gives you specific legal rights and you may also have other rights, which may vary, from state to state. Some states do not allow limitation on how long an implied warranty lasts, wher

..Product name..... Type of set ... Serial no. ...

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com