USER MANUAL

00

) õ õ (

RTD316Wi

RCЛ

Connections and Setup

Left and right

front speaker

and no objects filled with liquids, such as vases,

Moving the unit from a cold place to a warm one

can cause condensation on some components

inside the unit. Let the condensation disappear

Before moving the unit, make sure the disc tray

· Where the mains plug or an appliance coupler is used as a disconnect device, the disconnect device shall remain readily operable.

Connections and Setup

If possible, place surround speakers to either side

If space permits, install surround speakers 2-3 feet above

Aim surround speakers straight across the room

Alternative Surround Placement

towards the sidewalls (C, D).

If rear wall mounting is the only choice, aim the

speakers at each other (A), towards the front (B) or

surround you, rather than come from behind you.

riment with placement until sounds seem to

not down at viewers, to help create a more open,

Better Surround Placement

of the listening area, not behind it.

spacious surround sound field

on its own before turning the unit on again

should be placed on the apparatus.

is empty.

Location

Height

Aiming

Rear wall

Accessories Provideo

•••••

ontrol and 2

emote control ar AAA batteries

One Pig-Tail

It's important to read this instruction prior to using your new product for the first time.

Safety Precautions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful rference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.




Connections and Setup

VIDEO IN TV

Connecting to Your TV (VIDEO)

 Method 2



10 cm		10 cm ✦→
10 cm □	‡ 7 cm	\square

This product complies with DHHS Rules 21 CFR Subchapter L Applicable at the date of manufac-

For your Safety

The AC power plug is polar-ized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way.

If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not

attempt to bypass this safety feature. Removing the power plug is the only way to com pletely remove power from your product. Make sure the power plug remains easily accessible.

This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not cor-

respond to the Region number of this DVD player. this player cannot play the disc. The Region number for this DVD player is Region 1.

If your television is a high definition

resolution. If unable to use a HDMI

nection, use the unit's compor

video output and set the Progressive Scan option in the Video menu to ON, to get the next highest possible video resolution.

If one of the devices is not working, check

that all the cables have been inserted properly into the jacks.

If your component has only one input for

audio (mono), connect it to the left (white L/Mono) audio jack on the TV and don't

television, use the unit's HDMI output to get the highest possible vi

Safety Precautions



SEE MARKING ON BACK OF PRODUCT

THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

THE EXCLAMATION POINT WITHIN THE TRI-ANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSON-NFI

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH

THE SAME OR EOUIVALENT TYPE. WARNING: TO BE COMPLETELY DISCONNECT THE POWER INPUT , THE MAINS PLUG OF APPARA-TUS SHALL BE DISCONNECTED FROM THE MAINS. THE MAINS PLUG OF APPARATUS SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.

Service Information

This product should be serviced only by those In accordance with the DVD standard, your DVD specially trained in appropriate servicing techniques

Main plug is used as the disconnect device, it shall remain operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely. Caution

Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam. Class 1 laser product.

This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.

that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home use only unless otherwise authorized by Macrovision Corporation Reverse engineering or disassembly is prohibited

Connect components capable of outputting Dol-

by digital (e.g. TV or SAT/Cable Box) or standard

PCM (CD) format digital signals. Use a fiber optical

cable for this digital audio connection. (cable not

Press OPTICAL button on remote control o

for digital audio output components.

SOURCE button on main unit to select OPTICAL IN

able Box

R

DVD Copy Protection

Connections and Setup

-2-


Digital Optical Input


included)

Connecting AUDIO from External

Sources such as TV Using AUX Jacks

Connect the ALIX jacks from the unit to the ALIDIO OUT jacks on VCR, TV, SAT/Cable Box or other onent. Press either SOURCE on the main unit or AUDIO/AUX on the remote control to select AUX IN mode

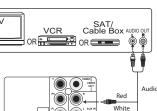

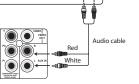


Using AUDIO IN Jack Connect the Ø3.5mm AUDIO IN jack on the front panel of the unit to the headphone output on mp3 players.

Notes

- Ø3.5mm to Ø3.5mm audio cables (not included). To listen to the audio input from the connected component, press SOURCE on the main unit or AUDIO/AUX on the remote control to select the
- AUDIO IN mode Suggest using Ø3.5mm AUDIO IN jack for

 MP3 player and AUX IN jacks for auxiliary equipment such as DVD, VCR or PC.



Enhancement Systems")

Adjust the sound volume

Select the TUNER and switch be

Select between Stereo and

Mono mode for Tuner (FM).

Remote Control Functions in Tuner Mode

quencies.

CH+/►►/CH-/I==: Select programmed stations.

Store a station.

Using Remote Control to Navigate through

tion of the button (e.g., to move right, press >).

highlighted, press OK to select the option that is

Insert 2 "AAA" batteries into the re-

mote control prior to use.

The buttons are used to highlight an option. Once

tween FM/AM.

TUNER:

VOL+/-:

TUNER +/-:

MEMORY:

AUDIO:

highlighted.

Note:

the On-Screen Menus

MUTE:

Playing Discs - Basic Functions

Changes the Surround sound setting. Press the button to select • DVD between 5.1 CHANNEL and STEREO CD, CD-R, CD-RW modes. (Refer to details on "Sound **Compatible Formats** DVD, JPEG • CD

Regional Coding

-7-

Your unit has been designed to process regional Mute and restore the sound. management information stored on DVD discs. Tune down and up the radio fre-The regional code for your unit is 1. Discs that have a different regional code will not play.

Operating the DVD Receiver

1. Turn on your television set. 2. Press ON•OFF on the remote control or ON/ STANDBY located on the unit's front panel ress DVD on the remote control.

Loading Dise 1. Press 📥 on the front panel to open the disc

- Use \land , \checkmark , \checkmark , \diamond buttons and OK on the remote control to navigate through the on-screen dis-plays (the DVD player's menu, the Info Display that 2. Place a disc onto the disc tray with the label
- appears during playback, or a disc's menu). side up. 3. Press **A** again to close the disc tray. Use \land , \lor , \checkmark , \diamond buttons on the remote control to move through on-screen menus in the direc-

Playback Switch the unit and the TV set on.

- 1. After loading a disc, playback starts automatically, or the disc menu appears. If the disc menu appears, select the Play option to begin playback 2. Press STOP to stop playback.
- Accelerated Plav While the disc is playing, press REV or FWD one or more times to vary the speed and direction of the accelerated play. Press PLAY to resume normal

playback.

While the disc is playing, press PAUSE once for freeze frame. Press PLAY to resume normal playback.

Frame Advance 1. Press PAUSE twice. "Step" is displayed.

2. Each time you press PAUSE button, the picture advances one frame. 3. Press PLAY to resume normal playback.

Composite One ex 'nal AM ideo cable loop antenna Things to Consider before You Connect Other important use and cleaning information at the end of the bookle · Ensure that the mains supply in your house complies with that indicated or **Connecting the Antennas** sticker located on the back of your unit. Install your unit horizontally, away from FM75Ω any source of heat (fireplace) or appliances creating strong magnetic or electric fields. The components of this unit are sensitive to heat The maximum ambient temperature should not exceed 35°C / 95°F. Leave enough space around the unit to allow adequate ventilation: 10 cm/4 inches on either side and above the top, and 5 cm/2 inches at the rear.

Center speake

The AM and FM antennas connect to the AM and FM terminals on the system's back panel. They The humidity of the room should not exceed 75%. If you have to use the unit outdoors, do not must be hooked up in order to receive clear reexpose it to rain or splashing water. The apparatus should not be exposed to dripping or splashing

Subwoofer

Left and right Sur

AM Loop Antenna

No adiacent walls

tables (B).

-5-

- Uncoil the AM antenna wire. 2. Press down on the antennas tab to open the
- terminal. 3. Make sure the white wire on the AM loop antenna is inserted into the AM loop terminal and the other wire is inserted into the ground loop terminal
- Method 1 Composite video jack (yellow) The basic video jack is color-coded yellow Video cable (yellow) is supplied for the connection for good picture quality. Connect the video OUT jack on the receive to the Video IN jack on your TV so the video content goes from the receiver to the screen. Method 2 Component video jacks (Pr. Pb. Y) The component video jacks are color-coded green, blue and red.
- Additional component video cables (not supplied) are required to provide best picture
- quality. They are usually color-coded green, blue and red. Connect the component video OUT jacks on the receiver to the component video IN jacks on your

To HDM TV so the video content goes from the receiver

-1-

Method

connect the right audio part of the cable. Connecting to Your TV (via HDMI input) HDMI stands for High Definition Multimedia Interface. HDMI transfers digital audio and uncompressed digital video on a single cable. Press the HDMI button on the remote control to change output signals as follows: 480p, 720p, 1080i and 1080p. τν

HDMI cable

ST Note: Refer to the owner's manual of the connected TV as well.

urn on/off the unit

Cable Box).

Number entry.

Access the Info menu

Select digital audio input.

Switch between DVD and iPod mode

Select the TUNER and selects between FM/

Select and toggle between the Front AUDIO IN

mode and the Rear Auxiliary input (for listening

to audio input from connected TV, VCR or SAT/

Quit the current setting manually from the TV

screen without saving change.



Overview	of Controls
Overview	of controls


Surround speakers can go on stands facing each other to approximate sidewall mounting (A), or to the sides or rear of the viewing area aimed upwards; they can go right on the floor, or referably, a few feet off the floor such as on end

Test Tone/Channel Balance Channel Balance Your receiver is equipped with a test signal

generator to help balance the audio level for each channel. See Audio Setup under The Setup Menu section for more details on how to access this feature Level Adjustment and Surround Channel Level

Expectation Even though you adjust the surround channel to be as loud as the others on the test signal, you may find that surround channels seems quiete for actual TV and Movie content. This is because producers use surround for subtle atmospherics and ambience, and only rarely for special effects.

Overview of Controls - Front Panel Controls

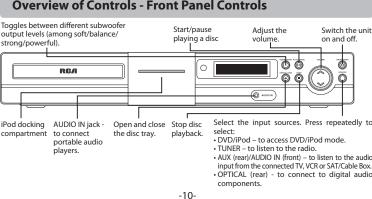



DVD/iPod 1 2 3 4 5 6

(ሪ)

to the screen.

(7) (8) (9) CLEAR (7) (NEO OPTICAL 0 MEN TITLE $\overline{}$ < (OK) > + \sim SET UP СН VOL -CH / 🛤 REV FWD (
⇔ SLOW PAUSE AUDIO UBTITLE 200M (@) ÷

RСЛ

CLEAR: INFO: OPTICAL: TITLE: DISC MENU: ok: ∧√<>: MUTE: SETUP: RETURN VOL +/-: CH+/>>, CH-REV: PLAY: FWD: SLOW: STOP PAUSE: AUDIO: ANGLE: ZOOM: SUBTITLE:

HDMI:

SUBWOOFER:

-11

RANDOM:

REPEAT:

LEVEL:

DVD/iPod: TUNER: AUDIO/AUX:

0-9:

Access the title menu of DVD discs. Access the disc menu during playback. Confirm your selection. Navigate through the menus. The left and right arrowsalsotunetheradiofrequency in the tuner node. Mute and restore the sound. Enter Setup menu. In DVD mode, return to the previous menu. Adjust the sound volume Directly access the next or previous chapter (DVD) or track (CD). Select programmed stations in TUNER mode Start reverse accelerated play. Start playing a disc. Start forward accelerated play. Select SLOW motion function. Stop playback. Freeze frame, access frame advance Access the audio function. Access the camera angle function for DVD disc. Access the Zoom function Select the subtitle languages or turns subtitle

off (if available).

1080i or1080p).

balance/strong/powerful).

Access the repeat function

Adjust the value using VOL +/-.

Change video output signals (480p, 720p,

Select among subwoofer output levels (soft/

Turn on/off random playback on CDDA

Toggle channels for different level settings

Important Information mportant Battery Information

- Do not mix different types of batteries or new and old batteries. Do not use rechargeable batteries. In order to avoid any risk of explosion, observe the polarities indicated inside the battery
- compartment. Replace only with the type of batteries specified. Do not dispose of them in a fire or recharge them. • If you are not using the remote control for a long
- period of time, remove the batteries.

Please respect the environment and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer whether they are subject to special recycling and if they will accept them for disposal.

Illustrations contained in this document are for epresentation only.


CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1
PRODUTO LASER CLASSE 1

-3

Connections and Setup

Connecting the Speakers

Speaker wires are color-coded to match the terminals. Connect the speaker wire from the back of each speaker to the corresponding color terminal at the back of the unit. Press down the tab to open the terminal and insert the wire. Release the tab to lock wire in the terminal.

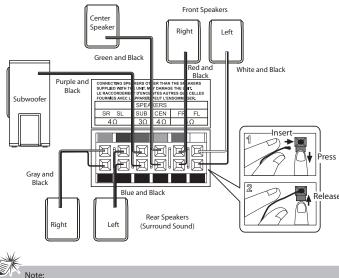

When connecting the speakers, make sure the polarities ("+" speaker wire to "+" on the receiver) of speaker wires and terminals match. For example, red wire to red terminal on the receiver. If the cords are reversed, the sound will be distorted. Do not let the speaker wires touch each other, it will damage the system's amplifier

ypes of Menu

Info menu on or off.

menu.

Disc menu — The appearance and contents of

this menu varies according to the type of disc

you have inserted. It is separate from the Setup

Info menu — The unit's Info menu appears at

the top of the screen while the disc is playing.

Press INFO on the remote control to switch the

DVD TT 1/10 CH 1/16 ① 00:13:07

• Setup menu — Press SETUP to access this

When you press STOP, the unit stores the

point where playback was interrupted. If you press PLAY again, playback resumes

To stop playback completely or to start

again from the beginning, press STOP twice.

If the unit is left in STOP mode for more than

5 minutes without any user interaction, a

creen saver is activated. At the end of 30

n this point.

1. Press SLOW button on the remote control in play mode.

2. Each time the SLOW button is pressed the speed of slow-motion playback changes in the following sequence:

Basic Playback Operations

- X1/2→SFX1/3→SFX1/4→SFX1/5
- Play SFX1/7 SFX1/6 3. Press PLAY to resume normal playback
- Changing Chapter/Track
- While the disc is playing, press the CH+/₩, CH-/₩ button to go immediately to the next or previous chapter, or to the next or previous track.
- 1. While a disc is playing, press ZOOM until you reach the zoom size you want. The ZOOM button toggles through X2, X3, X4 and then zooms out to X1/2, X1/3 and X1/4, then returns to normal playback. 2. Move from one area to another (pan) using the
- arrow buttons. 3. To turn ZOOM off, press ZOOM until you get to the Zoom Off option.

ST

Note: During picture slideshow, you can not zoom out a picture unless HDMI Setup is set to 480p.

CAUTION: is product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure. Do not open covers and do not repair yourself. Refer servicing to qualified

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B

est conforme à la norme du NMB-003 du Canada.

WARNING To reduce the risk of fire or electric shock do not expose this product to rain or mois ture No objects filled with liquids, such as vases, should be placed on the apparatus.

Important Safety Instructions Please Read and Save for Future Reference. Additional Safety Information

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use. Read these instructions

- Keep these instructions. Heed all warnings.
- Follow all instructions
- Do not use this apparatus near water Clean only with a dry cloth.
- Do not block any ventilation openings Install in accordance with the manufacturer' instructions
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (Including amplifiers) that produce
- Only use attachments / accessories specified by the manufacturer. • Do not defeat the safety purpose of the
- polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety If the provided plug does not fit into your wall outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience eptacles, and the point where they exit from the apparatus.
- Unplug this apparatus during lightning storms or when unused for long periods of time. • Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus
- ombination to avoid injury from tip-over · Refer all servicing to qualified service personne Servicing is required when the apparatus has been damaged in any way, such as the

power cord or plug is damaged liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Connections and Setup



1. Left, Right (Front Speakers) Front speakers carry primarily music and sound

effects. 2. Center

In surround mode, the center speaker carries mos of the dialog as well as music and effects. It should be set between the left and right speakers.

3. Surround (Rear Speakers) The surround speakers' overall sound balance should be as close as possible to the front speakers Proper placement is vital to establish an evenly distributed sound field.

A subwoofer is designed to reproduce powerful low bass effects (explosions, the rumble of spaceships, etc.).

ST

Note: Center speaker provided with this unit is magnetically shielded to protect your TV set. It is not recommended to place speak ers without magnetic shield near the TV

The Info Menu

- The Info Menu 1. Press INFO on the remote control while a disc is
- playing to display the info menu. The first banner hows title, chapter, and time display information
- 2. Press INFO again for audio language, subtitles, and camera angle. 3. Press INFO a third time for play mode, bookmark
- and sleep timer. 4. Use the right/left arrow buttons on the remote
- control to select an icon. 5. Use the up/down arrow buttons to scroll through the options.

ST

Note: Invalid Key will be displayed if the function you select is not available

DVD Info Disp	lay				
Title	Chapter CH 1/16		e display		
Audio language Subtitles Camera angle					
Play mode	Bookmark	ark	Sleep timer ② Sleep		
CD Info Displa	CD Info Display				
Track	4) <u>~</u>		e display		
Play mode	Bookmark	-	Sleep timer		

III Playmode 🔗 Bookmark 🕘 Sleep

 
Title/Chapter (DVD)/Track (Audio CD) To directly access a title, chapter (DVD) or a track audio CD), press INFO, press Ok Select the Title (TT), Track (TRK) or Chapter (CH) icon and enter a number directly with the numeric buttons. Press OK again to confirm.


Note: Many discs only have one title.

 
Time Display

- To access the Time Display, press INFO on the remote control. Press the up/down arrow buttons repeatedly to display:
- DVD: Chapter Time Elapsed, Chapter Time Remain, Title Time Elapsed and Title Time Remain.
- Audio CD: Track Time Elapsed, Track time Remain, Disc Time Elapsed and Disc Time Remain.

To directly access a location on the disc which does not correspond to the start of a title or chapter, press INFO once and press OK, highlight the Time Display icon using the left/right arrow buttons, then enter a time with the number buttons (hh:mm:ss) and press OK.



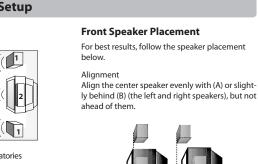



The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids,

such as vases, shall be placed on the apparatus Always leave sufficient space around the produc

for ventilation. Do not place product in or on a bed,

rug, in a bookcase or cabinet that may prever

Do not place lighted candles, cigarettes, cigars,

Connect power cord only to AC power source as

Care should be taken so that objects do not fall

Do not attempt to disassemble the cabinet. This

product does not contain customer serviceable

If your product operates on batteries, adhere to

A. Any battery may leak electrolyte if mixed with a

B. Any battery may leak electrolyte or explode if

a battery not intended to be recharged.

different battery type, if inserted incorrectly, or if all batteries are not replaced at the same time.

disposed of infire or an attempt is made to charge

. Discard leaky batteries immediately. Leaking

batteries can cause skin burns or other persona

injury. When discarding batteries, be sure to

dispose of them in the proper manner, according

to your state/provincial and local regulations.

D. Battery shall not be exposed to excessive heat

such as sunshine, fire or the like.

air flow through vent openings.


etc. on the product.


into the product.

marked on the product.

ing precautio

- Place the left and right speakers to form a 45-degree angle with your favorite viewing position to duplicate the soundtrack mixer's perspective.
- The three front speakers should be as close as possible to the same height. This often require placing the center speaker directly on top (A) or beneath (B) the TV set.

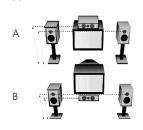

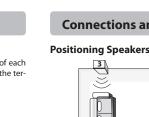

The Info Menu

Audio (DVD)

Some discs have several audio tracks used for different languages or different audio formats. To change the language or audio format during playback, you can press the AUDIO button on the remote control repeatedly to select your preferred choice; or follow the below steps: Press the INFO button twice

2. Use the left/right arrow buttons to select the Audio icon.

3. Choose a language or an audio format with the up/down arrow buttons.

This option is only available if the disc offers dialog languages or audio formats. When you change the dialog language using the Info menu, it only changes the dialog language of the disc being played. When you eject the disc or switch off the unit, the language will revert to the one you selected in the language Setup menu.

Subtitles (DVD)

- Subtitles are turned off by default. Press the SUBTITLE button on the remote control repeatedly during playback to select a preferred subtitle option: or follow the below steps:
- While the disc is playing, press INFO twice, then select the Subtitles icon using the left/right
- 2. Select a language using the up/down arrow 3. To turn subtitles off, select the Off option.
- When you change the language of the subtitles

using the Info menu, it only applies to the disc currently being played. When you eject the disc nd switch off the unit, the subtitles will default to the subtitle language you selected in the anguages menu. This function may not be available on all discs.

Camera Angle (DVD)

Some discs offer different camera angles for specific scenes. To change the camera angle, press the ANGLE button on the remote cor repeatedly; alternatively, you can press the INFO button twice and select the Camera angle icon with the left/right arrow buttons, and then choose the angle with the up/down arrow buttons.

If the disc was recorded using a single camera angle, this function is not availabl

AUDIO IN / AUX IN

TV. VCR. SAT/Cable Box or portable audio players can be connected to AUX input jacks at the back of the unit or AUDIO IN at the front panel so that sound from the auxiliary component or the audio players comes into the unit and out through the neakers

Connecting Auxiliary Components Refer to "Connecting AUDIO from external source

such as TV" for details on connecting the auxiliary components to the unit

Selecting AUDIO IN / AUX IN Mode Press either SOURCE on the main unit or AUDIO AUX on the remote control to select AUX IN or AUDIO IN mode.

Sound Output in Aux-In Mode You may change the surround setting by

Troubleshooting

the dock and on your iPod.

I can't find my file in the jpeg listing.

· Make sure the file name is valid.

The subtitles do not appear.

titles.

the disc

manual for details.

only intermittently

ond to this unit

Remove your iPod from the docking bracket

Make sure that your iPod works properly before

and check for obstruction on the connectors in

docking into the unit. Make sure the software

of iPod is the latest. Please refer to your iPod

The remote control does not work or works

Check that batteries are inserted or change

Aim the remote control at the unit. The infrared

beam must not be blocked or interrupted.

Check that the DVD disc provides subtitles

Refer to the section on how to display sub-

The disc menu language is not the correct one.
The disc menu language has not been set up.
The language of your choice is not available on

STS8316Wi English IB for RCA.indd 2

Check that the remote control is configured

o control the device you are trying to operate

mode

pressing SURROUND to select between 5.1 ch and stereo modes. If the auxiliary audio signal is mono, there will be no output from some speakers in 5.1CH

Play Mode (All Discs Except Jpeg)

- 1. While the disc is playing, press the INFO button twice for CD and three times for DVD. . Select the Play Mode icon using the left/ right arrow buttons.
- 3. Use the up/down arrow buttons to select an

DVD play modes: standard, program, A-B repeat, title repeat, chapter repeat. Program play mode is only available if a program list s been created (see below). Repeat mode is only available with discs that display elapsed time and remaining time. To repeat a sequence between points A and B, choose the A-B repeat option, and then follow the instructions for ring the two points.

- Audio CD play modes: standard, introscan, random, program, repeat A-B, repeat disc, repeat track 4. To stop repeat playback, select the Play Mode
- icon and use the up/down arrow buttons to choose the Standard option, and press OK

Creating a Program List for Program Play Mode (Audio CDs and DVD Discs) To use program play mode, you must first create

- a program list. To create a program list, press the INFO button twice for CD and three times for DVD. Highlight the Play Mode option and press the up arrow to select the Program option.
- 2. Press OK. The Program screen is displayed. 3. The first spot in the list is highlighted. Use the number buttons on the remote control to enter
- a track or title/chapter number. 4. Use the arrow buttons to move to the next spot in the list. Enter the next track or title/chapter
- 5. Continue entering tracks or titles/chapters until you have completed your list.
- Highlight the Play option at the bottom of the screen and press OK or press PLAY to start playback. The program list will play in the order you programmed it.

Jpeg Files

-15-

Displaying Jpeg Files

Jpeg files are image files. Make sure that they have a resolution of less than 2 megapixels . Open the disc tray

2. Place the disc with the printed side facing up and close the disc tray. The folders on the disc will be listed in numerical order on the left side of the screen. When you highlight a folder, then press OK button. The list of pictures in the folder are listed in numerical order on the right side of

the screen. 3. Select a folder using the up/down arrow buttons on the remote control.

- 4. Press the right arrow button to move to the file list on the right side of the screen. Use the up/ down arrow buttons to select a file. Press PLAY to start picture slideshow.
- ipeg file: the unit starts the slide show with the jpeg file you have selected, then displays all the jpeg files in the same folder, then all the jpeg files in the subfolders located in the same folder. You can set the amount of time a picture remains on the screen in the Video Setup menu

During the slide show you can use the left/right arrow buttons to rotate the picture, the up arrow button to rotate the image vertically, the down ar row button to rotate the image horizontally. Use the ZOOM button to magnify the picture. Use the CH-/I++ button to go back to the previous picture or the CH+/m button to go to the next one, and the STOP or RETURN button to interrupt the slide show and display the disc's contents.

-20-

Additional Information

-25-

Precautions Use

- If your unit has been stored in a cool place for any length of time, during a journey for example, wait for about 2 hours before using
- The openings located on the top and bottom are for ventilation and must not be obstructed. · During thunderstorms, we recommend that you isolate the unit from the electrical supply so that it is not damaged by electrical or
- electromagnetic surges. This unit is designed for continuous use. Switching off the unit to standby mode does not disconnect it from the mains supply. To completely isolate the equipment, remove the plug from the mains jack as some components nain connected to the electrical supply. If you notice any burning or smoke, disconnect
- the unit immediately to avoid any risk of electrocution. Do not attempt to look inside the unit through the disk tray opening or any other opening.
- You may be electrocuted or exposed to laser This unit is for domestic use only and must not
- be used for industrial purposes. Total or partial copying of recordings protected by copyright legislation, without the explicit permission of the holder of the rights, contravenes current legislation. Copying or downloading music files for sale or any other business purpose constitutes or could constitute a violation of copyright law.

The Info Menu

1. Press INFO button twice for CD and three times for DVD. Select Sleep icon with the left/right arrow buttons. 2. Select one of the available options using the OK button : Off, 30, 60, 90 or 120 minutes.

S.

This function is not available in AUX/ AUDIO IN/TUNER/iPod mode.

Introscan (CD)

- is option plays the first ten seconds of each track on a CD.
- 1. Press the INFO button twice, then select the Play node icon with the left/right arrow buttons.
- 2. Press the up/down arrow buttons to select the Intro option and press OK to start Introscan.
- 3. Press STOP to stop Introscan, and press PLAY to resume normal playback.

Bookmark (DVD and Audio CD)

- I. Press INFO twice for CD and three times for DVD Select the Bookmark icon with the left/ right arrow buttons, and press OK. A menu is lisplayed with five bookmarks. 2. The first bookmark space is highlighted. Press OK to set the bookmark. The bookmark is saved
- and is indicated by the number 1. Use left/right arrow and OK buttons, you can et up to five bookmarks on a disc.
- 3. To start playback from a bookmark, press the PLAY button on the remote control. 4. To delete a bookmark, highlight it and press
- CLEAR.

S.

This function is only available with discs whose elapsed time or remaining time appears in the Info menu.

Jpeg Files

5. Press INFO to display the Info menu during play back. Press INFO twice and select the Play Mode icon using the left/right arrow buttons. Press

- the up/down arrow buttons to select a play mode (Standard, Repeat Folder, Repeat Disc and Repeat Track), and press OK.
- 6. When the unit has played all the files, the slide show stops and the disc's contents are displayed again.
- 7. Press STOP to end playback.

S.

- Note The time taken for the contents of the disc to be displayed varies according to the size and number of jpeg files or the disc. If nothing is displayed after a few minutes, the file sizes may be too large. Reduce the files' resolution and rite another disc
- Before inserting a disc, make sure it is compatible with the unit. During picture slideshow, you can not zoom out a picture unless HDMI Setup is set to 480p.

Additional Information

ucts risks damaging the unit.

Handling and Caring for Discs

single-sided disc).

Compatible Formats

DVD-Video

capacity.

authorized servicer or service center.

• Use a soft, dry, clean cloth. Regularly dust the

vents at the back or sides. Using solvents, abrasive or alcohol-based prod-

If an object or liquid enters inside the unit, un-plug it immediately and have it checked by an

Handle your discs with care. Hold the disc with

your fingers at the edges or through the hole. Insert the disc with the label facing up (for a

Place the disc properly into the tray in the allot-

In order to ensure playback, discs must conform

with DVD or CD standards. This unit may not play some recordings or files due to differences in

cording formats, software used and disc types.

Digital video discs - 12 cm, single or double sided,

single or dual layer. DVDs are high density optical

discs on which high quality picture and audio are

recorded by means of digital signals.

DVD-R, DVD-RW, DVD+R, DVD+RW

Most DVD-R and DVD+R (one recording

(rewritable), depending on the DVD

only), DVD-RW and DVD+RW discs

writer and discs used. Recordings using

DVD+RW discs must be made in accordance with

the specifications for DVD+RW discs with a 4.7 GB

DVD-R and DVD-RW discs must be made

in Video DVD mode. Recordings using

Radio

The unit has a built-in tuner that allows for FM radio function. The AM loop antenna allows for AM radio function.

Radio

When a strong FM stereo broadcasts is

tuned, ST is displayed. When you manually tune into a weak

FM station, press AUDIO on remote

control to switch from Stereo to Mono

mode. This will reduce the background

If there is any interference, change the

antenna's position until ideal sound

reception is obtained. TV and other

electronic devices could be the cause

of interference, so try to position the

A weak signal can affect the "Automatic

preset programming" function's efficiency. Adjust the antenna for

better reception and a more efficient

antenna away from th

search.

The Setup Menu

Depending on the format of the DVD disc, you

can choose the picture format (aspect ratio) best

4:3 PS: reproduces a 4:3 picture without

4:3 LB: gives best reproduction of pictures

recorded in this format (i.e. with horizontal

bands at the top and bottom of the screen) or

16:9 (windscreen): reproduces 16:9 format films

This option allows you to return the unit's settings

to the original factory settings. Any changes you

have made to the unit's settings will be reverted

Once Progressive Scan has been activated

an image will only be visible on a progressive

scan TV or monitor. If you choose this option

and you don't have a progressive scan TV or

monitor, you may get a picture with incorrect

Additional Information

This receiver is equipped with several built-in

DOLBY "Dolby" and the double-D

DIGITAL symbol are trademarks of

The Dolby Digital mode lets you enjoy full digital

surround from software processed in the Dolby

Digital format. Dolby Digital provides better

sound quality and a more powerful presence than conventional Dolby Surround. This unit is

equipped with Dolby Digital 5.1 channel so that you can enjoy enhanced full digital surround

sound. Different from Dolby ProLogic in that only

four channels (Front Left, Front Right, Center and

Rear) are used, the new system provides stereo

Left). Adding the subwoofer channel to the 5

channels for bass sounds (counted as 0.1 channel)

results in 5.1 channels (or 6 Channels) that bring

you the most sophisticated Dolby Digital sound

separation of the rear speakers (Rear-Right, Rear

Dolby Laboratories.

Manufactured under licens

m Dolby Laboratories

Sound Enhancement Systems

sound enhancement systems

Dolby Digital

enjoyment.

suited to the format of your TV screen:

TV Type

in 16:9.

Default

in full on a 16x9 screen.

back to the original settings.

color or no color

IMPORTANT!

SEX.

iPod

"airplane mode

with your iPod.

iPod

-17-

iPod is a trademark of Apple Computer, Inc.

registered in the U.S. and other countries

iPod nano (1st generation) 1GB, 2GB, 4GB

· iPod nano (2nd generation) 2GB, 4GB, 8GB

iPod nano 3rd generation (video) 4GB, 8GB

• iPod nano 4rd generation (video) 8GB, 16GB

iPod 5th generation (video) 30GB, 60GB, 80GB

iPod touch (1st generation) 8GB, 16GB, 32GB

• iPod touch (2nd generation) 8GB, 16GB, 32GB

Note: Also supports iPhone when iPhone is set to

Using an Adaptor to Connecting Your

Pod (Dock adaptors are not included with this

product, please use the one that was included

iPod Dock Adaptor (not included)

3. Insert your iPod Dock Adaptor into the dock

4. Turn on the unit, press the DVD/iPod button to

utomatically, following screen appears.

With this menu, you can set the language for unit

If you chose "English" during initial set-up, any

menus generated by the disc are in English, and

so is the language of the dialogs (if this language

1. Select the Language Setup icon in the main

2. Select one of the options using the up/down

3. Press the right arrow button to move to the lan-

4. Use the up/down arrow buttons to highlight

Select the language of player menus and press OK.

remote control to select audio language

Technical Specifications:

Total Harmonic Distortion

Muting Attenuation: 70 dB

RMS Output Power: Dolby Digital Mode with 10%

Rear Channels: 40 Watts/channel (1kH, 4Ω)

Subwoofer Channel: 50 Watts (100Hz, 3Ω)

Total RMS Output Power, Dolby Digital mode:

Frequency Response: 200Hz – 20KHz/3dB, 1KHz

Subwoofer Frequency Response: 20Hz – 200Hz/

Signal to Noise Ratio: 70 dB (Dolby Digital)

Usable Sensitivity: 3000uV/m @ S/N 20dB

Frequency Response: 2kHz +/-3dB, 400Hz ref.

Frequency Response: 15kHz +/-3dB, 1kHz ref.

Signal to Noise: 62dB(stereo) / 65dB(mono)

Front Channel: 40 Watts per channel

Center Channel: 40 Watts per channel

Amplifier Section

(1kHz, 4Ω)

(1kHz, 4Ω)

250 Watts

3dB, 100Hz ref.

AM Tuner Section

Signal to Noise: 38dB

IF Rejection: 35dB

FM Tuner Section:

Quieting: 24dB

IF Rejection: 70dB

Unit: 67 x 430 x 243

-27

Download from Www.Somanuals.co All Manuals Search And Download.

Dimensions (H x W x D mm):

Front Speakers: 112 x 88.8 x 90

Center Speaker: 112 x 88.8 x 90

Rear Speakers: 112 x 88.8 x 90

Subwoofer: 307 x 145 x 253

the language of your choice and press OK.

menu using the left/right arrow buttons.

menus, audio, subtitles and the disc menus.

select iPOD mode. Your iPod will be connected

until it sits firmly in place.

Language Setup

is available on the disc).

arrow buttons

guage choices.

buttons and press OK.

Player Menu

-22-

. Open the iPod docking compartment

Compatible iPod Types:

• iPod classic 80GB, 120GB, 160GB

Manual Tuning 1. Connect the FM antenna and the AM loop an-

tenna at the back of the unit. Press TUNER.

3. Tune a station by pressing TUNER+/-repeatedly until the desired station is found. Alternatively you can press and hold the same buttons down for about one second to activate the automatic search function. In this mode the unit will automatically tune frequencies until it finds a station. 4. Repeat step 3 to tune to another radio station. 5. Press TUNER to toggle between FM and AM.

Storing Radio Stations

The unit can store up to 60 radio stations (AM/FM each 30 radio stations)in its memory. You can enter every single radio station yourself or the unit can store all available radio stations automatically in ascending order.

Automatic Preset Programming . Press TUNER to enter the Tuner mode.

2. Press and hold TUNER for two seconds to start automatic preset programming. Radio frequencies will be browsed and radio stations stored automatically. When all the available radio stations are stored or all 30 memory locations are full, the auto preset programming function will stop.

Manual Preset

. Tune to a radio station (see "Manual tuning" for details) 2. Press MEMORY. While the Program Preset number is still flashing, input your desired preset number using the numeric buttons, then press MEMORY to store it.

Retrieving Preset Stations

Press TUNER to enter the Tuner mode. Press CH+/www.CH-/www.to.search.up.or.down.for the preset stations or directly press the numeric

The Setup Menu

-16-

Press SETUP to bring up the main menu. There are four options in the main setup menu: General Setup, Language Setup, Audio Setup and Video Setup. Press SETUP if you want to exit the main

General Setup

menu

1. Select the General Setup icon in the main menu using the left/right arrow buttons. 2. Select one of the options using the up/down arrow buttons. And press the right arrow button to move to the option's choices

3. Use the up/down arrow buttons to highlight your preferred choice and press OK.



Video

Progressive Scan Output provides higher quality video. Turn on Progressive Scan if you're using the Component Video jacks of the unit to connect a TV or monitor compatible with a progressive scar

Select P-Scan YPbPr and press OK to activate Progressive Scan.

HDMI Setup

Audio CDs (12 cm

CD-R, CD-RW

(rewritable)

software).

Jpeg Files

this unit.

your compute

-26

-21

This lets you select the resolution of the player's output according to the connected TV. Supported HD mode: 480p, 720p, 1080i and

Most CD-R (one recording only) and CD-RW discs

CD-Rs written during a multisession recording car

be played, provided that the session has ended

before the disc is played (depending on the write

ever, depending on the condition of the

CD-writer, computer and the disc used, you may

find that not all discs will play. When playing a

CD-R disc, it is normal for the unit to take up to

60 seconds to recognize the disc before starting

If the disc is not recognized after a period of 120

seconds, remove the disc, and insert it again.

CD-Rs should be preferably used instead of

CD-RWs (rewritable CDs) as, in certain cases,

Use reliable, good-quality CD write software.

CD-R and CD-RW with jpeg files. Certain jpeg files,

including progressive jpeg files, cannot be read by

The total number of files and folders on the disc

should be less than 650. Make sure that files have

the ".jpg" extension. Files without the ".jpg" exten-

sion will not be able to be read by the unit --- even

thought the files are shown as jpeg images on

Close all other applications on the computer to

Do not use its full capacity.

CD-RW playback may be faulty.

ensure reliable CD-R disc recording.

iPod

Warning: To prevent damage to the unit and/or 4. Press the RETURN button to go back to the previyour iPod, connect or remove your iPod when the unit is powered off or the unit s not in iPod mode.

Caution: Due to the iPod limitation, not all functions of some iPod models can be controlled via the remote control of this unit. If necessary, operate on your iPod directly

Removing the iPod Dock Adaptor 1. Remove the iPod Dock Adaptor as shown in the figure to the right.

2. Replace it with another one you need.

- 2. Choose the iPod Dock Adaptor that fits your
- Your iPod will be charged automatically (until fully charged) once it is connected, no matter whether the unit is in iPod node or not. Make sure the software of iPod is the

latest. **Playing Music**

ST

- 1. In iPod Home menu, use the \checkmark , \checkmark button to select Music and press the OK button. 2. Use the ∧, ∨ button to select from Playlists, Artists, Albums, Songs, Genres or Composers. Press the OK
- button to enter. 3. Use the \wedge , \checkmark button to navigate the iPod menu lists and select songs, press the OK button to begin playback. (You may also use the control wheel and
- keys on your iPod to operate it.) Press the **III** PAUSE button to pause playback, press the PLAY button to resume playback.
- Press the Har/HH button to skip to the previous. next song. Press the SEV/IN FWD button to begin fast
- resume normal playback. Press the REPEAT button to select a repeat play-

The Setup Menu

Subtitles

Select the subtitle language using up/down arrow outtons and press OK.

left/right arrow buttons to highlight the Subtitle icon. Press the up/down arrow buttons or the SUBTITLE button on the remote control to select a subtitle language.

the language using the up/down arrow buttons and press OK. The language you select will only be displayed if the disc is programmed with that language

- If the selected language is not available on a disc, the disc's language will be used
- is automatically selected when you display the subtitles or press SUBTITLE on the remote control. Otherwise, the subtitle language indicated on the disc is selected.

Select the audio language using up/down arrow To change the Audio language during plavback. press INFO twice for DVD and use the left/right arrow buttons to highlight the Audio icon. Pres the up/down arrow buttons or AUDIO on the

reverse / forward, press the PLAY button to

back mode (a single repeat or all songs repeat). Press again repeatedly to cancel this repeat playback -18-

To change the language of the subtitles during playback, press INFO twice for DVD and use the

Disc Menu

To change the language of the disc menus, select

Notes:

If the language chosen is available, it

Playing Photos

- 1. In iPod Home menu, use the \wedge , \checkmark button to select Photos and press the OK button "Please Navigate directly on your iPod" will
- appear on the screen.
 2. Use the ∧, ∨ and OK buttons to navigate the iPod menu lists and select a photo, press \triangleright PLAY button to begin playback. Press the III PAUSE button to pause playback,
- press the > PLAY button again to resume playback Press the Hard/Hard button to skip to the previous /
- next photo. 3. Press the RETURN button to go back to the

Using an iPod Touch (e.g. 1st generation) to View Photos 1. In iPod Home menu, use the \wedge . \checkmark button to

select Photos and press the OK button. "Please Navigate directly on your iPod" will appear on the screen. 2. Touch the "Photos" selection on iPod panel.



3. Touch the " \nearrow " to confirm the photo Touch the "Yes "to activate iPod's video output



Audio Setup

- You can adapt your unit to other equipment and access specific functions with the Audio Setun
- 1. Select the Audio Setup icon in the main menu using the left/right arrow buttons. Select an option using the up/down arrow but
- tons. Press OK button to move to the option's choices



Night Mode

oress OK.

You can use this function to control the different sound levels via dynamic compression. It improve the quality of the sound track at a low volume, and quiets the loudest sounds. Use the up/down arrow buttons to highlight the your preferred choice (Quiet, Moderate or Off) and

Channel Delay (Center Delay/ Rear Delay)

Basic settings have been preset for the speaker included with your unit. However, to suit the acoustic conditions in your listening room and to make the sound more effective, you may need to delay the signal coming from some of the speakers. Channel delay compensates for center or surround speakers that are closer to the listening position than the front speakers. Use the up/down arrow buttons to adjust the distance and press OK.

-23-

Limited Warrantv

original consumer purchaser and is limited to non-commercial use of the product.

One Year Parts & Labor Warranty

AVC products purchased in the United States or Canada are warranted to be free from defects in materials or workmanship for a period of one year from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at AVC's sole discretion

During a period of one year from the effective warranty date. AVC will provide, when needed, service labor to repair a manufacturing defect at its designated Service Center. To obtain warranty service in the United States or Canada, you must first call our Customer Support Center at 1-800-506-5746 or 1-877-252-6873, during the hours listed in the box below. The determination of service will be made by AVC Customer Support, PLEASE DO NOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION. New or remanufactured replacements for defective parts or products will be used for repairs by AVC at its designated Service Center for one year from the effective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility.

Packaging and Shipping Instruction

When you send the product to the AVC service facility you must use the original carton box and packing material or an equivalent as designated by **AVC**.

Your Responsibility

- You must retain the original sale receipt to provide proof of purchase. (2) These warranties are effective only if the product is purchased and operated in the United States or Canada.
- (3) Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product or to product which has been altered or modified without authorization of AVC, or to products or parts thereof which have had the serial number removed or changed.

-28-

iPod

5. Press RETURN button to end the photo viewing and go back to the previous mer Using an iPod Classic / iPod Nano to

Press the III PAUSE button to pause playback

press the > PLAY button to resume playback.

Press the KREV/ FWD button to begin fast

reverse/forward, press the > PLAY button to

4. Press the RETURN button to go back to the

previous menu, then you can select anothe

vour iPod is set to "On".

select Settings and press the OK button.

Repeat and Language settings.

Language: Select OSD language.

Make sure "TV Out" in the setting of

In iPod Home menu, use the \land , \checkmark button to

Use the A, V and OK buttons to adjust Shuffle,

Shuffle: Select from Shuffle Off, Shuffle Songs

Repeat: Select from Repeat Off, Repeat One and

3. Press the RETURN button to go back to the

Please Navigate directly on your iPod

OR

Press The [CLEAR] Key

to go back to main menu

If the above screen appears, you may need to

control the iPod Library directly from your iPod

Troubleshooting

The unit does not switch on

Make sure it is plugged in.

this device.

Clean the disc.

There is no picture

Check the connections

Press the ONI-OFE button on the remote control or

the ON/STANDBY button on the front of the unit.

The devices switches off automatically when it

is in STOP mode for more than 30 minutes with

out any user intervention. Switch it on again.

· Check that the disc can actually be played by

Check that the disc's regional code matches the

unit's regional code. This unit's regional code is 1

Select the AV input assigned to the unit on the

Replace the HDMI cable with a better one. A

Press HDMI key on remote control several time

The picture is of poor quality (with snow or

Check you have switched on the TV set.

bad HDMI cable can cause loss of video.

to toggle among different HD OUTPUT.

Insert the disc with the printed side facing up

The device switches off spontaneously

It might be impossible to read the disc.

resume normal playback.

video to play.

iPod Settings

Repeat All.

-19-

previous menu.

Note:

and Shuffle Albums.

ST

Press the HI/HH button to skip to the previous

- **View Photos** 1. In iPod Home menu, use the \wedge , \vee button to select Photos and press the OK button.
- "Please Navigate directly on your iPod" will appear on the screen. 2. Press the \wedge , \checkmark button to select "Photos", and then press the OK button to confirm
- 3. Press the $\wedge, \vee, \langle \rangle$ button to select a photo press the OK button to begin playback.



4. Press the OK button twice to activate photo showing to TV screen



5. Press the RETURN button to end the photo viewing and go back to the previous menu

- **Playing Videos** 1. In iPod Home menu, use the \wedge , \checkmark button to select Videos and press the OK button. 2. Use the \wedge . \checkmark button to select from Movies.
- Music Videos, TV Shows, Video Podcasts or Rentals, press the OK button to enter, ("Please Navigate directly on your iPod" will appear on the screen if your are using an iPod touch.)
- 3. Use the \wedge , \vee button to navigate the iPod menu lists and select a video, press the OK outton to begin playback. (You may also use the control wheel and keys on your iPod to operate it.)

The Setup Menu

Test Tone

This function is used to test and adjust the volume evel (gain) for each individual speaker channel Use CH+/www.CH-/ind button to select the speaker channel you wish to test and adjust. You'll hear a test tone coming from the speaker you select. Use the VOL+/- buttons to adjust the level to your desired setting. Press OK button to exit this function.

Video Setup

- 1. Select the Video icon in the main menu using the left/right arrow buttons. 2. Select a menu option using the up/down arrow
- buttons and press OK. 3. Use the up/down arrow buttons to highlight
- your preferred choice and press OK.



Slide Time

The Slide Time option lets you select the amount of time a picture is displayed in a slide show. The choices are 5 seconds, 10 seconds or 15 seconds.

Limited Warranty

to our Product Returns Center.

to implied warranties arising under state law.

sions may not apply to you.

www.RCAav.com

© 2009 AVC MULTIMEDIA

Model no. .

Serial no.

Type of set.

Date purchased

There is no sound or the sound is of poor quality Check the connections. Make sure the speakers are connected.

Check the connections.

Make sure the MUTE function is not on

No surround sound. • Check the speaker configuration in the Setup

menu (See Positioning speakers or Audio Set

-24

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at 1-800-506-5746, 1-877-252-6873 or

www.RCAav.com Hours: Monday-Thursday: 9am-7pm, Friday: 9am-5pm, Saturday: 9am-NOON Eastern

All warranties implied by state law, including the implied warranties of merchantability and fitness for a

particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the

in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller

with respect to the repair or replacement of any parts. In no event shall AVC be liable for consequential

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of

these warranties in any manner whatsoever. The time within action must be commenced to enforce any

obligation of AVC arising under the warranty or under any statute, or law of the United States or Canada

or any state thereof, is hereby limited to one year from the date of purchase. This limitation does not apply

This warranty gives you specific legal rights and you may also have other rights, which may vary, from

state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action

may be brought, or the exclusion or limitation of incidental or consequential damages, so the above

Product nam

Invoice no.

Dealer name .

Printed in China 811-831691W010

2009-07-15 14:55:09

For more information on other products and services, please visit our web site at

FOR SERVICE AND REPAIR, PLEASE VISIT **WWW.RCAav.com**

Specifications and external appearance are subject to change without notice

Important: Also keep your "Bill of Sale" as proof of purchase.

cception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and

mportant are responsible for any transportation, shipping or insurance relative to the return of product

or incidental damages.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com