operation.
In accordance with FCC requirements, change or modifications not expressly approved by Thomson Inc. could void the user's authority

or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product. This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception. If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:

• Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference.

• Plug the unit away from the equipment that is receiving interference.

• Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits. If these measures do not eliminate the interference, please consult your dealer or an experienced radio/felevision technician for additional suggestions.

Also, the Federal Communications Commi has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington DC 20402. Please specify stock number 004-000-00345-4 when ordering copies. This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

Connections

External Connections

The AC power plug is polarized The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Have a Blast-Just Not in your Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone are in place.

Main plug is used as the disconnect device, it shall remain readily operable and should not be obstructed during intended used. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket

THE LIGHTNING FLASH AND ARROW-HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF DANGER OUS YOUTAGE" INSIDE THE PRODUCT.	(OR BACK). NO USER- SERVICEABLE PARTS IN- SIDE. REFER SERVICING TO QUALIFIED SERVICE	POINT WITHIN TH TRIANGLE IS WARNING SIG ALERTING YOU O
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

the player only)

This player can output / input sound and picture to / from external devices. Follow the diagram below to set up the required connections. Always switch off the player before connecting to any devices.

VECTOR OF THE PROPERTY OF THE

onnect the black connector of the AV cable to the AUDIO IN/OUT jack. Alternatively, connect the ler connector of the coaxial digital output cable (included) for better sound quality.

C - connect the larger vellow connector of the AV cable to the video input jack of a TV or display unit

D & E - connect the white connector of the AV cable to the left channel audio input jack of an external audio device (e.g. active speaker systems) (Red connector to the right channel input jack). If you are using the coaxial digital output cable, connect the larger end of the coaxial digital output cable to the coaxial input jack of an external audio device (e.g. amplifier or receiver).

. C - connect the larger yellow connector of the AV cable to the video output jack of a TV or display unit.

You can easily mount the player on the back of a car seat headrest with the help of a headrest mount. See illustration below:

The two units can either watch DVDs and/or olay games at the same time. To watch DVD on the main unit and play games on the monitor unit, hook up the cable connections is illustrated.

Audio. Video and Power Cable

Sound and Picture Output A - connect the smaller yellow connector of the AV cable to the VIDEO IN/OUT jack.

Sound and Picture Input A - connect the smaller yellow connector of the AV cable to the VIDEO IN/OUT jack.

B - connect the black connector of the AV cable to the AUDIO IN/OUT iack.

• Press AV IN/OUT to enjoy sound and picture from the external device.

More Information

Game Pad

Precautions

- Water and Moisture Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like. Do not spill liquids on your Portable DVD or its components as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. To clean your Portable DVD use a soft slightly damp cloth. Always allow all the components to dry completely before using again.
- liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. Heat The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Do not expose the Portable DVD or any of its components to extreme heat or cold. Do not expose the player to direct sunlight.
- sunlight.
 Attachments Do not use attachments
- Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. AC/DC power adapter cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

Slide **ON/OFF** switch to turn on the player. The DVD logo appears on the

Screen.

Open the disc compartment door. Place the disc in the tray with the printed side up. Push back the compartment door. The player will automatically try to read and play the disc. If a menu appears, one of its options can be selected to start playing the disc. Select it using

V < > keys and press OK.

Press **SETUP** and the player's setup menu will

Select a menu icon using 〈 〉 keys. Then select one of the available options using ^ V keys. Press 〉 key to access the submenus and use ^ V keys to select an option. Press **OK** to confirm your selections. Return to a previous menu using < key.

To exit from the player menu, press SETUP

System Setup
Setup the TV system, TV type, screen format,

Rating feature is a parental guardian feature which disables playback of certain DVDs based

on their ratings from 1 (most restive) to 8 (least restrictive). DVDs that are rated abov the level you set will not play until the corr password is entered.

Selecting and Plaving Games

L,R L,R

L.R.U.D

L,R L,R,U,D

L,R,U,D

clockwise.
(3) Move upward to accelerate.
(4) Action keys: TA = ◀ , A = ✖ , TB = ▲ , B = ●

L,R,U,D

Sudoku Space Castle VR Racing

Push the Box

Super Surfing Bubble Blaster Fish Catcher

More Information

Press **START** when you see a welcome screen, the game menu will then show. Select a game by using the Control Stick / Control Pad and then press **START** to start game (some games also need to press **A** key to confirm start). Refer to the table below for game operations

screen orientation, rating, password and restore to default settings.

Plaver Setup

- Power Sources This product should be operated only from the type of power sour indicated on the marking label. If you are not sure of the type of power supply to you home, consult your product dealer or local power company.
- Precautions when watching and playing

 When using your Portable DVD player do not sit or stand too close to the screen. Play as far back from the screen as possible.

 For the best game image, look directly at the Portable DVD display on your TV screen and only operate in good light.

 Do not play if you are tired or need sleep. Always play in a well-lit room.
- Some people may experience fatigue or discomfort after playing for a long time. Be sure to take a 10 to 15 minutes break at least every hour while playing.

Specifications Model: DRC630N TV System: NTSC

TV System: NTSC
Supported Disc Formats: DVD, SVCD, VCD, CD,
HDCD, CD-R, CD-RW, DVD+/-R, DVD+/-RW
Supported File Formats: MPEG, MP3, WMA,
JPEG, Kodak Picture CD
DVD Regional Code: 1
AV Input/Dutput: Composite x 1, Coaxial digital
output (audio) x 1
Power Requirement: DC in 12V (power
adapter bundled)
Power Consumption: 28 SW (main unit) <6 SW

Power Consumption: <8.5W (main unit), <6.5W Operating Temperature: 5°C to 35°C (41°F to 95°F) Operating Humidity: 5% to 90% (no

Size: 210(W) x 160(D) x 41(H) mm (main unit). (160(D) x 28(H) mm Weight: 690g (main unit), 380g (monitor unit)

If a password has been set, you cannot change the rating without entering the correct password. To set up the password, highlight the Password part to input a 4-digit password. Use A V keys to select a number and S > keys to shift to the next digit. Press **OK** to set the password.

anguage Setup etup the language of the OSD, Audio, Subtitle

Digital Setup Setup the Audio Output mode (SPDIF OFF/RAW/

TVG Setup
TVG is the Foul Language Filtering technology to
remove offensive language from the programs
you watch. You need to purchase a license to
activate this feature (for details:
www.tvguardian.com). The license provides you
with a 5 digit activation code.

Input the activation code in this setup menu by using ^ V keys to select a number and < > keys to shift to the next digit. Press **OK** to confirm. When activation is successful, a message "TVG ACTIVATED..." shows at the bottom of the menu. Refer to More Information for futher

Action keys (4)
A (access the number list, confirm number selection), B (access option menu)
TA/A (fire)
A (start), TA/A (accelerate), TB/B (brake)
TA (confinence fire) A (fire)

TA/A (hold to set acceleration and start jump slowly), TB/B (continue the game)

TA/A/TB/B (change sequence of three jewels)
TB/B (brake), A (accelerate)

TA/A (throw the ball), TB/B (pick up the ball)

TA/A (put the chess)
TA/A (put the chess)
TA/A (exchange the blank tile with the selected one)
TA/A (confirm the selection, bombing), TB/B (change direction)

TA/A/TB/B (start next screen)

A (accelerate), TB/B (brake)


A (accelerate), B (brake

Note:
(1) L = left, R = right, U = up, D = down, use the Control Stick or Control Pad for direction control. For games with only left and right movement, you can also use the Control Wheel for control.
(2) Move leftward to rotate the center disc counter-clockwise, rightward to rotate the center disc

Video Setup Setup the brightness, contrast, hue and


PCM) and DRC (Dynamic range control)

General Controls

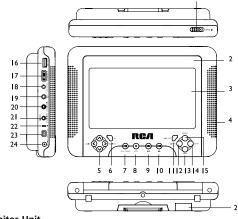

Monitor Unit

Main Unit

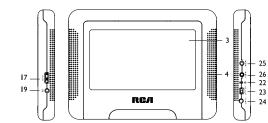

DVD Playback Ouick Start & Player Setup

- screen.

 Open the disc compartment door. Place the disc in the tray with the printed side up. Push back the compartment door. The player will automatically try to read and play the disc. If a menu appears, one of its options can be selected to start playing the disc. Select it using

 \(\times \) \(\times \) keys and press OK.

Press SIOW to stop playback.
 Note: The player stores the point where playback was interrupted. If you press PLAY/ PAUSE again, playback resumes from this point. To stop playback completely or to start from the beginning, press STOP twice.

Still Image

While the disc is playing, press and release ◀ or ▶ to go immediately to the previous or next chapter, or to the previous or next track.

Repeat Playback

Displaying Playback Information
Press DISPLAY repeatedly during playback to
show various playback information on screen.
They include current title and chapter, elapsed
playback time, remaining playback time, audio,
subtitle and angle settings.

Changing Audio Setting

Press **AUDIO** repeatedly during playback to select an audio setting. The current audio setting shows on the display briefly.

Tips: For VCD playback, press **AUDIO** repeatedly to select audio channel: mono left, mono right of stereo; press **MENU** repeatedly to select PBC mode (if available on the disc) on or off. **Changing Subtitle Setting**

Press **SUBTITLE** repeatedly during playback to select a subtitle setting. The current subtitle setting shows on the display briefly.

Accessing Disc Menu At anytime during playback, press **MENU** to access disc's menu.

Screen Saver


Playback of Various Media Formats

Connect the power adapter to the DC input jack of the main unit.

Connect the other side of the power adapter with the wall plug or car adapter.

Disconnect the adapter if the set is not used for a period of time

Playback of MP3, WMA and JPEG Files

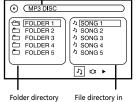

Press **OK** to play the file highlighted.
While viewing JPEG files, press **A V < >**keys will rotate or flip picture respectively.

Audio CD

16. USB Connector

output jack 22. Power indicator 23. Power switch

24. DC power input jack
25. Video input jack
26. Audio input jack

Volume control
 DC power output jack
 Earphone jack

20. Video output / input jacl

21. Audio output / input jack or coaxial digita


27. Battery socket cover (optional battery can be purchased separately)

Game Pad

A game pad is also included with 30 games. Three AA-size batteries are required to power the game pad. They are inserted into the battery compartment at the bottom of the game pad. You need to unscrew at the compartment door i order to open it.

order to open it.

Connect the video connector of the game pad cable to the VIDEO IN/OUT jack and audio connector to the AUDIO IN/OUT jack on the main unit. Press AV IN/OUT key to select the video input mode and switch on the game pad. Refer to "More Information" for game selection and

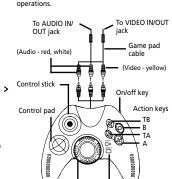

There is no sound or picture. • Check the connection to the mains socket.

There is no sound or sound quality is

- damaged. Make sure the volume is turned up.

- There is no picture or picture quality
- Make sure you have entered the correct AV input for your TV.


- Make sure the video connector is not
- It is impossible to read the disc

 Make sure the disc is inserted with the
- Make sure the disc is not warped, damaged, deformed, stained or scratched.
- Check that the disc's regional code matches that of the player. This player's regional code is 1.

Socorro, Texas 79927
 Insure your shipment for of loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.

RСЛ

user manual

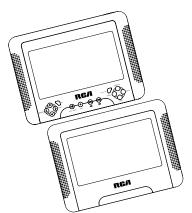

Please read this user manual carefully to ensure proper use of this product. Keep this manual for future reference. Es importante leer este manual antes de usar por vez primera su euipo.

More Information

After you have activated TVG, more settings can be defined.

TVG Mode: Select among Off, Tolerant, Moderate and Strict with increasing filtering standards.

EN/E

More on TVG

Word Subset Filtering: In addition to the main TVG mode listed above, you can turn certain word subsets on or off:

or off: '
Damn and hell - filters out variations of
"Damn" and "Hell".
Religious - filters out references to deity. To
watch religious programs, turn this word
subset off.
Sexual - filters sexually explicit languages.

CC Mode: CC Off - captions are never displayed. ON Mute (default) - captions are displayed when offensive language is being filtered. CC Continous - captions are displayed continually.

CC Channel:
To use the TVG captioning features while watching a DVD movie, your television must be capable of displaying closed captions.
Make sure that your TV CC is set to CCI or CI (closed caption on channel), and that the CC channel on your DVD player is set to CC2 (default setting).

Standing Support



Accessories

Check that all the follow

- AVP (Audio, Video ar Headrest mount x 2 Car power cable x 1 AV cable x 1
- AV cable x 1
 Carrying case x 1
 Game pad x 1
 Game pad cable x 1
 Coaxial digital output cable x 1

DVD Regional Code

Your DVD player has been designed to process regional management information that is stored on DVD discs. The regional code for your player is 1 (The U.S., U.S. Territories and Canada). Only DVD discs that have regional codes of 1 or ALL (for all regions) can be played by your player.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited consumer uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

U.S. Limited Warranty What your warranty covers: • Defects in materials or workmanship. For how long after your purchase: • 90 days from date of purchase - unit exchange, which includes parts and labor. 91 days to 1 year from date of purchase - unit

lightning damage. **Product Registration:**• Please complete and mail the Product

• Please complete and mail the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty COMPRADE hange, which includes parts only; you pay exchange, which includes parts only, you per the labor. What we will do: Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period. Proof of purchase in the form of a bill of sale

NO YERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESC OR IMMILED WARDANT ON THE

product. We recommend using the original carton and packing materials. Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to: Thomson Inc., Product Exchange Center, 11721 B Alameda Avenue, Scorpt Tays 39977

or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

rental little, proof con-required.

How to make a warranty claim:

• Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original

damage or loss en route to Thomson.

Pay any charges billed to you by the
Exchange Center for service not covered by
the warranty.

A new or refurbished unit will be shipped to

What your warranty does not cover:

• Customer instruction. (Your Owner's Man Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
Installation and set-up service adjustments.
Batteries.
Damage from misuse or neglect.





Press STOP to stop playback.

Accelerated Play

While the disc is playing, press and hold ◀ or

→ one or more times to vary the speed and
direction of the accelerated play. Press PLAY/
PAUSE to resume normal playback.

Changing Chapter / Track

During playback, press **REPEAT** repeatedly to select repeating a chapter or a title (DVD diccs)

Press **RESET** anytime during a game to stop playing. Switch off the game pad, discor pad cable and press **AV IN/OUT** key on the DVD main unit to resume to normal playl

After the Game (4)
Exit icon: return to game menu
TA/A: continue the game
TB/B: return to main menu

Return to main menu autom Reset: return to main menu TA/A: continue the game TA/A: continue the game Continue the game automati Reset: return to main menu

Return to main menu automatically TA/A: continue the game Continue the game automatically TA/A: continue the game

TA/A: continue the game
TA/A: continue the game
TB/B: continue the game
TA/A: continue the game

TA/A: continue the game
TA/A/TB/B: continue the game
Continue the game automatica
Reset: return to main menu

Continue the game automatically TAVA: continue the game Continue the game Continue the game automatically

Playback via USB Connector

MP3, WMA and JPEG files stored on a USB device can be played via the USB connector on the left side of the main unit. Playback operations are the same as files on discs as shown in previous section. When an USB device is connected or playback is stopped, a selection menu appears on the screen for playback from USB or disc.

(Video - yellow) Action kevs Act. The B TA Start and reset keys

Troubleshooting Tips

The unit is not working. • Turn off the power, and then turn it on

Make sure power cord is properly Make sure the car DC power voltage is

- Make sure the power switch is on. Make sure the power outlet is
- Make sure the volume is not set too
 low.
- Make sure the audio jacks are securely Make sure the audio connector is not
- Make sure you have set the player's audio settings correctly.
 Make sure you have entered the correct AV input for your TV.
- Make sure that the AV in/out mode is properly selected.
 Make sure the video jacks are securely connected.





Connecting the Monitor Unit with the Main Unit Connect the AVP (Audio, Video and Power) cable to the AUDIO IN/OUT, VIDEO IN/OUT and DC OUT jacks of the

Connect the other end of the AVP cable to the AUDIO IN, VIDEO IN and DC IN jacks of the monitor unit.

General Controls

Opens the disc compartment door

Menu navigation keys (up, down, left and right), the right key also selects subtitle setting, the left key also selects audio setting

Skips backward a chapter / track; searches backward

12. Selects information to be displayed

10. Skips forward a chapter / track; searches

Connections

Disc compar LCD display

Confirms selections Starts and pauses playback Stops playback

13. Enters disc's menu

14. Enters player's setup menu 15. Selects repeat mode during playback

Connecting the Power

Turn on the powe

YOUR player also supports playback of MP3, WMA and JPEG files. When a disc is loaded, the player will automatically search for supported files and begin playback automatically. During playback of MP3 and WMA files and stop mode of JPEG files, the following screen will appear:

Name of current file



Control wheel

Make sure you have set the player's video

- Check that the disc format is supported by

You have forgotten your rating

Enter 9688 in the password menu to clear the memory. Keep this master password out of the reach of children. Refer to "Player Setup - System Setup" for details.

FXPORTER Thomson Inc.
P.O. Box 1976
Indianapolis, IN 46206 - 1976
©2006 Thomson Inc.
Trademark(s) ® Registered

www.rca.con Printed in China / Impreso en China

DRC630N



DVD Copy Protection

Products which have been modified or incorporated into other products.
 Products purchased or serviced outside the USA.
 Acts of nature, such as but not limited to

for warranty coverage.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY

WARRANTY APPLICABLE TO THIS PRODUCT. ALL

OTHER WARRANTIES, EXPRESS OR IMPLIED

(INCLUDING ALL IMPLIED WARRANTIES OF

MERCHANTABILITY OR HTNESS FOR A

PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED

NO VERBAL OR WRITTEN INFORMATION GIVEN

 
BY THOMSON INCL. ITS ACCENTS OR BABIL OVEES PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY DEFIOL SET EXCEPTLY ADVICE.

How state law relates to this warranty: Some states do not allow the exclusion nor dimitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you also may have other rights that vary from

If you purchased your product outside the USA:

• This warranty does not apply. Contact your dealer for warranty information.



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com