



Cat. No. 43-1952

43-1952 Dual Ear Over-the-Head Headset with Microphone Mute, Volume Control and Noise Cancellation

Your RadioShack Dual Ear Over-the-Head Headset with Microphone Mute, Volume Control and Noise Cancellation for Cordless or Cellular Phones lets you make and receive phone calls while keeping your hands free to do other things. The ultra-light headset connects easily to any cord-less, PCS, or cellular phone that has a $\frac{3}{32}$ -inch (2.5 mm) jack.

Your headset includes these features:

Dual Ear Piece — lets you hear the voice on both ear in a audibly balance at the same time

Adjustable Microphone Boom — lets you precisely place the microphone to suit left-handed or right-handed.

Adjustable Headband — so you can fit the headset comfortably.

Lapel Clip — lets you securely anchor the headset's modular cord to your clothing to keep the cord out of the way as you move.

On-cord Volume Control and mute Button — lets you easily adjust the incoming sound source volume level and mute control for microphone.

Noise Canceling Microphone — minimize surrounding noise and unnecessary wind sound while you talk to the microphone.

Replaceable Microphone Sponge and Ear-muff — lets you easily replace for hygiene purpose.

CONNECTION

Plug the $\frac{3}{32}$ -inch (2.5 mm) mini plug into a cordless, PCS, or cellular phone's $\frac{3}{32}$ -inch (2.5 mm) jack.

WEARING THE HEADSET

1. Place the headset on your head with the earpiece over either ear.
2. Adjust the headset band until it rests comfortably on your ear and the top of your head. If the headset is loose, remove it and slide it inward slightly to tighten it. If the headset is tight, gently pull the headset band out to loosen it.
3. Hold the headset in place and adjust the microphone boom until it is about even with your chin. Slide it in or out or rotate it, if needed. Experiment until you find the most comfortable position.
4. Clip the cord's lapel clip to your clothing, leaving enough slack in the cord so you can move your head without pulling the headset.
5. Adjust the sound source's volume to a point between its middle and maximum levels, then adjust volume on the headphone's cord to a comfortable level.

(illus.)

6. Turn Mute to **ON** on the headset's cord to turn off the microphone, or turn Mute to **OFF** to turn it on.

(illus.)

© 1998 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

Listening Safety

To protect your hearing, follow these guidelines when you use the headset.

- Set the phone's volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

 
 
 
CARE AND MAINTENANCE

Your RadioShack Dual Ear Over-the-Head Headset with Microphone Mute, Volume Control and Noise Cancellation is an example of superior design and craftsmanship. The following suggestions will help you care for your headset so you can enjoy it for years.


- Keep the headset dry. If it gets wet, wipe it dry immediately.
- Handle the headset gently and carefully. Don't drop it.
- Use and store the headset only in normal temperature environments.
- Keep the headset away from dust and dirt.
- Wipe the headset with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the headset's internal components can cause a malfunction and might invalidate your headset's warranty. If your headset is not performing as it should, take it to your local RadioShack store for assistance.

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102



 RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102



Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>