




5 DVD Home Theater in a Box with Wireless Rear Speakers

QUICK START

Refer to your Owner's Manual for complete instructions.

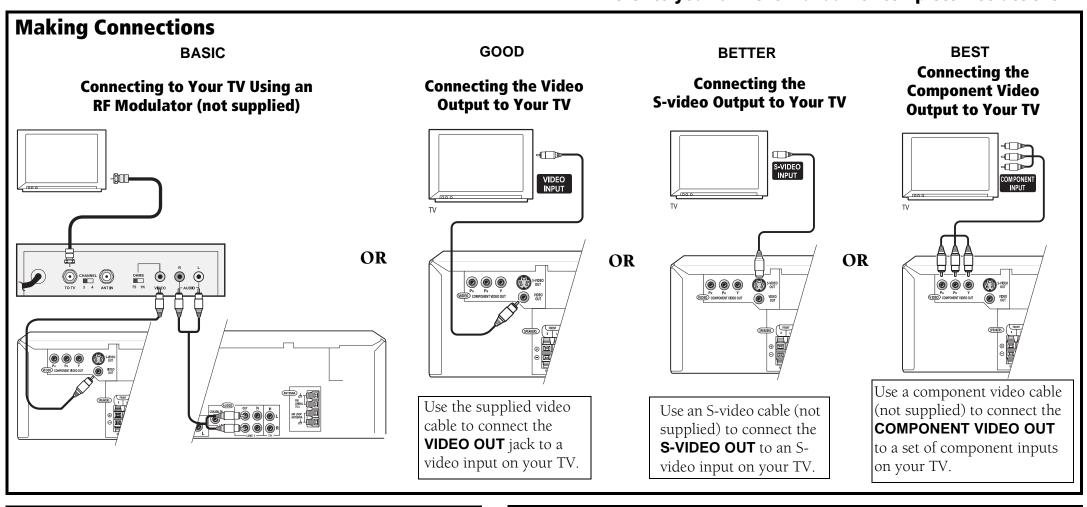


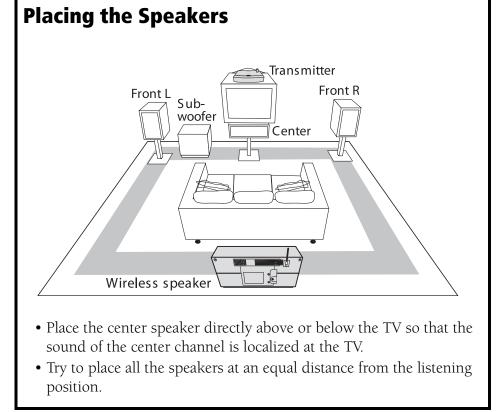

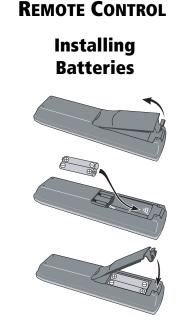


The remote requires two AA batteries (not supplied).

Listening to TV Audio Through the System

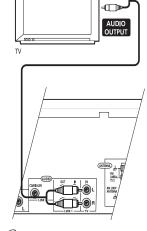

Connect a stereo audio cable (not supplied) from the audio outputs of your TV to the **TV IN** jacks on this system.

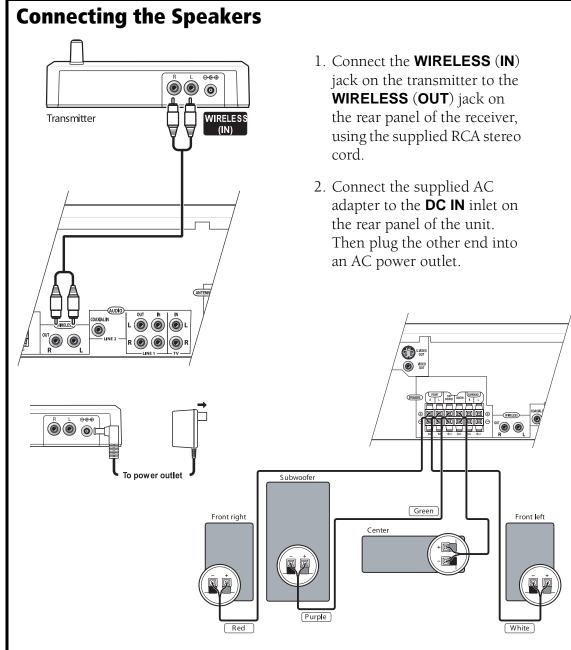

- Make sure you disconnect power from all components.
- The wireless mode is the default setting.
- Connect each speaker using the color-coded speaker cable. Match them to the colored labels above the speaker terminals.
- Do not connect any of the supplied speakers to any other amplifier. This may result in malfunction or fire.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com