

Uni-Directional Dynamic Microphone

33-3001 

Step One

Operation

1. Plug your microphone's 3-pin (XLR) plug into the corresponding end of the supplied cord. To prevent feedback, be sure the microphone is turned off before connecting it to a PA or recording system.
2. Plug the cord's other end (1/4-inch plug) into the microphone jack of your PA or recording system.
3. Turn on your PA or recording system.
4. Set the microphone's **ON/OFF** switch to **ON**. When you finish using the microphone, set **ON/OFF** to **OFF**.

 
Step Two

Using the Microphone Holder

To use the supplied microphone holder with your microphone, screw the holder down onto the top of a microphone stand. Then slide the microphone into the larger end of the holder until it is secure.


What's Included

- Microphone
- Microphone Holder

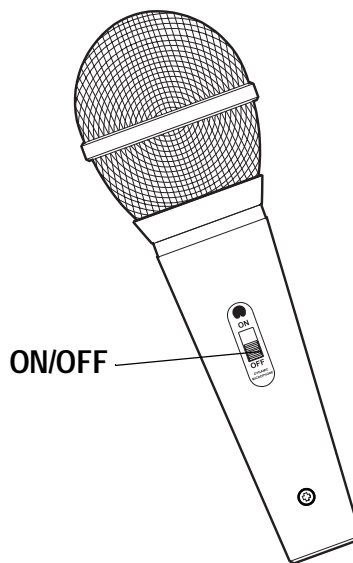


Step Three

 Internal Connections

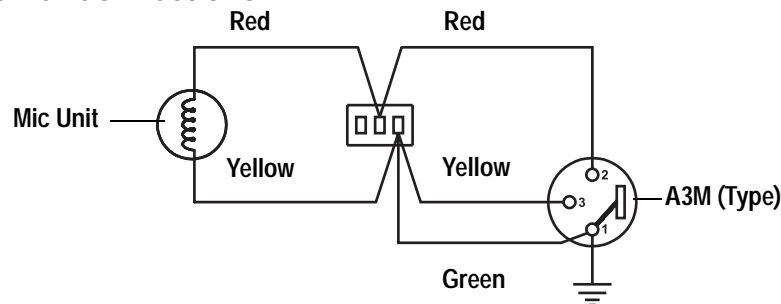

Frequency Response Curve

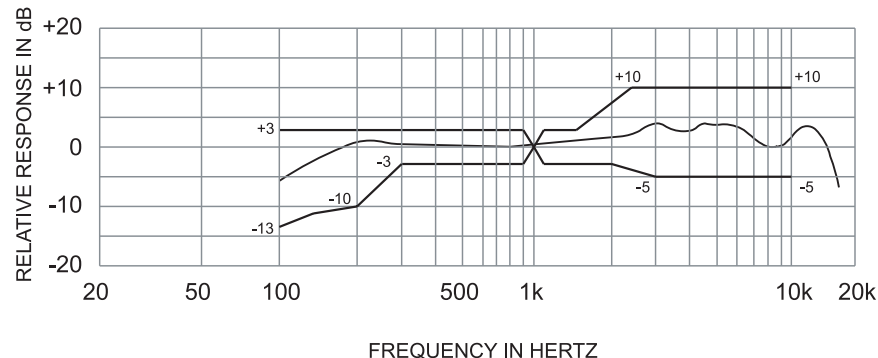 

Specifications

Type Dynamic
 Directivity Unidirectional
 Impedance 500 Ohms \pm 30%
 Sensitivity (at 1 kHz) -72dB \pm 3dB
 Frequency Response 50–16,000 Hz
 Cable (Length \times Diameter) 16 ft \times 1/4 in
 (4.87 m \times 6.35 mm)
 Plug 1/4-in (6.35mm) Phono
 XLR Connector (Cable Connection)
 Included Accessory Microphone Holder
 Weight (excluding cable)..... 9.8 oz
 (280g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited 90-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for 90 days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN WARRANTY CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state
 RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2003, RadioShack Corporation.
 All Rights Reserved.
 RadioShack and RadioShack.com are trademarks
 used by RadioShack Corporation.

33-3001
 Printed in Taiwan
 06A03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>