

Rockin' PT Cruiser


60-4326

OWNER'S MANUAL — Please read before using this equipment.

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

 - ⚠ — Warning
- ! — Important
- ⚡ — Caution
- 💡 — Hint
- 📄 — Note

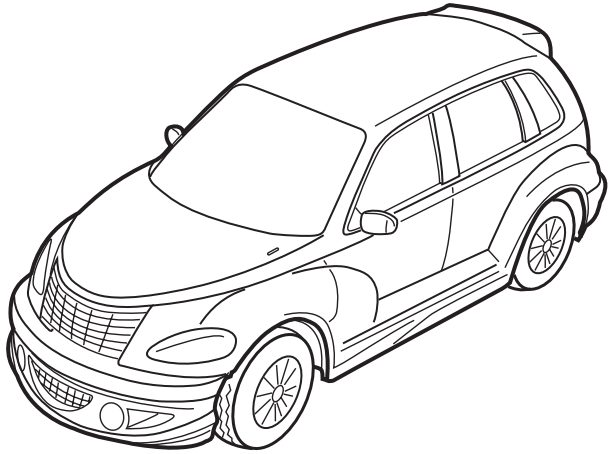

Your RadioShack Rockin' PT Cruiser is built to handle the road with style, whether the road is the hallway in your house or the sidewalk outside. Built to $1/12$ scale, your Rockin' PT Cruiser can reach speeds of up to 650 feet per minute. This vehicle can cruise the sidewalks of your neighborhood, speeding forward or backward, vibrating with music and blinking colored lights to dazzle your friends. !

⚠ WARNING ⚠

Dispose of old batteries promptly and properly. Do not burn or bury them.

⚡ CAUTION ⚡

- Use only a fresh battery / battery pack of the required size and recommended type.
- If you will not be using the car for a week or more, remove the battery from the transmitter and the battery pack from the car. Batteries can leak chemicals that can damage electronic parts.
- Never leave dead or weak batteries in the car or the transmitter.

INSTALLING BATTERIES

You need the following items (not supplied) to power your Rockin' PT Cruiser: ⚠ ⚡

- one 9V battery for the transmitter
- at least one 9.6 volt rechargeable battery pack for the car
- one battery pack charger



RadioShack®

www.radioshack.com™

Download from Www.Somanuals.com. All Manuals Search And Download.

© 2002 RadioShack Corporation.
All Rights Reserved.

RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

CAUTION

- Use only the recommended battery pack and charger.
- Do not charge or recharge the battery pack while it is in the car.
- After you charge or recharge the battery pack (see the charger's manual for the charging time), disconnect it from the charger. Overcharging the battery pack could damage it.
- When you disconnect the battery pack from the charger, do not pull on the connector's wires. You might damage the battery pack.

! IMPORTANT !

 
The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery



indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-SHACK (1-800-843-7422) for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.

IN THE TRANSMITTER

The transmitter requires one 9-volt battery. For the best performance and longest life, we recommend a RadioShack alkaline battery.

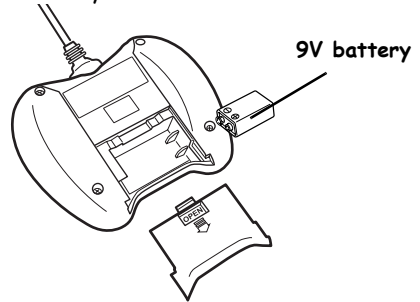

1. To remove the battery compartment cover, press the tab and slide the cover in the direction of the arrow.
2. Place a battery in the battery compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the cover.

 
When the transmitter's range decreases, replace its battery.

IN THE CAR


The car requires one 9.6-volt rechargeable battery pack for power. You must charge a rechargeable battery pack before you can use it to power your car. To charge it, follow the battery charger's instruction. **!**

Battery Compartment

ON/OFF

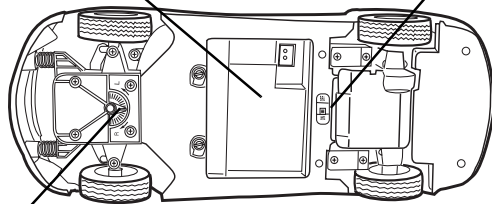

 L/R — See "Adjusting Wheel Alignment" on Page 4.



9.6 V Battery

Bottom View

 
Compartment Cover

1. Slide ON/OFF on the bottom of the car to OFF.

2. Use a coin to turn the battery compartment cover's latches clockwise until they stop. Then lift off the cover.
3. Put the battery pack in the compartment with the battery pack's connector on the same side as the car's matching connector.
4. Attach the battery pack's white connector to the car's matching connector. Do not force them! They only fit together one way.
5. Replace the cover and turn the latches counterclockwise until they stop. Be sure the connectors and wires do not touch the car's moving parts. If the car loses power or does not respond to the transmitter, recharge or replace the battery pack.

DRIVING THE ROCKIN' PT CRUISER

1. Slide ON/OFF on the car to ON.
2. Use the transmitter's levers to drive and steer the Rockin' PT Cruiser.

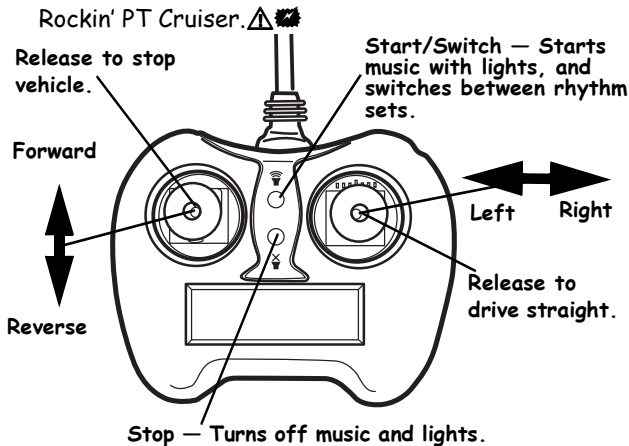

3. Use the transmitter's buttons to start, stop, and switch between two music rhythm sets, which include vibrations, blinking lights, and blinking headlights.

When you finish playing with the car, slide ON/OFF on the car to OFF.

NOTE

Occasionally, let the battery pack fully discharge before recharging it. Otherwise the battery pack may lose its ability to fully charge.

WARNING

This car can reach much higher speeds than many other radio-controlled cars. Be careful to avoid high-speed collisions with people and objects.

CAUTION

If the Cruiser gets stuck under an object, immediately release the control levers on the transmitter and retrieve it.

HELPFUL HINTS

Running your Cruiser continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your Cruiser's battery pack dies, let the racer cool at least 10 minutes before installing a new or newly charged battery pack.

If the Cruiser's motor runs but it does not respond to the transmitter, move closer to the racer and try again.

If someone uses a CB nearby, it might interfere with control of the racer. If this happens, move the racer away from the CB.

You cannot operate your Cruiser near devices with transmitters that use the same frequency as your racer (27 MHz or 49 MHz). Check your Cruiser's box to see which frequency your racer uses.

If the Cruiser moves slowly and you just installed a fully charged battery pack, check the wheel mechanisms for lint, thread, hair, or dust.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99



ADJUSTING WHEEL ALIGNMENT

If the Rockin' PT Cruiser does not drive in a straight line when you release the right control lever, adjust the wheel alignment control (between the front wheels, underneath the car). Slide the control toward L (left) if the car is pulling to the right, or toward R (right) if the car is pulling to the left.

FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	Rockin' PT Cruiser
Model:	60-4326
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your vehicle.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>