



Thank you for purchasing your Jeep® Wrangler® Sport from RadioShack.



what's included

Jeep® Wrangler® Sport Transmitter
Battery Adapter
User's Guide

Please read this user's guide before installing, setting up and using your new product.
www.radioshack.com

Jeep® and the Jeep® grille design are registered trademarks of DaimlerChrysler Corporation. Jeep® Wrangler® Sport and its trade dress are used under license from DaimlerChrysler. ©DaimlerChrysler Corporation 2004.



Product:	Jeep® Wrangler® Sport
Model:	60-4382
Responsible Party:	RadioShack Corporation 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200




installing your batteries

You will need...

- Four AA batteries, or
- One 6V rechargeable battery pack for the vehicle (neither included), and
- One 9V battery for the transmitter (not included)

in your vehicle

- Turn your vehicle off.
- Insert four AA batteries in the supplied adapter, matching the polarity symbols (+ and -) marked inside.
- Place the adapter inside the compartment, matching the polarity (+ and -) symbols marked on your vehicle.
- Use a coin to secure the latch and lock the adapter or battery pack in place.

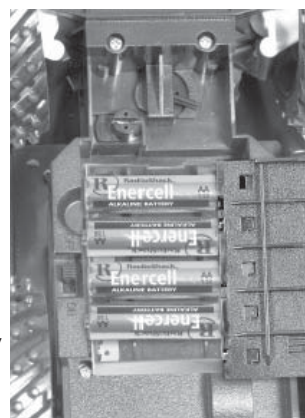

If you are using a 6V rechargeable battery pack:

Place the battery pack in the compartment, matching the polarity (+ and -) marked on your vehicle.



Using alkaline batteries slightly decreases the speed of your vehicle.

in your transmitter

- Turn your transmitter off.
- Remove your battery compartment cover.
- Insert the 9V battery in the compartment, matching the polarity (+ and -) marked inside.
- Replace the cover and snap it in place.



Important: The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-SHACK (1-800-843-7422) for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.



driving your vehicle

- Turn your transmitter and vehicle on.
- Use the control levers to drive your vehicle.

When you finish driving your vehicle, turn your vehicle and transmitter off.

Left Control Lever

Right Control Lever



Stop



Straight

care and maintenance

- Keep your vehicle dry; if it gets wet, wipe it dry immediately.
- Use and store your vehicle in room temperature environments only.
- Handle your vehicle carefully; do not drop it.
- Do not drive your vehicle through puddles or mud, in the rain, snow or sand.
- Wipe your vehicle with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with the vehicle's internal components can cause a malfunction and might invalidate its warranty, and void your FCC authorization to operate it.

the FCC wants you to know

Your vehicle might cause TV or radio interference even when it is operating properly. To determine whether your vehicle is causing the interference, turn off your vehicle and transmitter. If the interference stops, your vehicle or transmitter is causing it. Try to eliminate the interference by:

- moving your vehicle away from the receiver.
- contacting your local RadioShack store for help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any other way other than as detailed by the User's Guide, could void your authority to operate your vehicle.

battery notes

- Do not use batteries of different types, capacities or chemistry.
- Never leave dead or weak batteries in your transmitter or vehicle.
- If you do not plan to use your vehicle or transmitter for several days, remove all batteries from them. Batteries can leak chemicals that may destroy electronic parts.
- Before you can use your battery pack, you must charge it with a battery pack charger. You may purchase a battery pack charger from your local RadioShack store.
- Do not charge the battery pack while it is in your vehicle.
- Overcharging the battery pack could damage it. Disconnect your battery pack from the charger after you finish charging it.
- If your vehicle runs slowly or does not move at all, replace the batteries in your adapter or recharge your battery pack.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

limited go-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations
200 Taylor Street, 6th Floor, Fort Worth, TX 76102
04/04

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>