 


# Mini Transbot

60-4307

OWNER'S MANUAL — Please read before using this equipment.

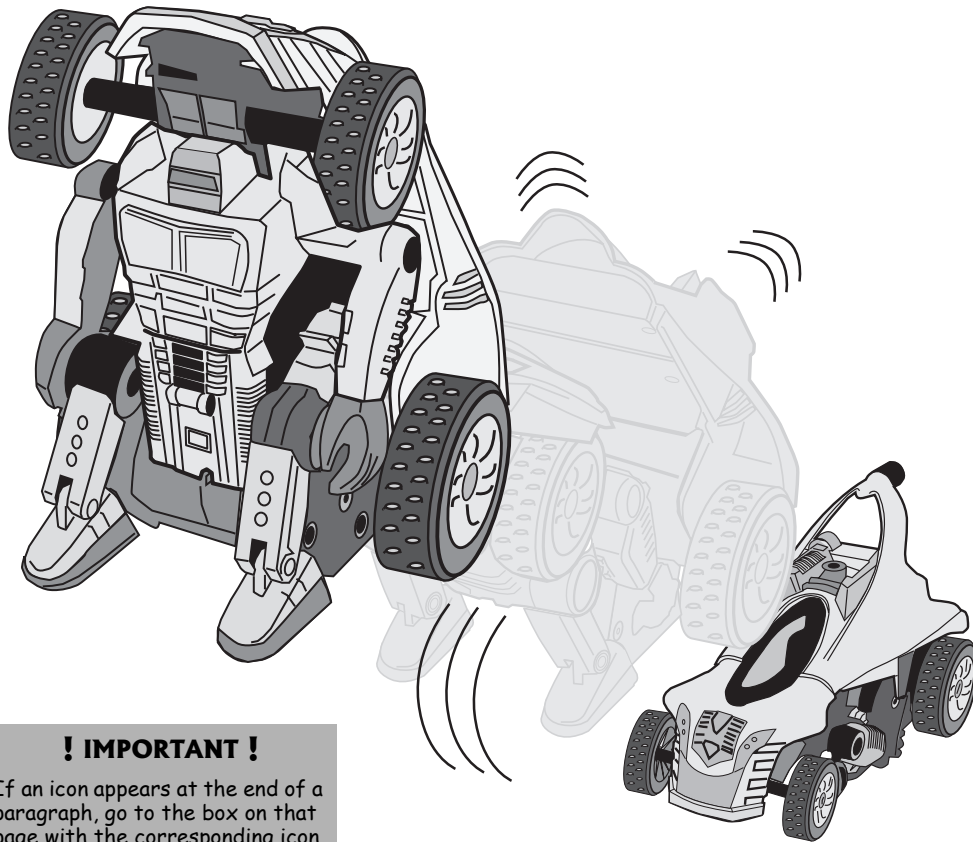

## ! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

- |             |               |
|-------------|---------------|
| ⚠ — Warning | ! — Important |
| ⚡ — Caution | 💡 — Hint      |
| 📄 — Note    |               |

## ! IMPORTANT !

This vehicle is not recommended for children under the age of 4 years!

How cool! Your RadioShack Mini Transbot does a special transforming stunt. The car changes into a mini robot! The Mini Transbot moves forward as a car, and automatically transforms into a robot to spin in reverse. The Mini Transbot comes in two frequencies (27 MHz & 49 MHz), so you and a friend can both operate one. Check your Mini Transbot box to see which frequency your toy uses.!



**RadioShack**®

www.radioshack.com<sup>SM</sup>

© 2002 RadioShack Corporation.

All Rights Reserved.

RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

### ⚡ CAUTION ⚡

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the car or the transmitter.
- If you will not be using the toy for a week or more, remove the batteries from both the transmitter and the car. Batteries can leak chemicals that can damage electronic parts.

### ⚠ WARNING ⚠

Dispose of batteries promptly and properly; do not bury or burn them.

### 📌 NOTE 📌

#### ***In the Transmitter***

Situate the ribbon across the compartment and under the battery, so that the ribbon remains accessible. This placement makes removing the 9V battery as simple as pulling the ribbon.

#### ***In the Mini Transbot***

The compartment springs push the batteries over the edge of the opening. Press the batteries down flush to help in closing the compartment cover.

## INSTALLING BATTERIES

### IN THE TRANSMITTER

The transmitter requires one 9-volt battery (not supplied). For the best performance and longest life, we recommend a RadioShack alkaline battery. ⚡

 
1. Press and slide the battery compartment cover off the transmitter.
2. Place a battery in the compartment according to the polarity symbols (+ and -) marked inside. 📌
3. Slide the cover into place. Be sure it snaps shut.

When the transmitter's range decreases, replace its battery. ⚠

### IN THE MINI TRANSBOT

You need two AA batteries (not supplied) to power your Mini Transbot. For the best performance and longest life, we recommend RadioShack alkaline batteries.

1. Slide OFF/ON switch on the back of the toy to OFF.
2. Turn the battery compartment latch clockwise until it stops.

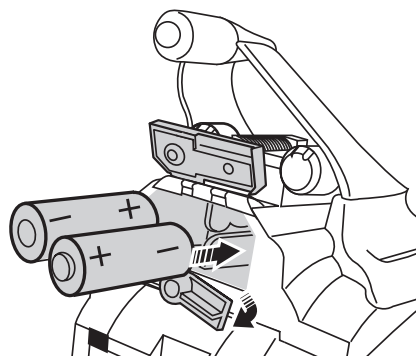


3. Install the batteries in the compartment as indicated by the polarity symbols (+ and -) marked on the outside of the cover.
4. To secure the cover, press down on the cover, and turn the latch counterclockwise until it stops. 📌

If the toy moves slowly or not at all, replace the batteries.


## DRIVING THE MINI TRANSBOT

 Slide OFF/ON at the rear of the Mini Transbot to ON. ⚠!


The transmitter has a double-sided control button.

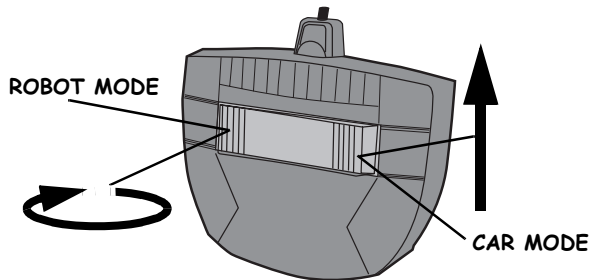

 Hold down the right side of the button to transform the robot into a car. The car only moves forward in a straight line.💡

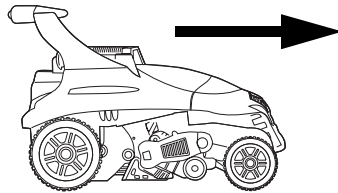

 Hold down the left side of the button to transform the car into a robot. The robot spins clockwise in a circle.

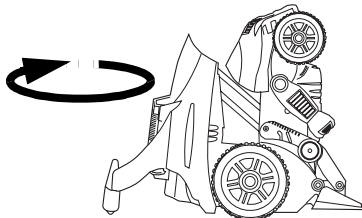

To drive the Mini Transbot in a different direction, spin the robot until it faces the direction you want it to go. Hold down the right side of the button to move the vehicle in that direction.

The Mini Transbot stops when you release the button.

When you finish driving the Mini Transbot, slide OFF/ON switch to OFF.

### ⚠ WARNING ⚠

Never play with the Mini Transbot in the street.

### ! IMPORTANT !

It is recommended to run this product on a concrete surface, because it may scratch wooden surfaces when spinning in robot mode.

### 💡 HELPFUL HINTS 💡

- The Mini Transbot will perform better on a smooth hard surface, such as a cement floor.
- If the toy's motor runs but the MiniTransbot does not respond to the transmitter, move the transmitter closer to the Mini Transbot and try again.
- Running your Mini Transbot continuously for long periods causes wear and tear on the motor. To keep heat levels down, when the batteries run down, let the Mini Transbot cool at least 10 minutes before installing fresh batteries.
- If the vehicle moves slowly and you have installed fresh batteries, check the vehicle's mechanism. Remove any lint, thread, hair, or dust you see.
- If someone uses a CB nearby, it might interfere with control of the Mini Transbot. If this happens, move the Mini Transbot and its transmitter away from the CB.
- You cannot operate your Mini Transbot near devices with transmitters that use the same frequency (27 or 49 MHz). Check the Mini Transbot's box to learn the frequency of your Mini Transbot.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street,  
6th Floor, Fort Worth, TX 76102

12/99

## CARE

Keep the radio-controlled vehicle dry. If it gets wet, wipe it dry immediately. Use and store the vehicle only in normal temperature environments. Handle the vehicle carefully. Do not drop it. Keep the vehicle away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

## SERVICE AND REPAIR

If your vehicle is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the vehicle's internal components can cause a malfunction, might invalidate its warranty and void your FCC authorization to operate it.

## FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Product: Mini Transbot

Model: 60-4307

Responsible Party: RadioShack  
100 Throckmorton  
Fort Worth, TX 76102

Phone: 817-415-3200

RadioShack Corporation  
Fort Worth, Texas 76102

60-4307  
05A02  
Printed in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>