

# '64 Impala Lowrider


60-4325

OWNER'S MANUAL — Please read before using this equipment.

## ! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

 - ⚠ — Warning
- ! — Important
- ⚡ — Caution
- 💡 — Hint
- 📄 — Note

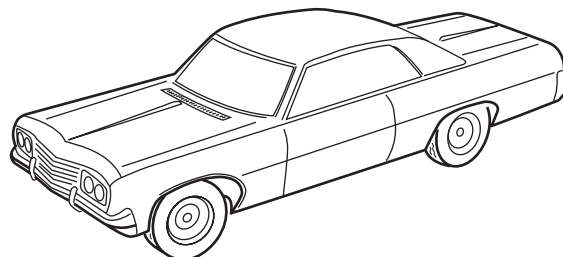

Thank you for purchasing the RadioShack '64 Impala Lowrider. It is built to handle the road with style, whether indoors or outside. Built to  $1/12$  scale, your vehicle can reach speeds of up to 650 feet per minute. You can cruise the sidewalks of your neighborhood, speeding forward or backward, rocking from side to side, bouncing the rear of the car up and down, and turning sharp corners while tilting the car left or right. Your vehicle will be the primo ride on your block!

You need the following items (not supplied) to power your Impala Lowrider:

- One 9V battery for the transmitter
- One 9.6 volt rechargeable battery pack for the car
- One battery pack charger

## ⚠ WARNING ⚠

Dispose of old batteries promptly and properly. Do not burn or bury them.

## ⚡ CAUTION ⚡

- Use only a fresh battery/battery pack of the required size and recommended type.
- If you will not be using the car for a week or more, remove the battery from the transmitter and the battery pack from the car. Batteries can leak chemicals that can damage electronic parts.
- Never leave dead or weak batteries in the car or the transmitter.

## INSTALLING BATTERIES

### IN THE TRANSMITTER

The transmitter requires one 9-volt battery. For the best performance and longest life, we recommend a RadioShack alkaline battery. ⚠ ⚡



**RadioShack**®

www.radioshack.com<sup>SM</sup>

© 2002 RadioShack Corporation.

All Rights Reserved.

RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

### NOTE

- Occasionally let the battery pack fully discharge before recharging it. Otherwise the battery pack may lose its ability to fully charge.
- Be sure the connectors and wires do not touch the car's moving parts. If the car loses power or does not respond to the transmitter, recharge the battery pack.

### CAUTION

- Use only the recommended battery pack and charger.
- Do not charge the battery pack while it is in the car.
- After charging the battery pack, disconnect it from the charger. Overcharging the battery pack could damage it.
- When you disconnect the battery pack, do not pull on the connector's wires. You might damage the battery pack.

 
### ! IMPORTANT !

The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-SHACK (1-800-843-7422) for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.



1. Slide ON/OFF on the side of the transmitter to OFF.
2. Press the tab on the battery compartment cover and open the cover.
3. Place a battery in the battery compartment according to the polarity symbols (+ and -) marked inside.
4. Close the cover. When the transmitter's range decreases, replace its battery.

ON/OFF

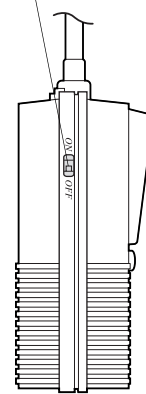


## IN THE CAR

The car requires one 9.6-volt rechargeable battery pack for power. You must charge a rechargeable battery pack before you can use it to power your car. To charge it, follow the battery charger's instructions. ✓


1. Slide ON/OFF on the bottom of the car to OFF.
2. Use a coin to turn the battery compartment cover's latches clockwise until they stop. Then lift off the cover.
3. Place the battery pack in the compartment with the battery pack's connector on the same side as the car's matching connector.

 R/L Wheel Alignment

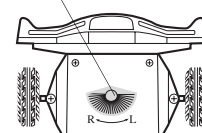

Battery Compartment

 
ON/OFF

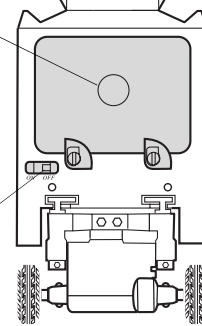

4. Attach the battery pack's white connector to the car's matching connector. Do not force them! They only fit together one way. ✓
5. Replace the cover and turn the latches counterclockwise until they stop. !

## DRIVING THE VEHICLE

 1. Slide **ON/OFF** on the car and transmitter to **ON**. ⚠
2. Use the transmitter's controls to drive and steer the car. ⚠

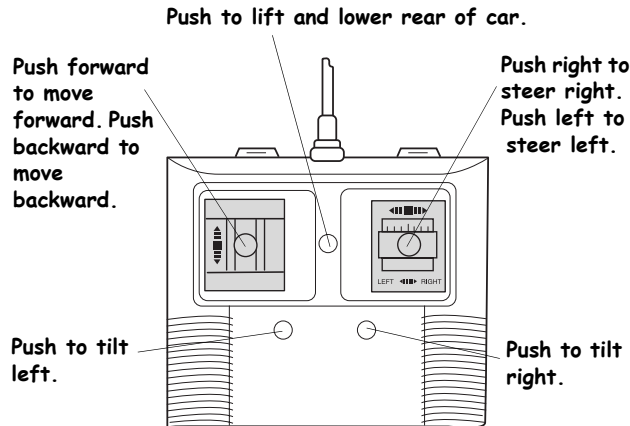

3. Slide **ON/OFF** on the car and transmitter to **OFF** when you finish playing.

## ADJUSTING THE WHEEL ALIGNMENT

If the vehicle does not drive in a straight line when you release the right control lever, adjust the wheel alignment control. Slide the control toward **L** (left) if the car is pulling to the right, or toward **R** (right) if the car is pulling to the left. 💡

## CARE

Keep the vehicle dry; if it gets wet, wipe it dry immediately. Use and store the vehicle only in normal temperature environments. Handle the vehicle carefully; do not drop it. Keep the vehicle away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

### NOTE

To perform the coolest stunts, your Impala Lowrider needs to be running at high speed.

### WARNING

This car can reach much higher speeds than many other radio-controlled cars. Be careful to avoid high-speed collisions with people and objects.

### CAUTION

If the Impala Lowrider gets stuck under an object, immediately release the transmitter's control levers and retrieve the car.

### HINT

- Running your car continuously for long periods generates high heat levels. Heat causes the most wear and tear on the motor. To keep heat levels down, when your vehicle's battery power dies, let the car cool at least 10 minutes before installing a newly charged battery pack.
- If someone uses a CB nearby, it might interfere with control of the vehicle. If this happens, move the car and transmitter away from the CB.
- You cannot operate your vehicle near devices with transmitters that use the same frequency as the vehicle (either 27 MHz or 49 MHz).
- Check your car's box to see which frequency it uses.
- If the car moves slowly, and you just installed a fully charged battery pack, check the wheel mechanisms for lint, thread, hair or dust.



### NOTE

#### Service and Repair

If your vehicle is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the vehicle's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

#### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company- owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

## FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	'64 Impala Lowrider
Model:	60-4325
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200



## THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your vehicle.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

RadioShack Corporation  
Fort Worth, Texas 76102

60-4325  
05A02  
Printed in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>