


Universal GPS AC Adapter

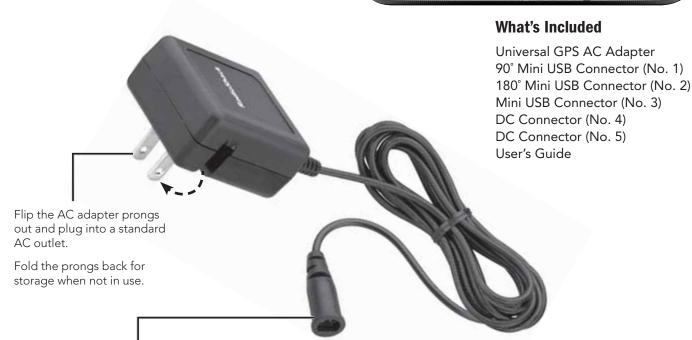

Connect the correct connector plug to the GPS AC adapter then insert it into your GPS system's power jack.

Notes:

- Refer to the table and number marked on the connector to determine which to use with your GPS system.
- Be sure to use the connector that meets your GPS system's specifications. Using the wrong connector can damage the system.
- Remove the connector plug with the GPS AC Adapter when disconnecting your GPS system.

www.radioshack.com

O

Protect the environment by recycling used electronics. Go to <u>www.ecyclingcentral.com</u> to find a recycle location near you.

No.	Connector	Compatible GPS Model No.
1	90° Mini USB Connector	Garmin Nüvi 200, 200W, 250, 250W, 260, 270, 300, 310, 350, 360, 370, and 660; StreetPilot i2, i3, and i5
2	180° Mini USB Connector	Garmin eTrex Legend Cx, Vista Cx, and Venture Cx; Edge 205 and 305; Forerunner 301; Mio C220, C230, C310X, C320, C520, C710, C720t, H610, Moov 200, and Moov 300; Navigon 2100, 5100, and 7100; Navman F15; Magellan Maestro 3250, and 4250; Roadmate 1200
3	Mini USB Connector	TomTom ONE and ONE XL; Navman N40i
4	DC Connector (4.0mm O.D, 1.7mm I.D.)	TomTom 300, 510, 710, and 910; Sony U73T, and U83T
5	DC Connector (3.2mm O.D, 0.9mm I. D.)	Magellan Roadmate 800, 860T, 2000, 2200T, 3000T, 3050T, and 6000T; Maestro 3100, 3140, and 4040

© 2008. *RadioShack* Corporation.

All rights reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

06A08 20-198

RadioShack Customer Relations 300 RadioShack Circle, Fort Worth, TX 76102

Thank you for purchasing your Universal GPS AC Adapter from *RadioShack*. You can power or charge virtually any GPS system at any AC outlet. Please read this user's guide before installing, setting up and using your new GPS AC adapter.

Specifications

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

RF Emissions Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

Limited Warranty

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the *RadioShack** sales receipt as proof of purchase date to any *RadioShack** store. *RadioShack** all at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of *RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a *RadioShack* Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com