


Cat. No. 17-8002/05  
17-8032/35

## OWNER'S MANUAL

# Ultra Express Numeric Pager

Please read before using this pager.

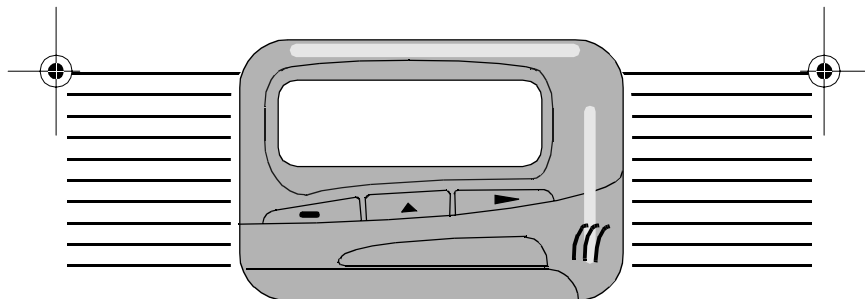

 **RadioShack™**



 
## **INTRODUCTION**



Your Ultra Express Numeric Pager lets you keep in touch with the office and with family and friends anywhere around town. It can store up to 16 messages and alerts you with either a gentle vibration or one of five beep patterns. The pager also has these features:



**Daily Alarm** — lets you set the pager to sound an alarm at a set time each day.



**Low Battery Indicator** — lets you know when the battery is low.

**Clock** — displays the current date and time, when you are not viewing a message.



© 1996 Tandy Corporation.  
All Rights Reserved.

RadioShack is a trademark used by Tandy Corporation.





---

**Message Protect** — lets you protect up to eight messages from accidental deletion.

 
 
**Automatic Page Reset** — stops a page after 20 seconds if you do not press a button.

**Page Reminder** — beeps or vibrates every 2 minutes to remind you to view unread pages.

**Automatic Pager Power** — lets you set the pager to turn on and off at specific times every day.

Be sure you thoroughly read these instructions to ensure that you fully understand your pager's operation.

**Note:** You need one AAA battery (not supplied) to power your pager.



## CONTENTS

<b>Getting Started</b> .....	<b>5</b>
Subscribing to Service .....	5
Installing a Battery .....	6
<b>Pager Quick Guide</b> .....	<b>8</b>
Indicators .....	9
<b>Preparation</b> .....	<b>10</b>
Setting the Date .....	10
Setting the Time .....	11
Selecting Silent or Tone Alert .....	13
<b>Operation</b> .....	<b>15</b>
Turning the Pager On/Off .....	15
Turning On the Light .....	15
Receiving and Reading Messages .....	16
Protecting and Unprotecting Messages .....	20
Deleting Messages .....	22
Automatic Operation .....	24
Setting the Alarm .....	26
<b>Pager Ideas</b> .....	<b>28</b>
<b>Care</b> .....	<b>29</b>
FCC Information .....	30

 
 


## **GETTING STARTED**

### **SUBSCRIBING TO SERVICE**

You must subscribe to paging service through MobileComm before you can start receiving messages.

To activate your pager, call MobileComm or its associated carrier at the telephone number listed in the activation instructions provided with your pager's activation packet.



---


---

## INSTALLING A BATTERY

Your pager requires one AAA battery. For the best performance and longest life, we recommend an alkaline battery, such as RadioShack Cat. No. 23-555.


**Caution:** Always use a fresh battery of the required size and type.

1. Slide off the battery cover in the direction of the arrow.

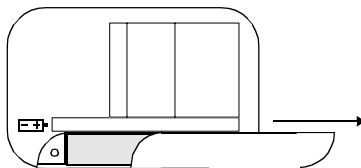

6

 
- 
2. Insert the battery as indicated by the polarity symbols (+ and -) marked beside the compartment.
  3. Replace the cover.

When battery power becomes low, the pager displays . You have about 1 week's battery power left when this warning first appears.

**Notes:**

- The built-in memory saver stores messages and settings for up to 5 minutes while you change the battery or after the battery loses power.
- Turn off the pager when you are not using it, to save power. See "Operation" on Page 15.

## **PAGER QUICK GUIDE**

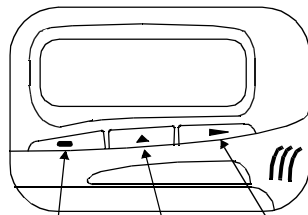

**Read/Select  
Button      Mode  
Button      Light/Reset  
Button**

**Press the read/select button (◀) to turn on the pager, view pages, and select menu options.**

**Press the mode button (▲) to access the pager's menus.**

**Press the light/reset button (▶) to turn on the light. Press it twice to return to the time/date display.**





## INDICATORS

Your pager displays the following symbols.



Audible mode



Vibrate (silent) mode



Protected message



Message continuation



Erase all messages



Delete individual message



 
Pager alarm activated



Automatic power feature




Low battery indicator







## PREPARATION

### SETTING THE DATE

Press  to turn on the pager, then follow these steps to set the current date.

**Notes:**

- If you do not set the date, the pager incorrectly reports the dates of your pages.
- If you do not press a button within 10 seconds, the pager returns to the time/date display.

1. At the time/date display, repeatedly press  until the pager displays **SET DATE?**.
2. Press . The month digits flash.
3. Repeatedly press  to select the current month.
4. Press . The day digits flash.

10



- 
5. Repeatedly press ▲ to select the current day.
  6. Press ► twice to return to the time/date display.

 
## SETTING THE TIME

Press ■ to turn on the pager (if necessary), then follow these steps to set the current time.

### Notes:


- If you do not set the time, the pager incorrectly reports the times of your pages.
- If you do not press a button within 10 seconds, the pager returns to the time/date display.

1. At the time/date display, repeatedly press ▲ until the pager displays **SET TIME?**.






 2. Press . The hour digits flash.
3. Repeatedly press to select the current hour.
4. Press . The first minute digit flashes.
5. Repeatedly press to select the correct digit.
6. Press . The second minute digit flashes.
7. Repeatedly press to select the correct digit.
8. Press . **A** or **P** flashes.
9. Press to select the desired time of day (**A** for AM or **P** for PM).
10. Press twice to return to the time/date display.



12

 

---

---

## SELECTING SILENT OR TONE ALERT

You can have your pager alert you by vibrating or by sounding one of five tone patterns.

To have the pager vibrate when you receive a page, at the time/date display, press ▲. If the pager is currently set to sound tones, it displays **SILENT?**. Press ■ to switch to silent alerts. The pager vibrates briefly, and the 🔊 indicator turns on.

To have the pager sound tones when you receive a page, at the time/date display, press ▲. If the pager is currently set to vibrate, it displays **AUDIO?**. Press ■ to switch to tone alerts. The pager beeps, and the 🔊 indicator turns on.

---

---


### Selecting the Tone Pattern





When you set the pager to sound tones for pages, you have a choice of five tone patterns. To select a tone pattern:

1. Make sure tone alert is selected (see "Selecting Silent or Tone Alert" on Page 13).
2. Repeatedly press ▲ until the pager displays **SET ALERT?**.
3. Press ● to hear the currently selected pattern.
4. Repeatedly press ▲ to select a different pattern. Each time you press ▲, the pager sounds the selected pattern and displays **ALERT 1**, **ALERT 2**, **ALERT 3**, **ALERT 4**, or **ALERT 5**.
5. When you hear the pattern you want, press ► twice to return to the time/date display.

## **OPERATION**

### **TURNING THE PAGER ON/OFF**



To turn on the pager, press . The pager sounds an alert tone or vibrates and briefly turns on all indicators.

To turn off the pager, repeatedly press  until the pager displays **PAGER OFF?**. Then press . The  or  indicator turns off.

**Notes:**

- The time and date appear when the pager is off.
- The pager does not receive pages when it is off.

### **TURNING ON THE LIGHT**

To turn on the light, press . The pager's light turns on for 8 seconds. Press  again to turn it off sooner.

 




---


---

## RECEIVING AND READING MESSAGES

When the pager receives a page, it alerts (beeps or vibrates) for 8 seconds. Press any button to stop the alert sooner. The pager displays the number of unread pages.



Press  to display the first unread message. If it contains more than 12 digits, repeatedly press  to see the rest of the message. The last screen gives the message's number and time.


To read additional messages, press  again.

### Notes:

 - The pager briefly alerts every 2 minutes until you read all new messages.




16










 - 
- The time/date display automatically appears when you press  after reading the last message, or after about 20 seconds if you do not press any button.



### Duplicate Messages



If your pager receives a message that is the same as one already stored in memory (read or unread), **DUPLICATE** appears when you press  to read that message. Press  again to read the duplicate message.

#### Notes:

- The time, date, and message number do not appear the first time you read a duplicate message.



 


- 
- After you read a duplicate message, the pager saves the duplicate messages as one memory record, showing the most recent time and date it was received.




### **Tone Only Messages**

If your pager receives a message that does not have any numbers, it displays **tone only**.



18

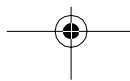




---

---

### Overflow Message (Memory Full)

 Your pager can store up to 16 messages at once in its memory. If the pager's memory is full when it receives a message, **OVERFLOW** appears and the new message replaces the oldest, unprotected message in memory (see "Protecting and Unprotecting Messages" on Page 20).








---

---


## PROTECTING AND UNPROTECTING MESSAGES

Follow these steps to protect a message from being replaced (if the memory is full) or accidentally deleted.

1. Repeatedly press  until the pager displays the message you want to protect.
2. Repeatedly press  until the pager displays **PROTECT?**.
3. Press  to protect the message.


**Note:** To escape without protecting the page, press  again so **ESCAPE?** appears, then press .

To unprotect the message, repeat these steps, but in Step 2, choose **UNPROTECT?**.

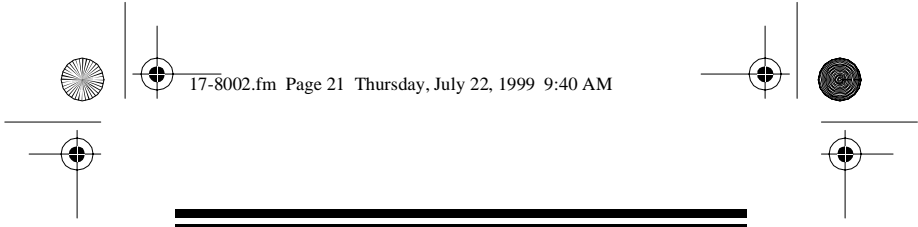

**Notes:**

- You can protect up to eight messages.
- If **HOLD FULL** appears when you press **■** in Step 3, eight messages are currently protected. To protect another message, you must first unprotect one of those eight.

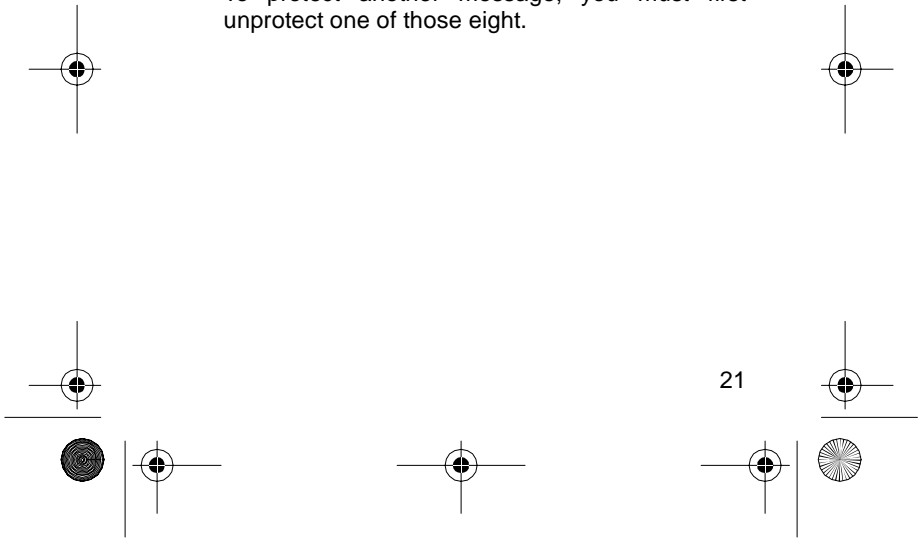




---



---

## DELETING MESSAGES

You can delete unprotected messages one at a time, or all unprotected/read messages at once.

### Deleting Individual Unprotected Messages

1. Repeatedly press  until the pager displays the message you want to delete.
2. Repeatedly press  until the pager displays **dELETE?**.
3. To delete the message, press .

**Note:** To escape without deleting the message, repeatedly press  so **ESCAPE?** appears, then press .

---

---

## Deleting All Unprotected/Read Messages

**Caution:** This procedure deletes *all* unprotected messages that you have read. Be sure you protect any messages that you want to save *before* you follow these steps.

1. At the time/date display, repeatedly press ▲ until the pager displays **ERASE ALL?**.

**Note:** If there are no unprotected/read messages, **ERASE ALL?** does not appear.

2. To delete all unprotected messages that you have read, press ■.

**Note:** To proceed without deleting all unprotected/read messages, repeatedly press ▲ to select another option or return to the time/date display.

---

---

## AUTOMATIC OPERATION

You can set your pager to automatically turn on and off at specific times every day. To do so, select automatic operation then set the desired on and off times.

### Selecting Automatic Operation

1. At the time/date display, repeatedly press ▲ until the pager displays **PAGER AUTO?**.
2. Press ■ to select automatic operation so  appears on the display.

To return to manual operation, repeat these steps. The pager displays **PGR MANUAL?** in Step 1 and  disappears in Step 2.



---

---

### Setting the Automatic On and Off Times

1. At the time/date display, repeatedly press ▲ until the pager displays **SET AUTO?**.
2. Press ●. The pager displays the currently set on and off times with the on time's hour flashing.
3. Repeatedly press ▲ until the pager displays the desired time. Then press ● for the next digit.  
Repeat this step until the pager displays the desired on and off times.
4. Press ► twice to return to the time/date display.

**Note:** The pager only turns on and off automatically if you select automatic operation (so □ appears on the display). See "Selecting Automatic Operation" on Page 24.

---

---

## USING THE ALARM

You can set your pager's alarm to sound at the same time each day. The pager alerts for 20 seconds at the set alarm time. Press any button to stop the alert sooner. The pager sounds again the next day, unless you turn it off.

### Turning the Alarm On/Off

1. At the time/date display, repeatedly press ▲ until the pager displays **SET ALARM?**.
2. Press ●. The pager displays the currently set alarm time with either **ON** or **OFF** flashing.
3. To have the alarm sound, press ▲ until **ON** flashes. Otherwise, press ▲ until **OFF** flashes.

---

---

### Setting the Alarm Time

1. At the time/date display, repeatedly press ▲ until the pager displays **SET ALARM?**.
2. Press ■ twice. The hour flashes.
3. Repeatedly press ▲ until the pager displays the desired time. Then press ■ for the next digit.  
Repeat this step until the pager displays the desired alarm time.
4. Press ► twice to return to the time/date display.



## **PAGER IDEAS**

 


Include your pager number in your answering machine or voice mail messages. This way, you can receive important messages immediately.


Leave your pager number at your children's school and with the babysitter so you can always be reached in an emergency.



Establish *code* messages with your family or friends. For example, your children can include the code 3333 to tell you they are home from school. Your spouse can send 07734 to say hello! (Read it upside-down.)



 If you have a cellular phone, give your pager number instead of your cellular number. You can decide who to call back on your cellular phone, without paying for incoming cellular calls. This can drastically reduce your monthly cellular bill!





## **CARE**



---

---



To enjoy your pager for a long time:

- Keep the pager dry. If it gets wet, wipe it dry immediately.
- Use and store the pager only in normal temperature environments.
- Handle the pager gently and carefully. Don't drop it.
- Keep the pager away from dust and dirt.
- Wipe the pager with a damp cloth occasionally to keep it looking new.

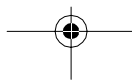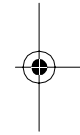




---

---

## FCC INFORMATION

 
Your pager might cause TV or radio interference even when it is operating properly. To determine whether your pager is causing the interference, turn off the pager. If the interference goes away, your pager is causing the interference. Try to eliminate the interference by moving the pager away from the TV or radio.



If you cannot eliminate the interference, the FCC requires that you stop using your pager.



Modifying or tampering with your pager's internal components can cause a malfunction and void your FCC authorization to operate it. *If your pager is not performing as it should*, contact your local RadioShack store for assistance or call MobileComm at:



 
1-800-944-4000





  This device complies with Part 15 of *FCC Rules*. Operation is subject to the following conditions: (1) this device may not cause any harmful interference, and (2) this device must accept interference received, including interference that may cause undesired operation.

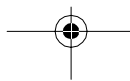


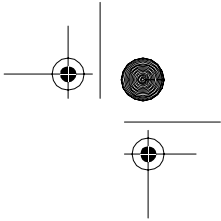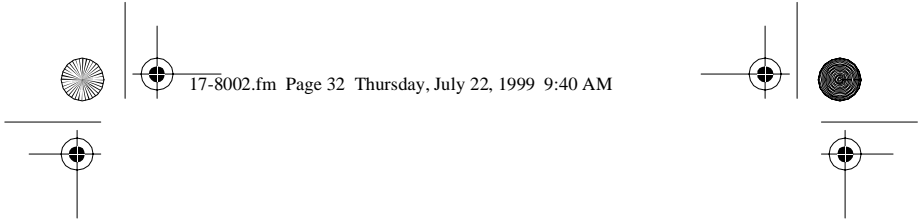

**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

6/96

Printed in the USA

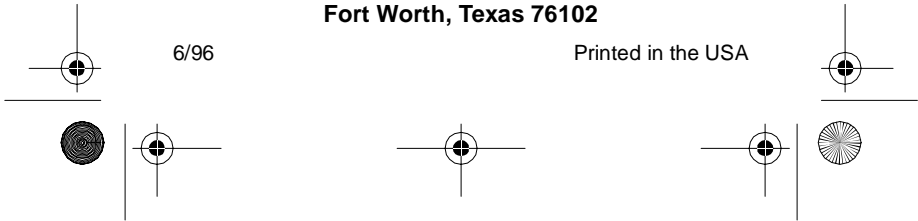



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>