 


Cat. No. 17-8022/17-8023

**OWNER'S MANUAL**

**PGL-302 Ultra Express Numeric™  
Local Pager**

Please read before using this pager.

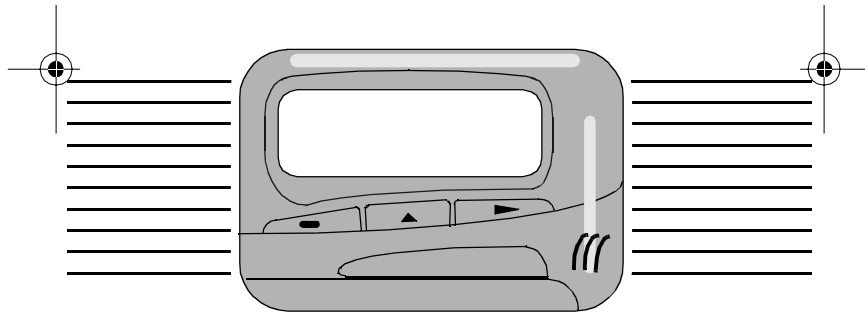

**Radio Shack**

 


## **INTRODUCTION**

Your PGL-302 Ultra Express Numeric Local Pager lets you keep in touch with the office and with family and friends anywhere around town. It can store up to 16 messages and alerts you with either a gentle vibration or one of five beep patterns. It also has these features:



**Daily Alarm**—lets you set the pager to sound an alarm at a set time.



**Low Battery Indicator**— lets you know when the battery is low.

**Clock**—displays the current date and time, when you are not viewing a message.





---

---

**Message Protect**—lets you protect up to eight messages from accidental deletion.

 
 
**Automatic Page Reset**—stops a page after 20 seconds if you do not press a button.

**Page Reminder**—beeps or vibrates every 2 minutes to remind you to view unread pages.

**Automatic Pager Power**—lets you set the pager to turn on and off at specific times every day.

Be sure you thoroughly read these instructions to ensure that you fully understand your pager's operation.

**Note:** You need one AAA battery to power your pager.







## **GETTING STARTED**



### **SUBSCRIBING TO SERVICE**

You must subscribe to local paging service through PageMart before you can start receiving pages.

  To activate your pager, call PageMart's at 1-800-99-RSPAGE.




---

---

## INSTALLING A BATTERY

 Your pager requires one AAA battery. For the best performance, we recommend an alkaline battery such as Radio Shack Cat. No. 23-555.

1. Slide off the battery cover in the direction of the arrow.

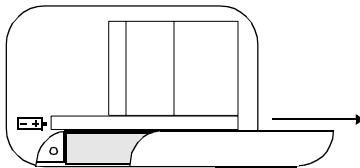


2. Remove the old battery, if necessary, and dispose of it properly.


3. Insert the new battery as indicated by the polarity symbols (+ and -) marked beside the compartment.
4. Replace the battery cover.

**Notes:**

 - The built-in memory saver stores messages and settings for a short time while you change the battery.
- Turn off the pager when you are not using it. See "Automatic Operation."
- A battery should last for 850 to 950 hours of use.

When battery power becomes low, the pager displays . You have about 1 week's battery power left when this warning first appears.

## **PAGER QUICK GUIDE**

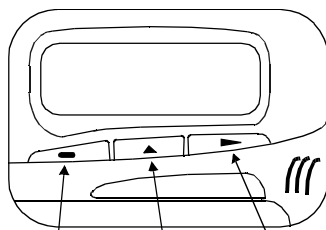 

**Read/Select  
Button    Mode  
Button    Light/Reset  
Button**

**Press the read/select button (■) to turn on the pager, view pages, and select menu options.**

**Press the mode button (▲) to access the pager's menus.**






 
 
 

**Press the light/reset button (▶) to turn on the light. Press it twice to return to the time/date display.**

---

---

## INDICATORS


Your pager displays the following symbols.

-  Audible mode
-  Vibrate (silent) mode
-  Protected message
-  Message continuation
-  Erase all messages
-  Delete individual message
-  Pager alarm activated
-  Automatic power feature
-  Low battery indicator



 





## PREPERATION

### SETTING THE DATE

Press  to turn on the pager, then follow these steps to set the current date.


**Note:** If you do not press a button within 10 seconds, the pager returns to the time/date display.

1. At the time/date display, repeatedly press  until the pager displays **SET DATE?**.
2. Press . The month digits flash.
3. Repeatedly press  to select the current month.
4. Press . The day digits flash.
5. Repeatedly press  to select the current day.
6. Press  twice to return to the time/date display.




 


---

---



## SETTING THE TIME

  Press  to turn on the pager, then follow these steps to set the current time.








**Note:** If you do not set the time, the pager incorrectly reports the times of your pages.

1. At the time/date display, repeatedly press  until the pager displays **SET TIME?**.
2. Press . The hour digits flash.
3. Repeatedly press  to select the current hour.
4. Press . The first minute digit flashes.
5. Repeatedly press  to select the correct digit.
6. Press . The second minute digit flashes.

10



       7. Repeatedly press ▲ to select the correct digit.
8. Press ●. **A** or **P** flashes if the pager is set to the 12-hour format.
9. Press ▲ to select the desired time of day (**A** for AM or **P** for PM).
10. Press ●. The pager displays **12 HOURS** or **24 HOURS**.
11. Press ▲ to select the desired time format (12-hour with AM/PM or 24-hour).
12. Press ► twice to return to the time/date display.



---

---

## SELECTING SILENT OR TONE ALERT

You can have your pager alert you by vibrating or by sounding one of five tone patterns.

To have the pager vibrate when you receive a page, at the time/date display, press ▲. If the pager is currently set to sound tones, it displays **SILENT?**. Press ■ to switch to silent alerts. The pager vibrates briefly, and the 📞 indicator turns on.

To have the pager sound tones when you receive a page, at the time/date display, press ▲. If the pager is currently set to vibrate, it displays **AUDIO?**. Press ■ to switch to tone alerts. The pager beeps, and the 📞 indicator turns on.

---

---


### Selecting the Tone Pattern





When you set the pager to sound tones for pages, you have a choice of five tone patterns. To select a tone pattern:

1. Select tone alert (see "Selecting Silent or Tone Alert").
2. Repeatedly press ▲ until the pager displays **SET ALERT?**.
3. Press ● to hear the currently selected pattern.
4. Repeatedly press ▲ to select a different pattern. Each time you press ▲, the pager sounds the selected pattern and displays **ALERT 1**, **ALERT 2**, **ALERT 3**, **ALERT 4**, or **ALERT 5**.
5. When you hear the pattern you want, press ► twice to return to the time/date display.

## OPERATION

### TURNING THE PAGER ON/OFF



Press  to turn on the pager. The pager sounds an alert tone or vibrates and briefly turns on all indicators.

To turn off the pager, repeatedly press  until the pager displays **PAGER OFF?**. Then press . The  or  indicator turns off.

#### Notes:

- The time and date appear when the pager is off.
- The pager does not receive pages when it is off.

### TURNING ON THE LIGHT

To turn on the light, press . The pager's light turns on for 8 seconds. Press  again to turn it off sooner.

 


---



---


## RECEIVING AND READING MESSAGES


When the pager receives a page, it alerts (beeps or vibrates) for 8 seconds. Press any button to stop the alert sooner. The pager displays the number of unread pages.



The pager briefly alerts every 2 minutes until you view the message.

Press  to display the message. If it contains more than 12 digits, repeatedly press  to see the rest of the message. The last screen of the page gives the message's number and time.

 To read additional messages, press  again.





---

---


### **Tone Only Messages**

 If your pager receives a message that does not have any numbers, it displays **TONE ONLY**.



### **Unreadable Messages**

If your pager receives a message that is partially or totally unreadable, it does not display the unreadable parts.




## **PROTECTING AND UNPROTECTING MESSAGES**



 
Follow these steps to protect a message so you cannot delete it.



16





- 
1. Repeatedly press  until the pager displays the message you want to protect.
  2. Repeatedly press  until the pager displays **PROTECT?**.
  3. Press  to protect the message.

To unprotect the message, follow the above steps. In Step 2, the pager displays **UNPROTECT?**.

## DELETING MESSAGES




You can delete single messages, or all unprotected messages.

 


---



---


### Deleting Individual Messages

1. Repeatedly press  until the pager displays the message you want to delete.
2. Press  until the pager displays **dELETE?**.
3. Press  to delete the message.



### Deleting All Unprotected Messages

 1. At the time/date display, repeatedly press  until the pager displays **ERASE ALL?**.
2. Press  to delete the messages.



---

---

## AUTOMATIC OPERATION

You can set your pager to automatically turn on and off at specific times every day. To do so, select automatic operation and set the desired on and off times.

### Selecting Automatic Operation

Follow these steps to select automatic operation.

1. At the time/date display, repeatedly press ▲ until the pager displays **PAGER AUTO?**.
2. Press ● to select automatic operation.

To return to manual operation, repeat these steps. The pager displays **PGR MANUAL?** in Step 1.

---

---

### Setting the Automatic On and Off Times

1. At the time/date display, repeatedly press ▲ until the pager displays **SET AUTO?**.
2. Press ■. The pager displays the currently set on and off times with the on time's hour flashing.
3. Repeatedly press ▲ until the pager displays the desired time. Then press ■ to make the next digit flash.  
Repeat this step until the pager displays the desired on and off times.
4. Press ► twice to return to the time/date display.

**Note:** The pager only turns on and off automatically if you turn on this function. See "Selecting Automatic Operation."

---

---

## SETTING THE ALARM

Follow these steps to set your pager's alarm.

1. At the time/date display, repeatedly press ▲ until the pager displays **SET ALARM?**.
2. Press ■. The pager displays the currently set alarm time with either **ON** or **OFF** flashing.
3. To have the alarm sound, press ▲ until **ON** flashes. Otherwise, press ▲ until **OFF** flashes. Then press ■. The hour flashes.
4. Repeatedly press ▲ until the pager displays the desired time. Then press ■ for the next digit.  
Repeat this step until the pager displays the desired alarm time.
5. Press ► twice to return to the time/date display.



---

 
---

The pager alerts for 20 seconds at the set alarm time.  
Press any button to stop the alert sooner.

## PAGER IDEAS



Include your pager number in your answering machine or voice mail messages. This way, you can receive important messages immediately.




Give your pager number to friends, family members, and business associates. When they page you, they can use their telephone's keypad to enter a number where you can reach them. Your pager displays this number when you receive the page.

Leave your pager number at your children's school and with the babysitter so you can always be reached in an emergency.



 22







---

---

Establish *code* messages with your family or friends. For example, your children can include the code 3333 to tell you they are home from school. Your spouse can send 07734 to say hello! (Read it upside-down.)



  If you have a cellular phone, give your pager number instead of your cellular number. You can decide who to call back on your cellular phone, without paying for incoming cellular calls. This can drastically reduce your monthly cellular bill!





## **CARE**

 
 
---

---



To enjoy your pager for a long time:

- Keep the pager dry. If it gets wet, wipe it dry immediately.
- Use and store the pager only in normal temperature environments.
- Handle the pager gently and carefully. Don't drop it.
- Keep the pager away from dust and dirt.
- Wipe the pager with a damp cloth occasionally to keep it looking new.







---



---



## FCC INFORMATION

    Your pager might cause TV or radio interference even when it is operating properly. To determine whether your pager is causing the interference, turn off the pager. If the interference goes away, your pager is causing the interference. Try to eliminate the interference by moving the pager away from the receiver.

If you cannot eliminate the interference, the FCC requires that you stop using your pager.






Modifying or tampering with your pager's internal components can cause a malfunction and might void your FCC authorization to operate it. If your pager is not performing as it should, contact your local Radio Shack store for assistance or call PageMart at 1-800-864-HELP.





This device complies with Part 15 of *FCC Rules*. Operation is subject to the following conditions:

     - (1) This device may not cause any harmful interference, and
- (2) This device must accept interference received, including interference that may cause undesired operation.








# NOTES

---

   ---



**RADIO SHACK LIMITED WARRANTY**

This product is warranted against defects for 90 days from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your Radio Shack sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage. EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

*We Service What We Sell*

9/94

**RADIO SHACK**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

8/95

Printed in the USA

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>