



17-9003.fm Page 1 Friday, July 23, 1999 9:42 AM



Cat. No. 17-9003

OWNER'S MANUAL

Please read before using this pager.

Tracker Alphanumeric Pager



 **RadioShack**TM






INTRODUCTION



Your Tracker Alphanumeric Pager lets you keep in touch with the office and with family and friends anywhere around town. It can store up to 16 alphanumeric messages (or a maximum of 640 characters) and alerts you with either a gentle vibration, a vibration and single beep, a melody, or one of two beep patterns. The pager also has these features:



Clock — displays the current date and time when you are not viewing a message, and lets you change the time (12- or 24-hour) and date (M/D/Y or D/M/Y) display formats.

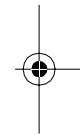


Daily Alarm — lets you set the pager to sound an alarm at a set time each day.

Message Protect — lets you protect up to eight messages from accidental deletion.

© 1996 Tandy Corporation.
All Rights Reserved.

RadioShack is a trademark used by Tandy Corporation.

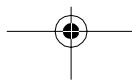




Low Battery Message and Alert — lets you know when the battery is low.

Automatic Message Scroll — lets you set the pager to automatically scroll through all messages and set the speed at which the messages scroll.




Page Reminder — lets you set the pager to sound a series of alerts to remind you to view unread pages.

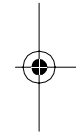

Timer — lets you set the pager to sound an alert after a set amount of time (up to 99 minutes) has passed.

Be sure you thoroughly read these instructions to ensure that you fully understand your pager's operation.

Note: You need one AAA battery (not supplied) to power your pager.

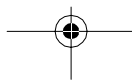

CONTENTS

Getting Started	6
Subscribing to Service	6
Installing a Battery	6
Pager Quick Guide	9
Indicators	10
Pager Set-Up	11
Setting the Date, Time, and Time Format	11
Setting the Date Format	14
Setting The Message Alert	15
Selecting an Audible Alert	16
Selecting a Silent Alert	17
Using Audible/Silent Quick-Set	18
Setting the Alert Length	19
Operation	20
Turning the Pager On/Off	20
Memory Capacity	22
Receiving/Reading Messages	23
Receiving Messages	23
Reading Messages	24



Using Automatic Message-Scroll	26
Duplicate Messages	27
Tone Only or Unreadable Messages	27
Protecting and Unprotecting Messages	28
Deleting Messages	29
Deleting Individual Messages	29
Deleting All Messages	31
Special Features	32
Using the Reminder Alert	32
Setting the Message Scroll Speed	33
Using the Daily Alarm	35
Setting the Daily Alarm Time	35
Turning the Daily Alarm Off/On	37
Using the Timer	38
Setting/Starting the Timer	38
Stopping the Timer	40
Pager Ideas	41
Care	42
FCC Information	43
	5

GETTING STARTED

SUBSCRIBING TO SERVICE

You must subscribe to paging service through MobileComm before you can start receiving messages.


To activate your pager, call MobileComm or its associated carrier at the telephone number listed in the activation instructions provided with your pager's activation packet.

INSTALLING A BATTERY


Your pager requires one AAA battery. For the best performance and longest life, we recommend an alkaline battery, such as RadioShack Cat. No. 23-555.

Caution: Always use a fresh battery of the required size and type.

1

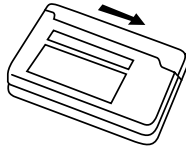


2

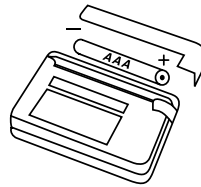


1. Slide off the battery cover in the direction of the arrow.
2. Place a battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the cover.


7

When battery power becomes low, the pager sounds an alert every few seconds, **Change Battery** appears, and  flashes on the display. Press any button to stop the alert. Depending on how often you use the pager, you should have about 3 days of battery power left when this low battery alert first occurs.

Notes:

- If you press a button to stop the alert, the pager displays  (and **Change Battery** instead of the time on the standby display) until you replace the battery.
- The pager's built-in memory stores messages and settings for at least 2 minutes while you change the battery or after the battery loses power.
- Always dispose of old batteries promptly and properly; do not burn or bury them.

PAGER QUICK GUIDE

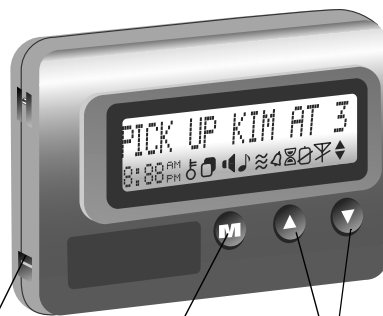

Alert
Speaker





 





 
Menu
Button



Function/Select
Buttons



INDICATORS

Your pager displays the following symbols.

-  or  Audible alert mode
-  or  Silent (vibrate) alert mode
-  Protected message
-  Duplicate message
-  or  Message continuation
-  Daily alarm
-  Timer
-  Low battery

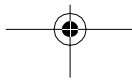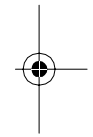


PAGER SET-UP


 



SETTING THE DATE, TIME, AND TIME FORMAT

 Press and hold **M** for a few seconds to turn on the pager, then follow these steps to set the current date, time, and time format.


 
Notes:

- If you do not set the time, the pager incorrectly reports the times of your pages.
- If you do not press a button for about 40 seconds during these steps (or while setting any of the pager's features), the pager returns to the time/date (standby) display. Try again.
- To rapidly advance the setting during these steps (or while setting any other feature), simply press and hold that button.

- When you press  in Steps 3–8, the pager scrolls forward through that setting's sequence (years **95–13**, for example), then repeats that sequence when it reaches the end.

1. At the standby display, press  then repeatedly press  until **Set Clock** appears.
2. Press . The hour digit(s) flash.
3. Repeatedly press  to select the hour, then press . The minute digits flash.

Note: If you previously selected the 12-hour time format, be sure to select the correct AM or PM hour so **AM** or **PM** appears.

4. Repeatedly press  to select the minutes, then press . **12** and **24** appear (for 12- or 24-hour time format), and the last selected format flashes.

12




5. To select the other time format, press so that format flashes, then press . The year digits flash.

To keep the current time format, simply press . The year digits flash.




6. Repeatedly press to select the current year, then press . The month digits flash.

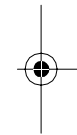

7. Repeatedly press to select the current month, then press . The day digits flash.

8. Repeatedly press to select the current day of the month, then press to store the selected settings. The standby display reappears showing the current date and time.

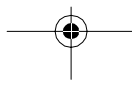





SETTING THE DATE FORMAT

Your pager is preset to display the date in the month/day/year (M/D/Y) format, but you can set it to use the D/M/Y format. To change the date format, follow these steps.

1. At the standby display, press **M** then repeatedly press **V** until **Set Options** appears.
2. Press **A**, then repeatedly press **V** until **Calendar:** and the currently selected format (**M/D/Y** or **D/M/Y**) appear.
3. Press **A**. The currently selected date format flashes.
4. Press **V** to select the other date format, then press **M** to store your selection. The standby display reappears showing the date in the selected format.

SETTING THE MESSAGE ALERT



Your pager is preset to alert you by sounding one of three audible alert patterns (Beep1); however, you can set it to use any of these audible or silent alerts (and you can set the alert length — see “Setting the Alert Length” on Page 19).

Display	Alert Type
	Beep1 or Beep2 (audible)
	Melody (audible)
	Vibrate (silent)
	Chirp/Vibrate (two beeps then silent)

Selecting an Audible Alert

1. At the standby display, press **M**. **Set Alerts** appears and the last selected alert symbol flashes.
2. Press **A**. **Sound ON/OFF** appears, and the current setting (**ON** or **OFF**) flashes.
3. Press **V** (if necessary) so **ON** flashes, then press **A**. **Beep1, 2 / Melody** appears, and the current setting flashes.
4. Repeatedly press **V** to select **Beep1**, (**Beep**)**2**, or **Melody** so that setting flashes, then press **A** to store the selected setting. The standby display reappears showing the symbol for the selected setting.

Selecting a Silent Alert

1. At the standby display, press **M**. **Set Alerts** appears and the last selected alert symbol flashes.
2. Press **▲**. **Sound ON/OFF** appears, and the current setting (**ON** or **OFF**) flashes.
3. Press **▼** (if necessary) so **OFF** flashes, then press **▲**. **Chirp ON/OFF** appears, and the current setting (**ON** or **OFF**) flashes.
4. Press **▼** (if necessary) so **OFF** flashes to select  (vibrate) or **ON** flashes to select  (chirp/vibrate). Then press **▲** to store the selected setting. The standby display reappears showing the symbol for the selected setting.

Using Audible/Silent Quick-Set

To quickly change the alert type from audible to silent or silent to audible, at the standby display, press and hold **M** for a few seconds. **Set Alerts** appears briefly, then the pager beeps and **Sound ON** or **Sound OFF** appears briefly. Then the standby display reappears showing the current audible (**ON**) or silent (**OFF**) alert pattern symbol.

Setting the Alert Length

Your pager is preset to alert for about 30 seconds when you receive a message or to remind you of an unread message; however, you can set it to alert for 20 ("Short"), 32 ("Middle"), or 44 ("Long") seconds. Follow these steps to change the alert length.

1. At the standby display, press **M** then repeatedly press **V** until **Set Options** appears.
2. Press **A** so **AR:** (auto-reset) and the current alert length (**Short**, **Middle**, or **Long**) appear.
3. Press **A** so the current setting flashes, then repeatedly press **V** to select the desired setting.
4. Press **M** to store your selection. The standby display reappears.

OPERATION

TURNING THE PAGER ON/OFF

To turn on the pager, press and hold **M** for a few seconds until **Power ON** appears on the display. The pager sounds an alert tone or vibrates and briefly turns on all indicators, then the standby display appears.



To turn off the pager, press and hold **M** for a few seconds until the pager beeps once (**Set Alerts** appears), then release **M** and press it again within 2 seconds. **Power OFF** appears and the pager beeps, then the display goes blank.

Notes:

- The pager does not receive messages or sound at a set daily alarm time (see "Using the Daily Alarm" on Page 35) when it is off.



- The display lights for about 45 seconds each time you turn the pager on or press a button. (The light turns off soon after the standby display reappears).
- To conserve battery power, turn off the pager when you are not using it (when you are not expecting pages, for example).

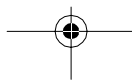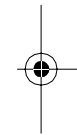

MEMORY CAPACITY

Your pager can store up to 16 messages (or a maximum of 640 characters) in its memory. If the pager's memory is full when it receives a new message, the new message replaces the oldest unprotected message in memory.

Hint: To prevent the pager from automatically replacing messages you want to keep and to save memory space, be sure to promptly protect any messages (up to eight) you want to keep (see "Protecting and Unprotecting Messages" on Page 28) and delete each unwanted message after you read it (see "Deleting Individual Messages" on Page 29).

RECEIVING/READING MESSAGES

Receiving Messages

When the pager receives a message, it alerts (beeps or vibrates) and displays the incoming message for up to 44 seconds (depending on the alert length selected — see “Setting the Alert Length” on Page 19). To stop the alert sooner, press any button.

Notes:



- The alert tone’s volume gradually increases during an audible alert.
- If you do not press a button to stop the alert, **Call Received** appears on the standby display (instead of the current date and time) until you read all new messages.



Reading Messages

To read all messages stored in memory, repeatedly press **▲** or **▼**. Each time you press a button, the pager displays the next message and the time it was received (time stamp). The pager displays any unread messages (from newest to oldest) first, then it displays all previously read messages from newest to oldest (if you pressed **▼**) or from oldest to newest (if you pressed **▲**).

The standby display appears when you press **▲** or **▼** after reading the last message, or automatically after about 40 seconds if you do not press a button. To return to the standby display sooner, press **M** twice.

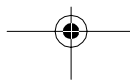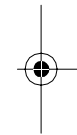

Notes:


- The characters (such as **21d**) that briefly appear in the lower-left corner of the display before the time stamp are part of a paging-address feature not supported by your carrier.
- The first time you press **▲** or **▼** to view any unread message, the pager alerts again (for up to 44 seconds). Press **▲** or **▼** again to stop the alert and read the message.
- If a message is longer than 16 digits (if **▲** or **▼** appears), the rest of that message appears before the next message when you press **▲** or **▼**.
- If no messages are stored in memory, **No Messages** appears when you press **▲** or **▼**.






-
- You can set the pager to sound a reminder alert at preset intervals for up to 3 hours to remind you of unread messages. See “Using the Reminder Alert” on Page 32.

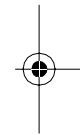

Using Automatic Message-Scroll




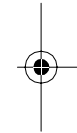
To have the pager automatically scroll through all messages stored in memory so you can read them hands-free, press and hold  or  for about 2 seconds. Depending on the message scroll speed setting (see “Setting the Message Scroll Speed” on Page 33), the pager displays each message for up to 3 seconds, then returns to the standby display.

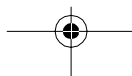



Duplicate Messages


If your pager receives a message that is the same as one already stored in memory (read or unread),  appears when the pager displays the duplicate message. After you read a duplicate message, the pager saves only one copy of it, showing the most recent time that the message was received.



Tone Only or Unreadable Messages

If your pager receives a message that does not have any numbers, it displays **TONE ONLY**.

If your pager receives a message that is partially or totally unreadable (due to disruption of the paging signal or low signal strength, for example), it displays the unreadable characters as dashes (55-123-, for example).

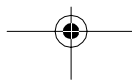

PROTECTING AND UNPROTECTING MESSAGES

Your pager lets you protect up to eight messages from being replaced if the memory becomes full. Follow these steps to protect or unprotect messages.

1. Repeatedly press **▲** or **▼** to select the message you want to protect or unprotect.
2. Press **M**. **Protect** flashes on the display.
3. Press **▲** twice. **Protect** stops flashing and **⌘** appears (protected) or disappears (unprotected).
4. To immediately protect or unprotect another message, repeatedly press **▼** to select that message, then press **▲** once so **⌘** appears or disappears.

To return to the standby display, press **M**.

Note: If ***FULL*** appears and the pager beeps twice when you press **▲** to protect a message, eight messages are currently protected. To protect another message, you must first unprotect or delete (see "Deleting Messages") one of those eight.

DELETING MESSAGES

Your pager lets you delete messages one at a time or all messages at once.

Deleting Individual Messages

1. Repeatedly press **▲** or **▼** to select the message you want to delete.
2. Press **M**. **Protect** flashes on the display.

-
3. Press **▼**. **Delete** flashes on the display.
 4. Press **▲** three times to delete the message. As you press the button, the pager displays **Delete** (not flashing), **Delete?**, then **Deleted**. Then the next oldest message appears.
- Note:** To escape to the standby display without deleting the message at any time before you press **▲** a third time, press **M**.
5. To immediately delete another message, repeatedly press **▼** (if necessary) to select the message, then press **▲** twice so **Delete?** then **Deleted** appears.

To return to the standby display, press **M**.

Deleting All Messages

Caution: This procedure deletes *all* messages (protected and unprotected) stored in memory.

1. Turn off the pager.
2. Press and hold **M** and **V** until **Delete All?** appears.
3. To delete all messages in memory, press **A**. **Deleted All** appears briefly, then the pager turns on and the standby display appears.

Note: To escape *without* deleting all messages, press any button except **A**. The pager turns on and the standby display appears.

SPECIAL FEATURES

USING THE REMINDER ALERT


To remind you of any unread messages, you can set your pager to sound an alert (at intervals of 1, 2, 5, 10, then every 30 minutes) for up to 3 hours or until you press a button. Follow these steps to turn the reminder alert on or off.

1. At the standby display, press **M** then repeatedly press **V** until **Set Options** appears.
2. Press **A**, then repeatedly press **V** until **Reminder:** and the current setting (**ON** or **OFF**) appears.
3. Press **A** so **ON** or **OFF** flashes, then press **V** to select the other setting.
4. Press **M** to store your selection. The standby display reappears.


SETTING THE MESSAGE SCROLL SPEED

Your pager is preset to display each message for about 2 seconds when you set the pager to automatically scroll through all messages stored in memory (see "Using Automatic Message-Scroll" on Page 26); however, you can set it to display each message for 1 ("Slow"), 2 ("Medium"), or 3 ("Fast") seconds. Follow these steps to change the scroll speed.

1. At the standby display, press **M** then repeatedly press **V** until **Set Options** appears.
2. Press **A**, then repeatedly press **V** until **Scroll:** and the current setting (**Slow**, **Medium**, or **Fast**) appears.

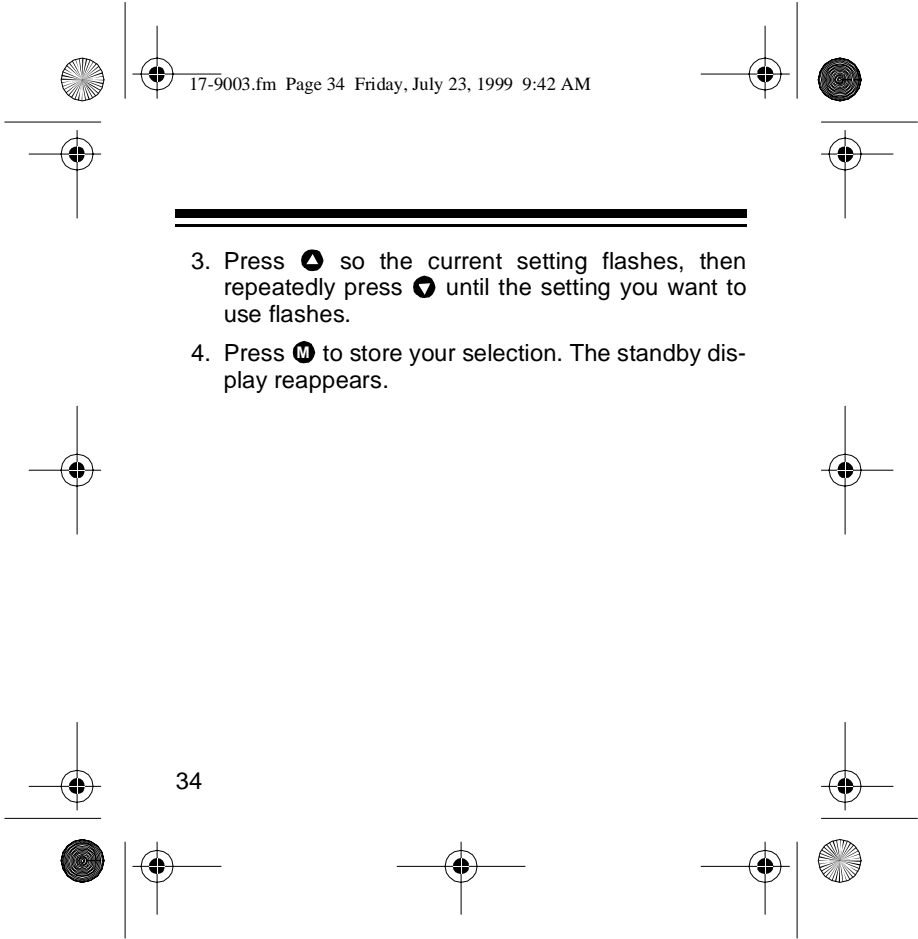


USING THE DAILY ALARM



You can set your pager to sound an alarm at the same time each day. At the set alarm time, ***Alarm*** appears,  flashes, and the pager sounds a silent or audible alarm (depending on the selected message alert type) for about 30 seconds. To stop the alarm sooner, press any button. The alarm sounds again the next day, unless you turn it off.



Setting the Daily Alarm Time

Follow these steps to turn on the alarm and set the alarm time.


 

1. At the standby display, press **M** then **▼** so **Set Alarm** appears.

2. Press . The last set alarm time and **Alarm ON/OFF** appear, and the current alarm setting (**ON** or **OFF**) flashes.

3. If **OFF** is flashing, press  so **ON** flashes, then press . The hour digit(s) flash.

4. Repeatedly press  to select the hour, then press . The minute digits flash.

Note: If you previously selected the 12-hour time format, be sure to select the correct AM or PM hour so **AM** or **PM** appears.

5. Repeatedly press  to select the minutes, then press  to store the set alarm time and turn on the alarm. The standby display appears showing the daily alarm symbol ().

Turning the Daily Alarm Off/On

Follow these steps to turn off the alarm or turn it back on.



1. At the standby display, press **M** then **V** so **Set Alarm** appears.
2. Press **A**. The last set alarm time and **Alarm ON/OFF** appear, and the current alarm setting (**ON** or **OFF**) flashes.
3. To turn the alarm on or off, press **V** so that setting flashes, then press **M** to return to the standby display. If you selected **ON**, **A** appears on the standby display.

USING THE TIMER


 
 

You can set your pager to sound an alert after a set amount of time (up to 99 minutes) has passed — just like a timer. After a set number of minutes has passed, **Time is Up !** appears, ⌚ flashes, and the pager sounds a silent or audible alert (depending on the selected message alert type) for about 30 seconds. To stop the alert sooner, press any button.

Setting/Starting the Timer

1. At the standby display, press **M** then repeatedly press **7** until **Set Timer** appears.
2. Press **▲**. **Stop** appears, and ⌚ and the last timer setting flashes.

-
-
3. Repeatedly press  to set the number of minutes, then press . **Run/Stop** appears, and **Stop** flashes.

Notes:

- As you press  , the pager scrolls forward from 1-99 minutes, then repeats that sequence when it reaches the end.
 - The timer displays the seconds, but you can set *only* the number of minutes.
4. Press  so **Run** flashes, then press  to start the timer. The standby display appears showing the timer symbol () and the number of minutes remaining before the timer alert sounds.

Stopping the Timer

Follow these steps to stop the running timer *before* the timer alert sounds.

1. At the standby display, press **M** then repeatedly press **V** until **Set Timer** appears.
2. Press **A**. **Run/Stop** and the remaining time appear, and **Run** and **⌚** flash.
3. Press **V** so **Stop** flashes, then press **M**. The timer stops and the standby display reappears.

40

PAGER IDEAS

Include your pager number in your answering machine or voice mail messages. This way, you can receive important messages immediately.

Leave your pager number at your children's school and with the babysitter so you can always be reached in an emergency.

Establish *code* messages with your family or friends. For example, your children can include the code 3333 to tell you they are home from school. Your spouse can send 07734 to say hello! (Read it upside-down.)

If you have a cellular phone, give your pager number instead of your cellular number. You can decide who to call back on your cellular phone, without paying for incoming cellular calls. This can drastically reduce your monthly cellular bill!





CARE



To enjoy your pager for a long time:

- Keep the pager dry. If it gets wet, wipe it dry immediately.
- Use and store the pager only in normal temperature environments.
- Handle the pager gently and carefully. Don't drop it.
- Keep the pager away from dust and dirt.
- Wipe the pager with a damp cloth occasionally to keep it looking new.

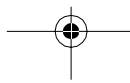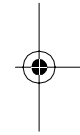

FCC INFORMATION

Your pager might cause TV or radio interference even when it is operating properly. To determine whether your pager is causing the interference, turn off the pager. If the interference goes away, your pager is causing the interference. Try to eliminate the interference by moving the pager away from the TV or radio.


If you cannot eliminate the interference, the FCC requires that you stop using your pager.

Modifying or tampering with your pager's internal components can cause a malfunction and void your FCC authorization to operate it. *If your pager is not performing as it should*, contact your local RadioShack store for assistance or call MobileComm at:

1-800-944-4000



This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following conditions: (1) this device may not cause any harmful interference, and (2) this device must accept interference received, including interference that may cause undesired operation.

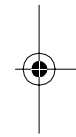


RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102



8/96

Printed in the USA

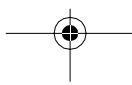

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>