

# Compact Desktop Crosscut Paper Shredder

Your RadioShack Shredder is convenient and easy to use. The shredder's compact design makes it perfect for your home or office. Its features include:

**4 1/2-Inch Paper Slot** — you can easily insert folded sheets of paper into the shredder, letting you quickly and easily destroy them.

**High-Capacity Mechanism** — you can shred up to three folded sheets of paper at once.

**Cross-Cut Shredding** — the shredder cuts paper lengthwise and crosswise into pieces no larger than 1/8-inch by 1/4-inch, reducing the volume of shredded paper.

**High-Capacity Waste Receptacle** — holds up to 30 shredded pages. The waste receptacle is clear, letting you easily see when it is time to empty it.



**Powerful 1/8-Horsepower Motor** — smoothly shreds as much as 12 feet of paper per minute.

**Automatic Shred Cycle** — the shredder automatically turns on when you insert paper.

**Rev/Stop/Auto Switch** — lets you reverse the shredder if it becomes jammed, stop the shredder, and set the shredder to its automatic cycle.

This device has been tested and found to comply with all applicable ETL standards.

**WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

|  |   |  |
|--|---|--|
|   | <b>CAUTION</b><br>RISK OF ELECTRIC SHOCK.<br>DO NOT OPEN. |  |
| <b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL. |   |  |



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

## Important Safety Instructions

- This shredder is designed to shred up to 20-pound thickness bond paper only. Do not use the shredder to shred heavier paper.
- Be sure to remove objects such as staples, paper clips, rubber bands, vinyl, or plastic from paper before shredding it.

- 
- 
- Do not shred more than three folded sheets of paper at a time.
  - Do not shred wet paper or carbon paper.
  - To avoid serious injury, keep hair, neckties, jewelry, and fingers out of the shredder's paper slot.
  - The shredder automatically stops if it has been continuously running for a long time. This is not a malfunction.

If you were shredding when the shredder automatically stopped, let the shredder cool for about 20 minutes before using it again.

**Caution:** If the shredder stops and the waste receptacle is full, do not hold down **Rev/Stop/Auto**. Empty the waste receptacle first, then hold down **Rev/Stop/Auto** toward **Rev** to clear any unshredded paper.

- Always turn off then unplug the shredder before moving or cleaning it.
- Do not attempt to repair the shredder by yourself. Contact your local RadioShack store for help.
- Never use the shredder if it has been dropped or the housing has been damaged.

## CHOOSING A LOCATION

Choose a location for your shredder that is within 6 feet of a standard AC outlet and out of the way of normal activity.

### Warnings:

- Never place the shredder near or over heat or water sources.
- Keep the shredder out of the reach of children.

## INSTALLATION

1. Remove the upper part of the shredder from the waste receptacle.
2. Place the waste receptacle on a flat surface.
3. Place the shredder on the waste receptacle and make sure the shredder is securely seated.
4. Plug the shredder's power cord into a standard AC outlet.

## OPERATION

1. Fold the paper you want to shred lengthwise so it is slightly narrower than the paper slot.
2. Set **Rev/Stop/Auto** to **Auto**. The shredder automatically turns on and shreds when paper is fed into the paper slot, then stops when the paper is shredded.

---

---

When the waste receptacle is full or if you lift the shredder off of the waste receptacle, the shredder automatically turns off. To resume shredding, empty the shred from the waste receptacle then replace the shredder on the waste receptacle.

## CLEARING A PAPER JAM

The shredder might jam if:

- you try to shred more than three folded sheets of paper at a time
- the paper fed into the shredder is wider than the paper slot
- the paper fed into the shredder is not fed firmly into the paper slot

If the paper jams, empty the waste receptacle if it is full, then hold down **Rev/Stop/Auto** toward **Rev**. The shredder reverses, freeing the jam. Pull the jammed paper out of the slot, then set **Rev/Stop/Auto** to **Stop**.

## CARE

To enjoy your shredder for a long time:

- Keep the shredder dry. If it gets wet, wipe it dry immediately.
- Use and store the shredder only in normal temperature environments.
- Handle the shredder gently and carefully. Do not drop it.
- Keep the shredder away from dust and dirt.
- Wipe the shredder with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the shredder's internal components can cause a malfunction and might invalidate its warranty. If your shredder is not performing as it should, take it to your local RadioShack store for assistance.

---

---

# SPECIFICATIONS

|                                 |   |
|---------------------------------|---|
| Sheet Capacity .....            | 3 Folded Sheets (maximum 20 lb bond)  |
| Paper Slot Width .....          | 4 <sup>1</sup> / <sub>2</sub> Inches (11.43 cm)   |
| Power Source .....              | 120V AC, 60 Hz  |
| Loading Power Consumption ..... | 110 Watts   |
| Reverse Consumption .....       | 35 Watts  |
| Shred Width (HW) .....          | 1 <sup>1</sup> / <sub>8</sub> × 1 <sup>1</sup> / <sub>4</sub> Inches (3 × 31.75 mm)   |
| Dimensions (HWD) .....          | 9 <sup>1</sup> / <sub>16</sub> × 8 <sup>5</sup> / <sub>64</sub> × 5 <sup>23</sup> / <sub>32</sub> Inches (230 × 205 × 145 mm) |
| Weight .....                    | 6 lb, 30 oz (2.8 kg)  |

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>